

FINEVu

GX400

FineVu GX400 User Manual

Please be sure to read the 'Safety and Precautions' before using the product, and use it correctly to prevent accidents or dangers.
(Menu screens and other illustrations in the user manual may differ from the actual product.)



Thank you for purchasing the FineVu dashcam.

We always strive to get closer to our customers.

This user manual contains information on how to use and operate the GX400 dashcam.

Please be sure to fully read and understand this manual before using the GX400 dashcam.

Please also note that this manual may include technical or editorial errors or omissions.

In addition, the performance specifications of the GX400 dashcam are subject to change without notice.

Warranty and Support

- The website address is <http://www.finevu.com/en>.
- You can download the latest firmware and the user manual through the website.
- No warranties, including implied warranties, are provided for any kind of sales or conformance, other than in the form permitted by FINEDIGITAL Inc.

Copyright and Trademarks

- This manual is protected by copyright law, and all rights are legally protected.
- Except as permitted by copyright law, no part of this manual may be reproduced, copied, modified or translated without the prior written consent of FINEDIGITAL Inc.

Certificate

This device has passed KS C9990 (anti-disruption test on actuators of automobiles and internal combustion engines).

Sellers or users should note that this device is registered for electromagnetic compatibility, which aims to protect functions related to car operations and drivers, passengers and other car users from electromagnetic waves.

- Device name (model): Drive recorder (GX400)
- KC certification number: R-R-FDK-FineR052
- Wi-Fi dongle KC: MSIP-CRI-JVS-CF-WU715N
- Trade name of certified person: FINEDIGITAL Inc.
- Manufacturer/Country of manufacture: FINEDIGITAL Inc./South Korea
- A/S contact: support@finedigital.com

Safety and Precautions

Symbols	04
Warning	05
Caution	06
Precautions for Use	07

Names of Components and Parts

Components	08
Optional Accessories	09
Names of Parts - Front Camera	10
Names of Parts - Rear Camera	11

How to Install

Inserting the Micro SD Card	12
Removing the Micro SD Card	12
Attaching the Cradle / Detaching the Cradle	13
Installing the Front Camera	14
Installing the Rear Camera	16

Key Product Features

Key Product Features	18
----------------------	----

How to Use

Security LED	19
REC / MIC button	19
Wi-Fi button	20
Folder Configuration	21
Recorded Video File Name	21

How to Use FineVu Wi-Fi APP

Installation & Connection	22
Description of Functions	25
Real-time Video (Live View)	26
Real-Time Video (Live View) Screen	27
Setting Mounting Angle	28
Video Playback	29
Video Playback Screen	30
Downloaded Video	31
Settings	32
Event Summary (Connected)	43
Event Summary (Disconnected)	45
Change the dashcam Language	47
Firmware update from app	48

How to use FineVu Player

Installing & Using the FineVu Player	49
Recommended specifications for PC	49
Checking Recorded Video on PC	50
Updating Firmware on PC	50

Product Specifications and Size

Product Specifications and Size	51
---------------------------------	----

Symbols



Warning

Provides important information related to the safety of the user. Failure to comply may lead to death or serious injury.



Caution

Information provided for the safety of the user and the proper use of the product. Failure to comply may result in personal injury or property damage.



Note

Information provided for user convenience.

Safety and Precautions



Warning

Failure to comply with the following instructions may result in death or serious injury of the user.

Power

- Do not use damaged or altered power cables, and use only genuine products provided by FINEDIGITAL Inc. Use of an incorrect or damaged power cable may cause a safety accident such as fire, damage to the vehicle, or injury.
- Do not use at a voltage other than the rated voltage. Use at an incorrect voltage may cause a safety accident such as fire, damage to the vehicle, or injury.
- Do not arbitrarily connect the power cable to another device, as this may cause a fire or malfunction.

Installation

- Do not install in an environment with high humidity or highly combustible liquids or gases. Failure to observe this requirement may cause a fire.
- Do not leave in an environment with high temperature, such as in an enclosed car or in a place where it will be exposed to direct sunlight, for an extended period of time. Failure to observe this requirement may cause a fire or malfunction.
- Do not install in a place where it will interfere with the driver's view, as this may cause a vehicle accident.
- Please plug in the power, GPS, and video cables correctly. Failure to observe this requirement may cause a fire or malfunction.

Use

- Do not allow metal or flammable materials to enter the memory card slot or the place on the product where the power cord is inserted. Failure to observe this requirement may cause electric shock or fire.
- Do not operate the product with wet hands. This may cause electric shock.
- Do not leave the product or its accessories around infants or children, as the small accessories are a choking hazard.
- Do not cover the product with a cloth or blanket while it is operating. It may overheat and cause a fire or malfunction.
- Please do not operate the dashcam while driving, as this may cause a vehicle accident.



Caution

Failure to comply with the following instructions may cause personal injury or property damage to the user.

Installation

- Do not arbitrarily install a constant power supply, as this may cause a product or vehicle malfunction. Be sure to get help from a professional installation engineer.

Use

- Do not apply excessive force to the lens, lens cover, or the exterior of the camera. Failure to observe this requirement may cause a malfunction.
- Do not use the product with an awl or sharp object. Failure to observe this requirement may cause a malfunction.
- Using the dashcam for an extended period of time may heat up the surface. Please be careful.
- Do not arbitrarily disassemble or alter the product. This may cause damage or data loss, so please request the A/S center for inspection and repair.
- Be careful not to cover the lens when filming.
- Changing the position of the camera while it is installed may result in poor contact.

Management

- Do not leave the product or its accessories around your pet. Foreign substances from pets may enter the product and cause malfunction.
- If the product is not in use for an extended period of time, do not leave the product unattended with the power cable connected. Failure to observe this requirement may cause a fire or malfunction.
- Do not move an operating product with the car power connector or cables plugged in. Failure to observe this requirement may cause fire or electric shock.



- To improve the performance of the product, the product specifications and contents of the user manual are subject to change without notice.
- This manual shall not be copied, in whole or in part, without permission.
- This company is not responsible for any data loss or product loss caused by a product malfunction in the event of an accident or in any other cases.

Precautions for Use

A dashcam is an auxiliary device that takes images and records them in a storage device in specific situations when a vehicle is driving or parking. Please use it as a supplementary device to determine the circumstances of an accident. FINEDIGITAL Inc. is not liable for any damages arising from an accident, and will not provide support for any consequences resulting from an accident. Please read and understand the following before using the product.

If the recording file cannot be found:

- **Recorded videos are deleted over time**
Because it uses a storage device (Micro SD card) with a limited storage capacity, if the storage device exceeds the capacity during recording, the oldest videos will be deleted sequentially.
- **Sensitivity setting in the impact detection sensor**
Depending on the impact detection sensitivity setting in the product (normal, sensitive, insensitive, etc.), if the impact intensity is less than the set value, the impact image may not be stored in the event folder or the parking folder.
- **Voltage setting for vehicle battery**
When using the parking monitoring function, the dashcam will continue to monitor the voltage of the vehicle's battery to protect the vehicle battery, and if the voltage of the vehicle battery drops to the voltage set in the dashcam configuration, the power of the dashcam will be automatically cut off and the dashcam will stop operating.

How to deal with an accident


- In the event of an accident, turn off the dashcam power and remove the Micro SD card. If you continue to use it without removing the Micro SD card, the recorded video may be deleted over time. If it is difficult to remove the Micro SD card, you may turn off the power from the dashcam.
- Please back up the accident video using your PC.
- Do not connect the removed Micro SD card to your smartphone. When connecting a Micro SD card to a smartphone, the recorded video may be lost due to the file structure change by the smartphone.

How to clean and store


- If there is a foreign substance on the lens, wipe it clean with a soft cloth (cotton).
- To record high-quality images, please avoid touching the lens with your hands or contacting other objects.
- If there is a foreign substance in the terminal of the main body, do not take it out or remove it using a tool; please contact the A/S center for repair.
- If the product is not in use, please keep it indoors, separately from the vehicle.
- Be sure to disconnect the power before storing.
 - Avoid humid environments and keep the product sealed as much as possible.
 - Be sure to remove the memory card and keep it in order to maintain the memory card's performance.

Product Composition


Components

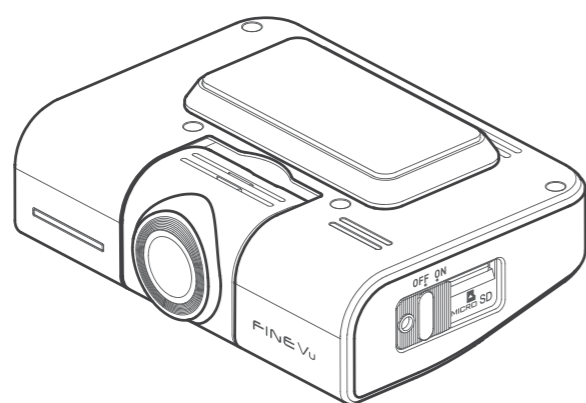


Front camera

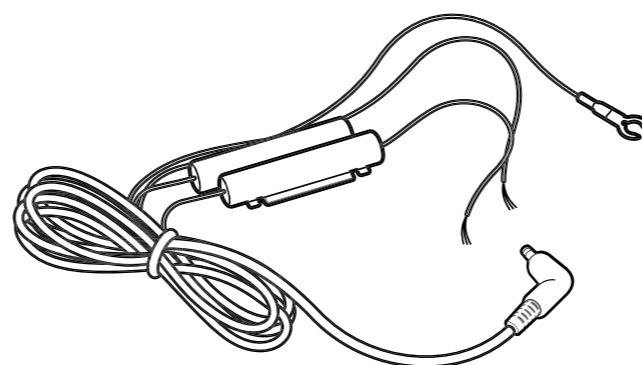


Power cable

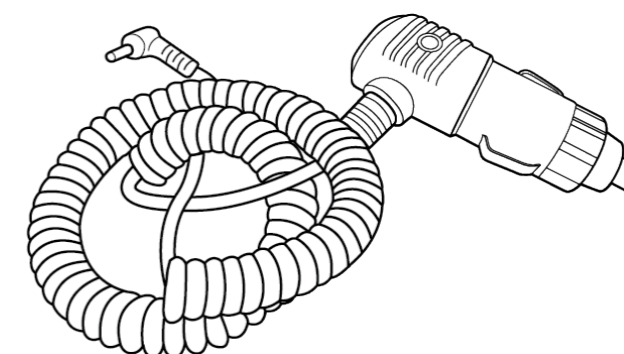

Cigarette lighter power cable

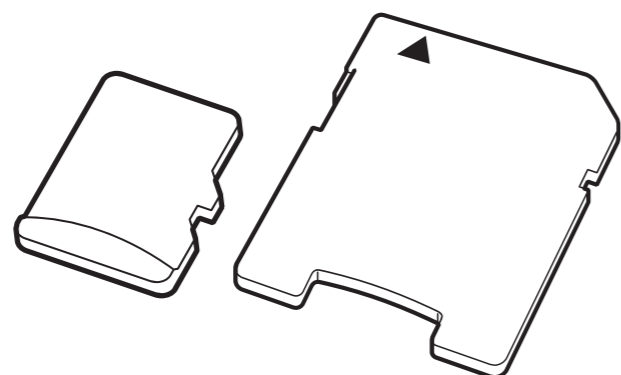

Micro SD card & Adapter

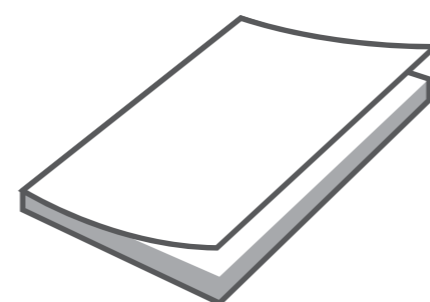


User manual




- The components of this product may be changed without prior notice to improve product performance.
- The warranty period for the Micro SD card is 6 months.


Optional accessories

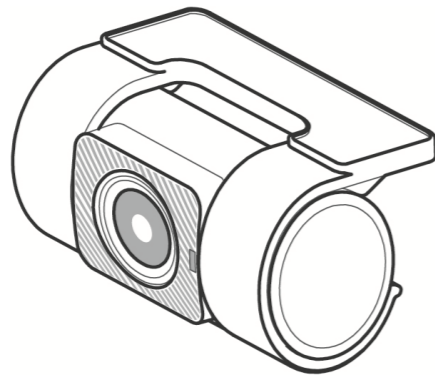


Rear camera

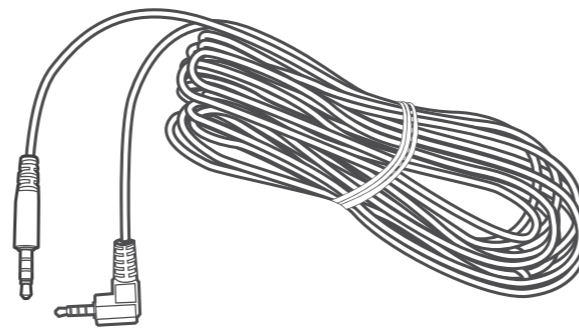

Rear camera cable

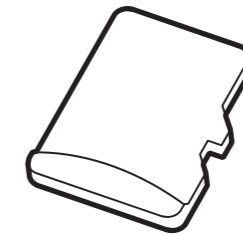

High capacity
Micro SD card

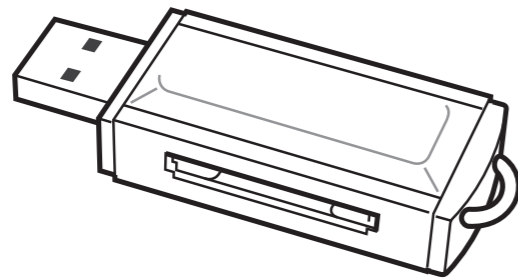


USB SD card reader




- All optional accessories are available for purchase on the FineVu website.
- Cigarette lighter power cable is included in 1-channel bundle.
- Rear camera and rear cable are included in 2-channel bundle.

Name of Parts

Front camera

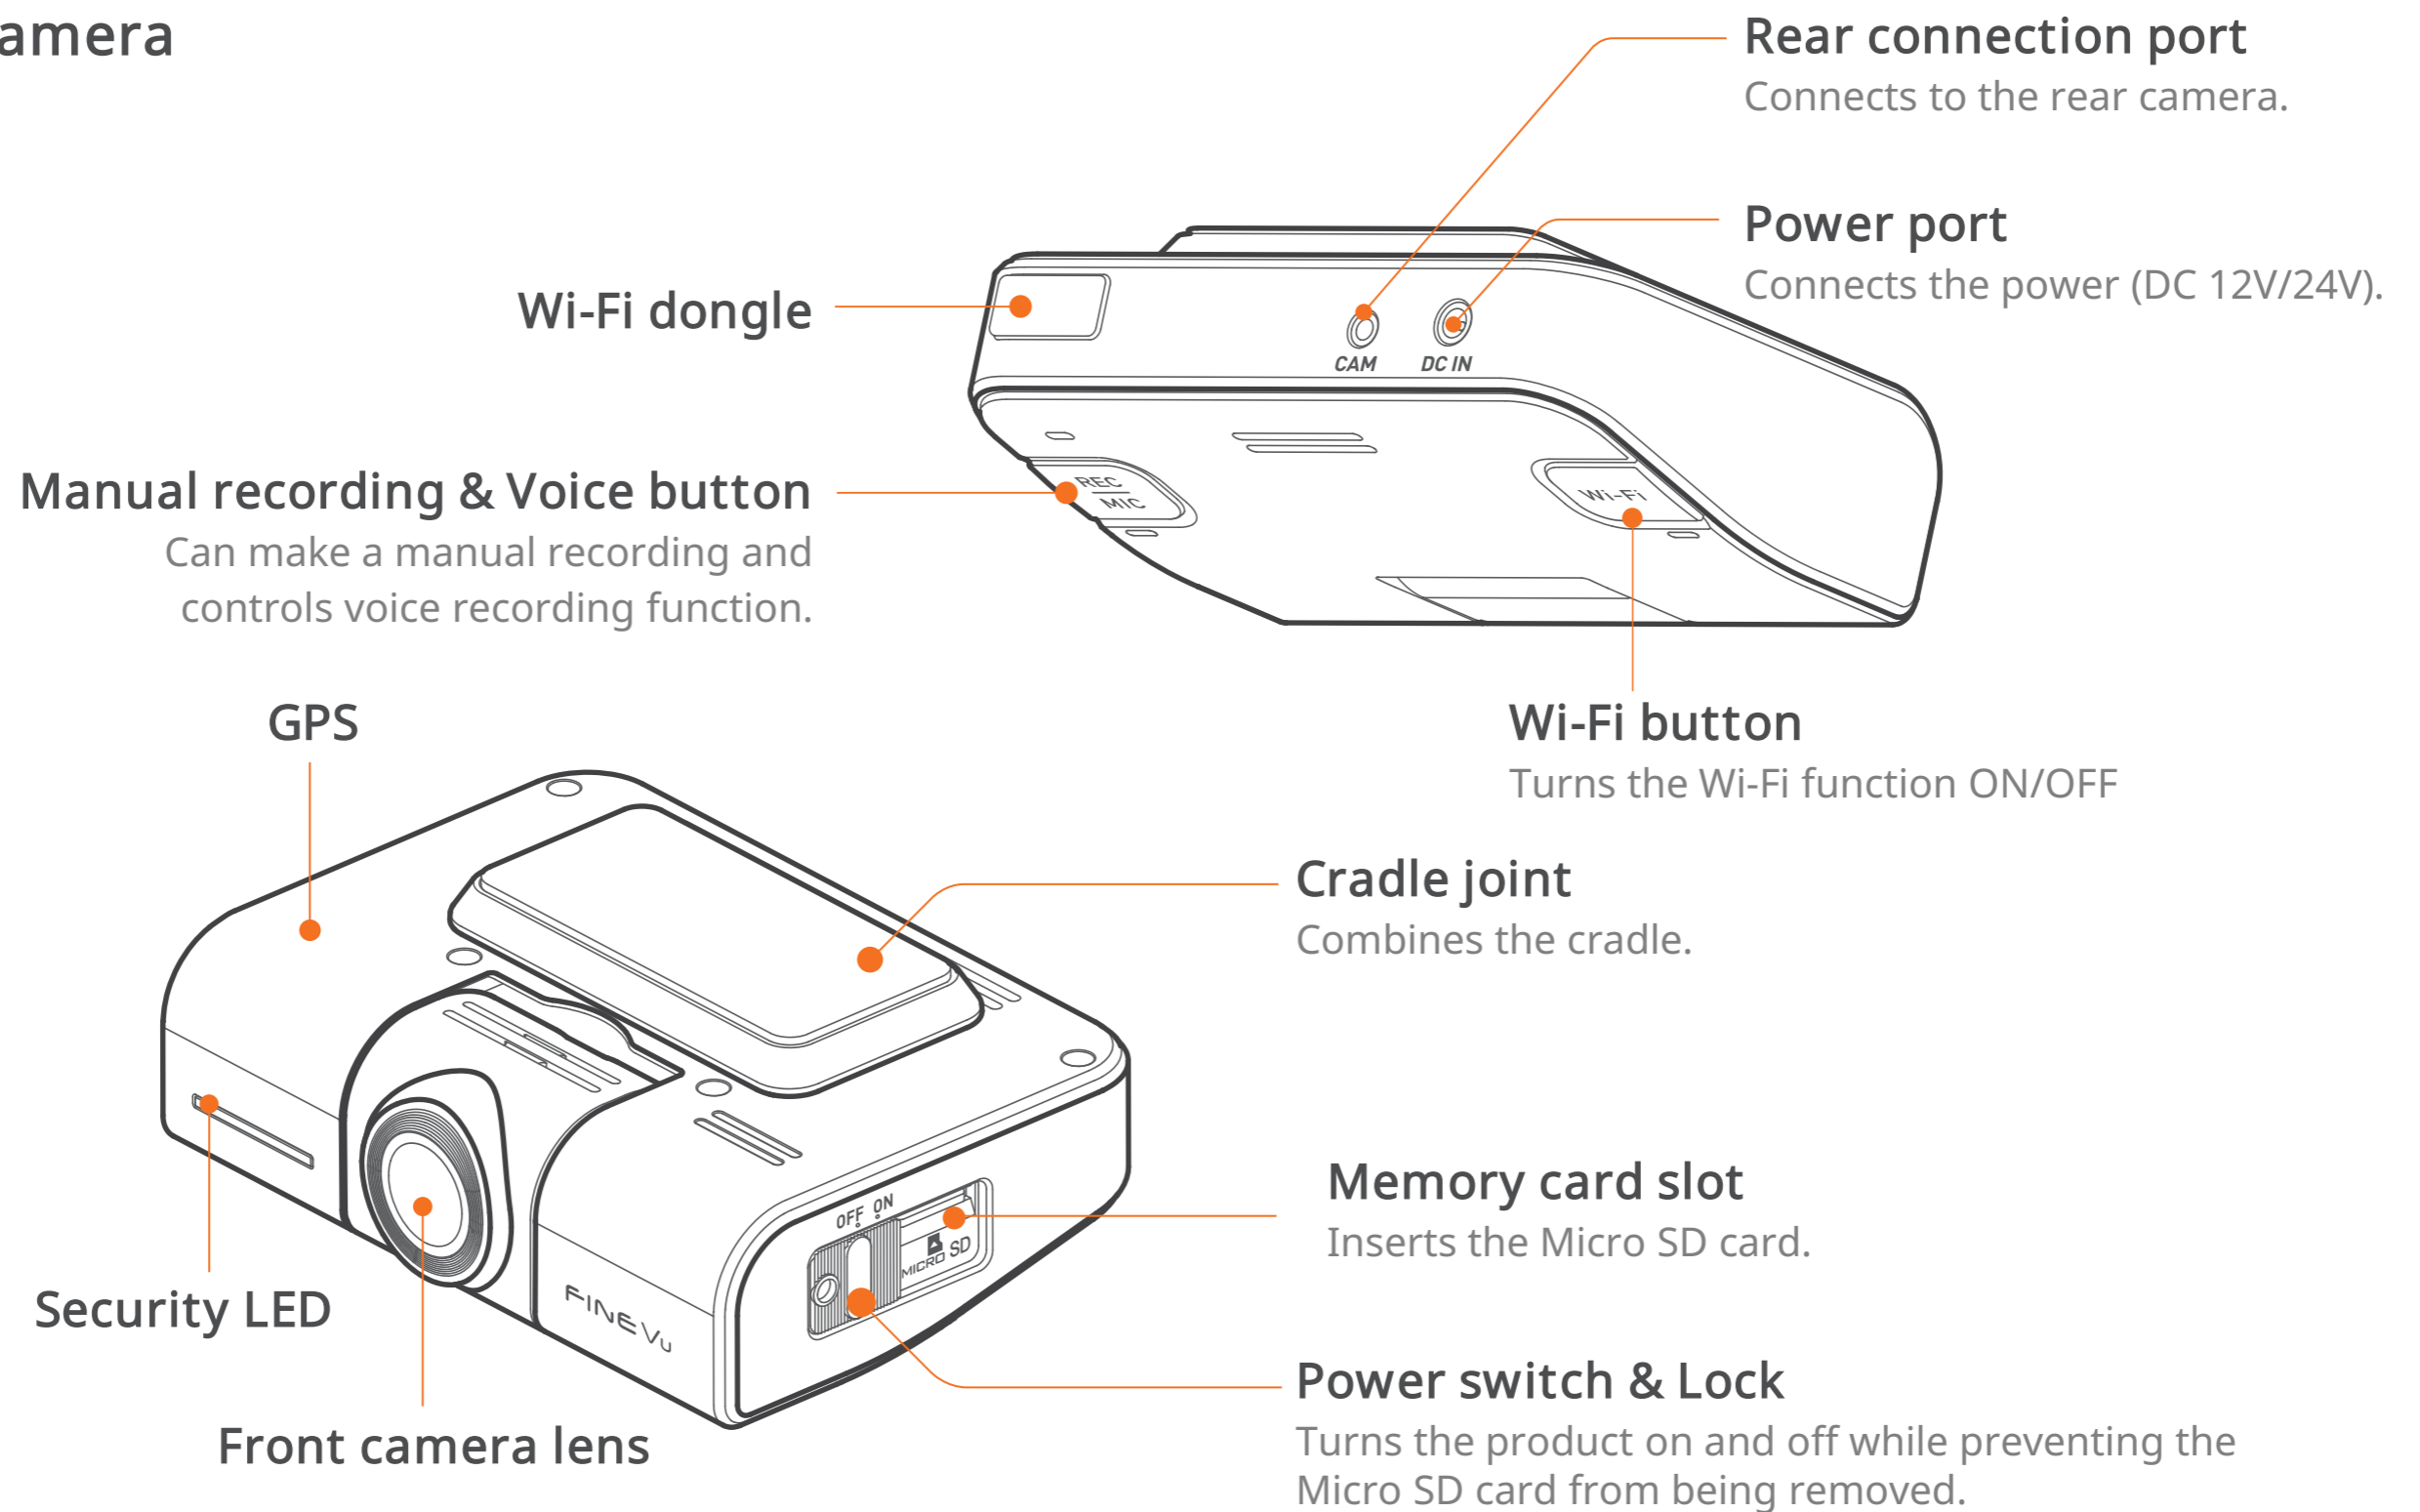

Rear camera

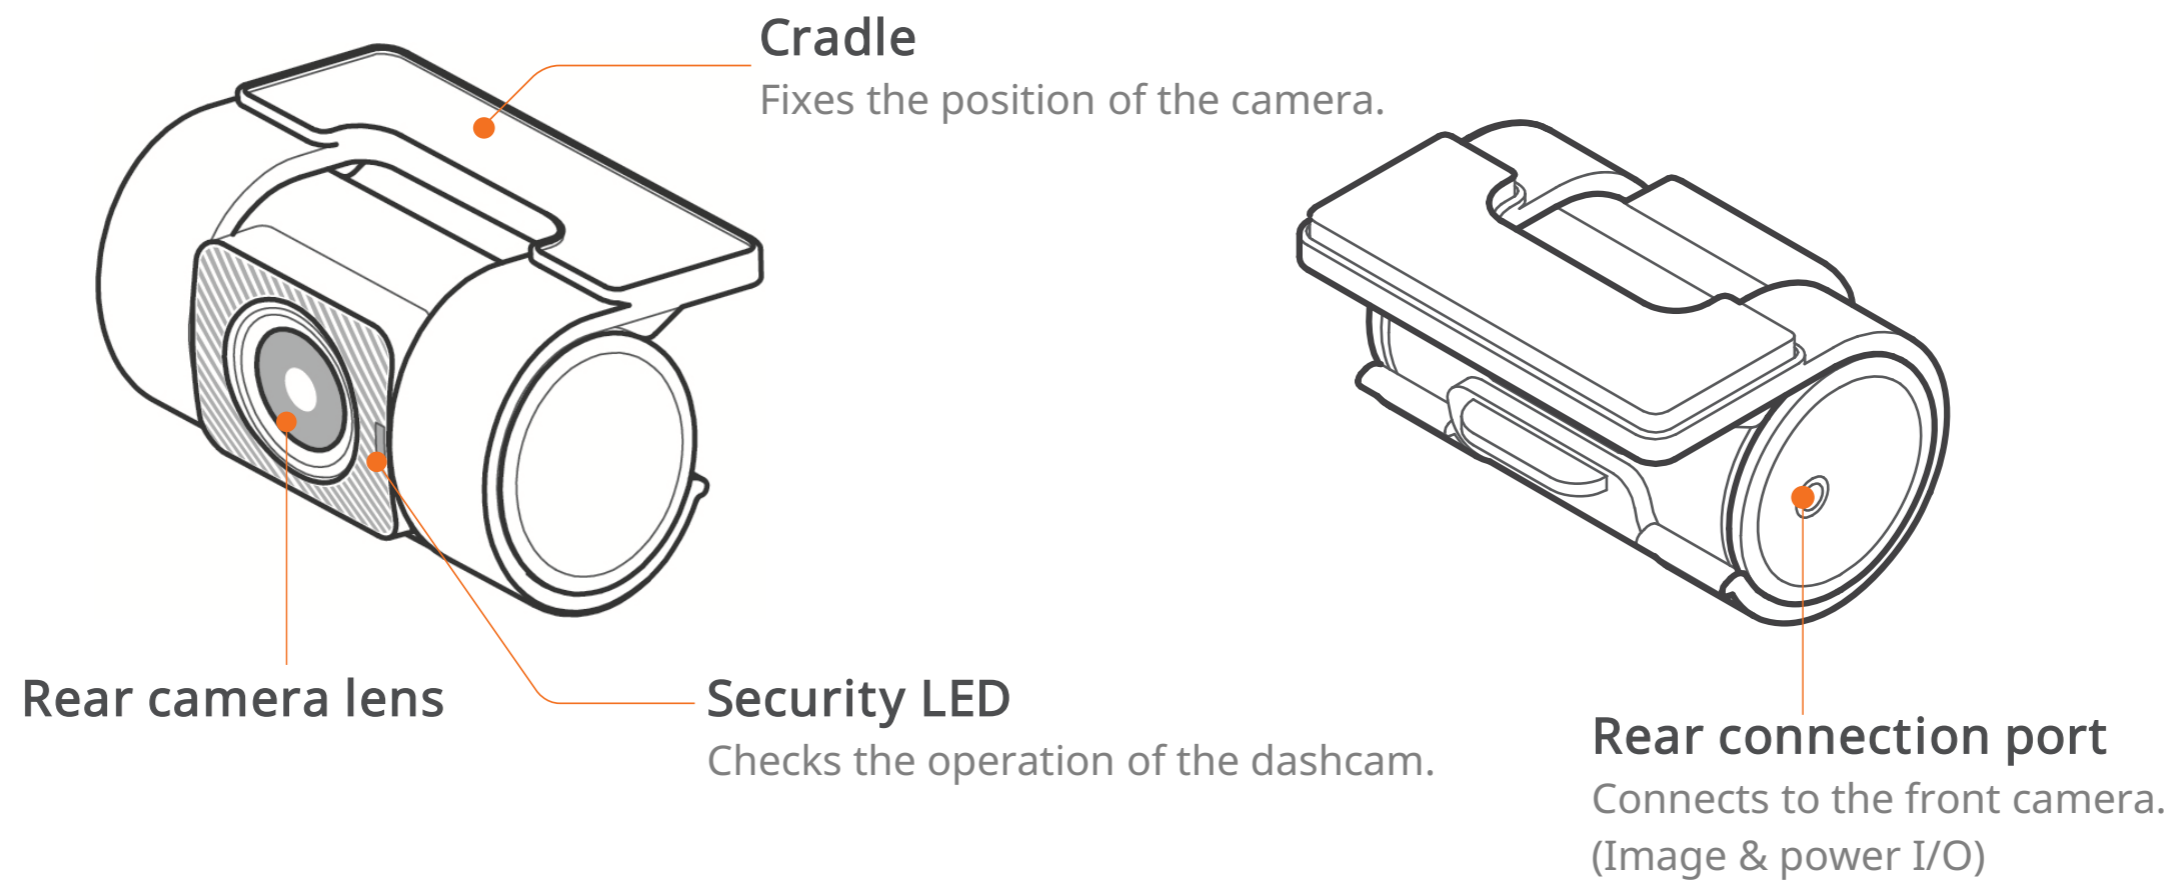

- Connecting a cable other than the rear-only cable to the rear connection port may cause damage.
- Security lighting is set to OFF by default. User settings must be adjusted to use the security lighting.


How to Install

Inserting the Micro SD card

1. Slide the power switch & lock to OFF to unlock it.
2. Check the insertion direction of the Micro SD card.
3. Insert the Micro SD card until it makes a 'click' sound.
4. Slide the power switch & lock to ON to lock it.

Removing the Micro SD card

1. Slide the power switch & lock to OFF to unlock it.
2. Press the inserted Micro SD card until it clicks.
3. When the Micro SD card pops out, take it out by hand.

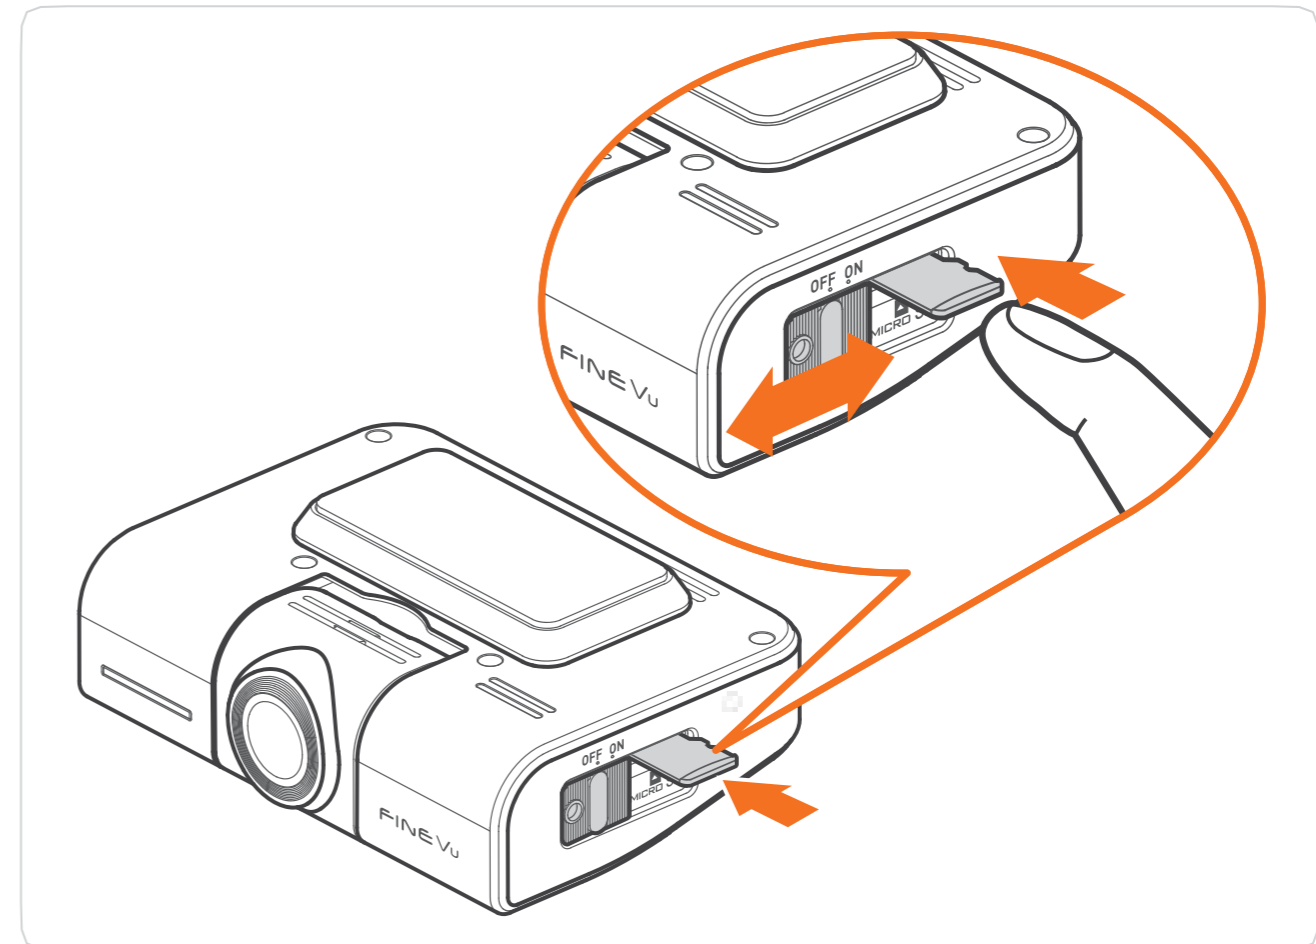


- The power switch & lock is a device that turns the power ON/OFF and prevents the Micro SD card from being pulled out at the same time.




- Please make sure to use a genuine FineVu memory card. If a non-genuine memory card is used, compatibility and normal operation cannot be guaranteed.
- Carefully observe the direction in which the Micro SD card is inserted. If the Micro SD card is inserted incorrectly, the memory card slot of the product or the Micro SD card may be damaged.
- Please regularly back up important videos to a separate storage device.

Attaching the cradle

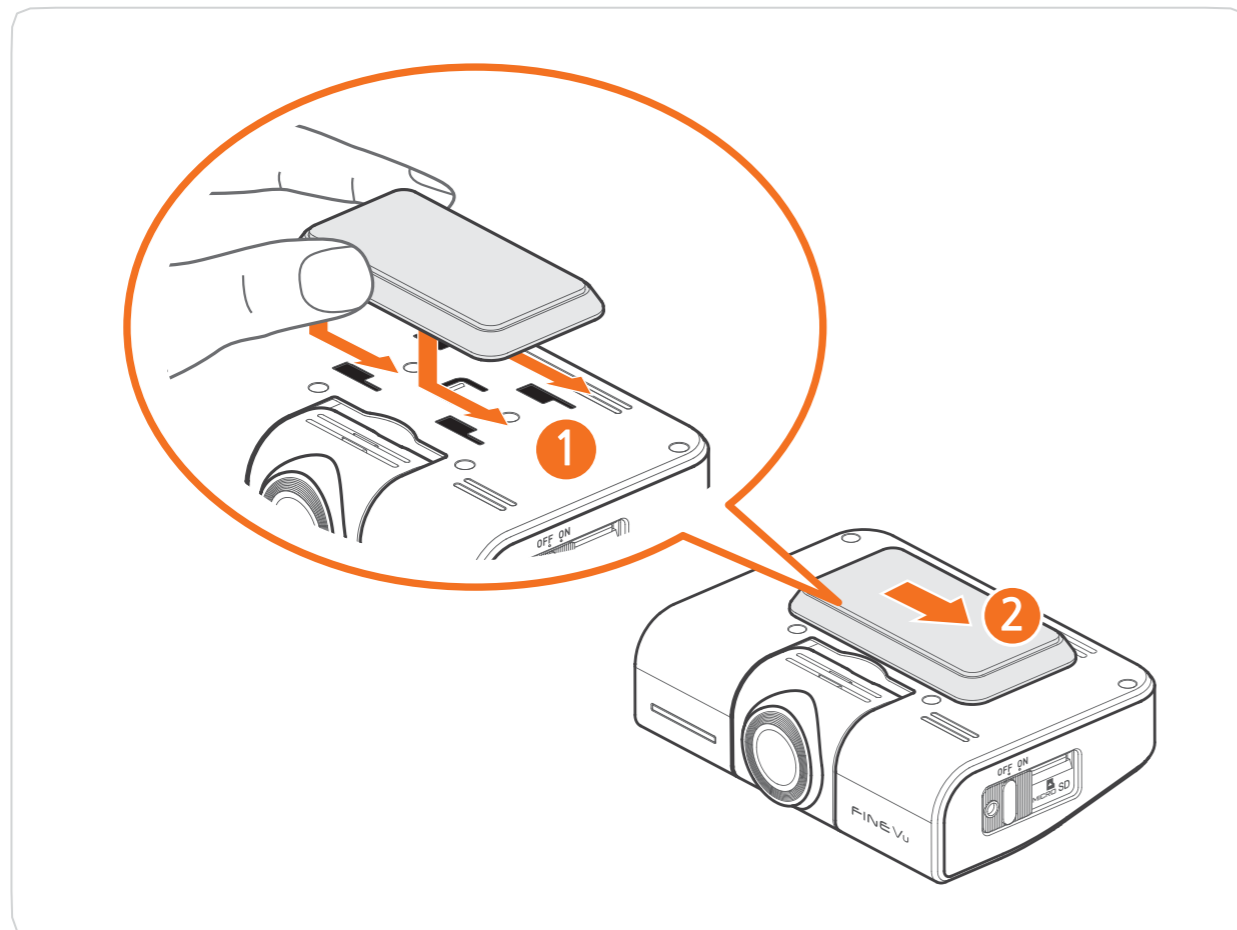

1. Align the cradle part with the arrow ① and insert it into the cradle groove on the main body of the product.
2. While inserting it into the groove, push the cradle in the direction of arrow ② until it makes a 'click' sounds to fix it on the product.

Detaching the cradle

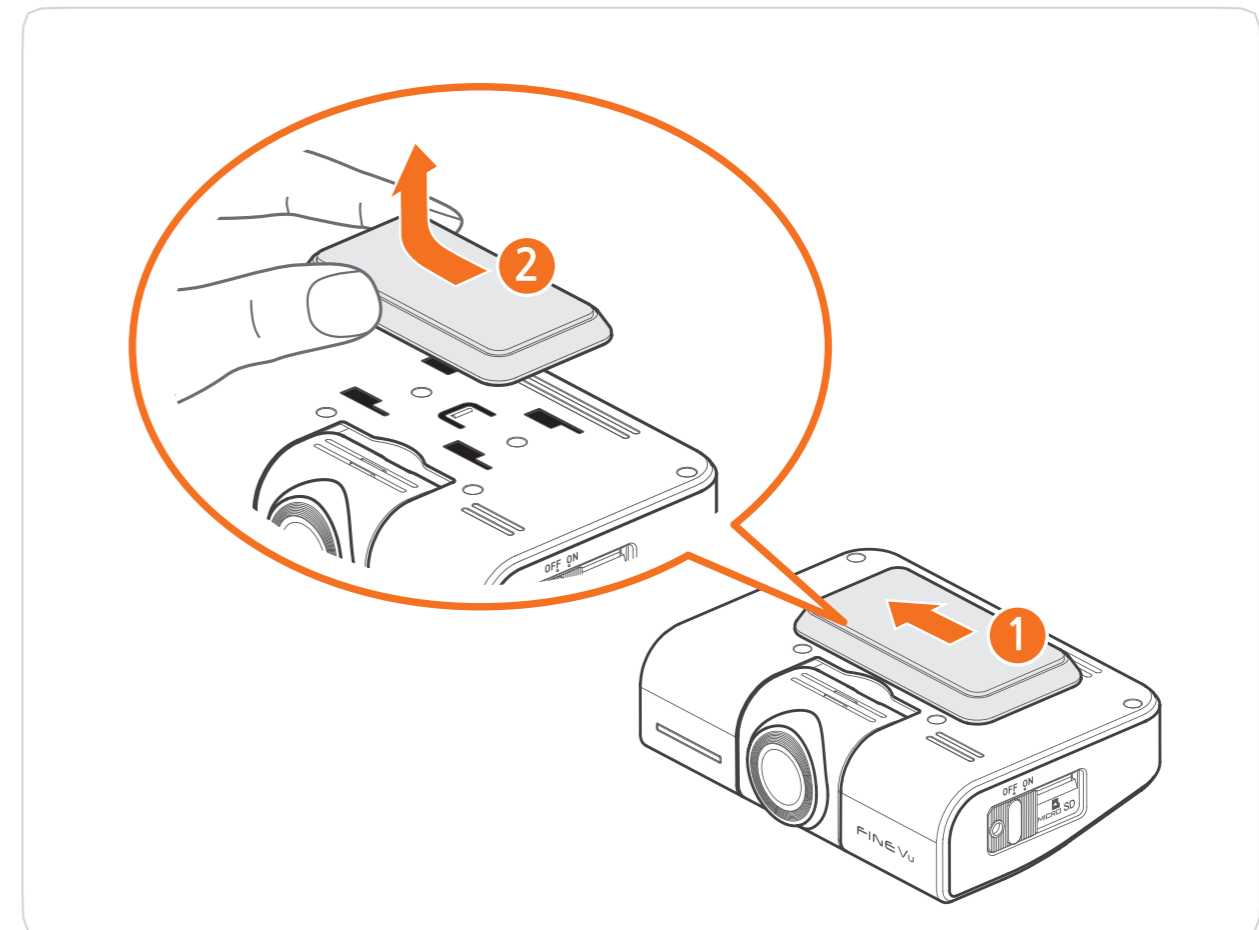


1. Push the cradle in the direction of the arrow ① until it makes a 'click' sound.
2. After pushing it, separate the cradle in the direction of the arrow ②.



- When attaching the cradle, please align the left and right directions of the cradle well. If you try to attach it in the wrong direction, the product may be damaged.


Installing the front camera

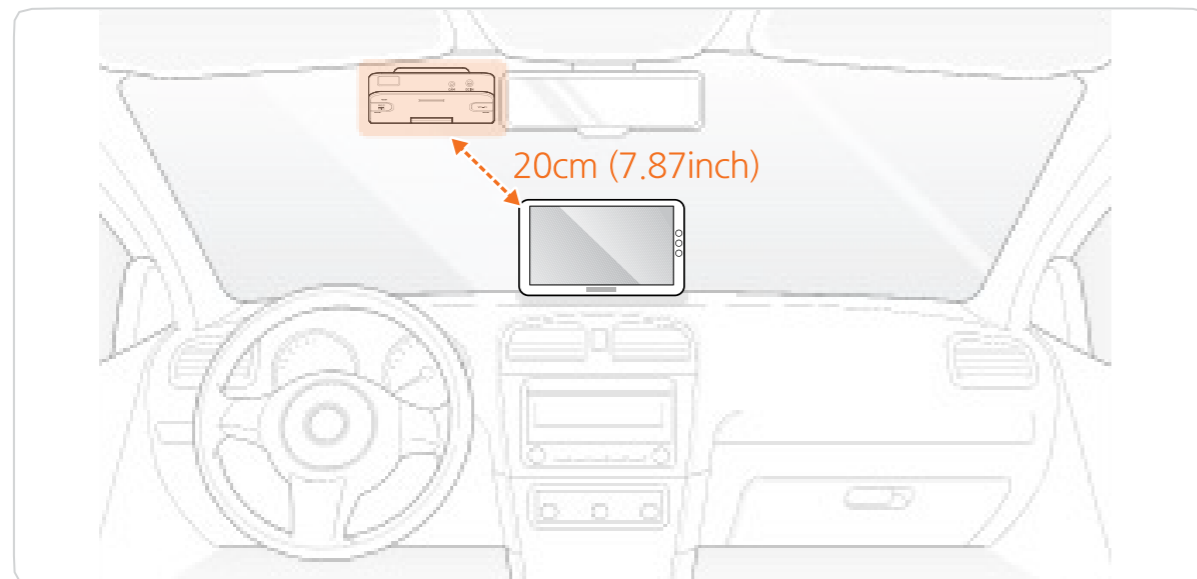


1. Decide where you want to install the product.




- Please set the installation location of the product at least 20cm (7.87 inch) away from other electronic devices such as the navigation system.
- Install in a location where it will not interfere with the driver's view.

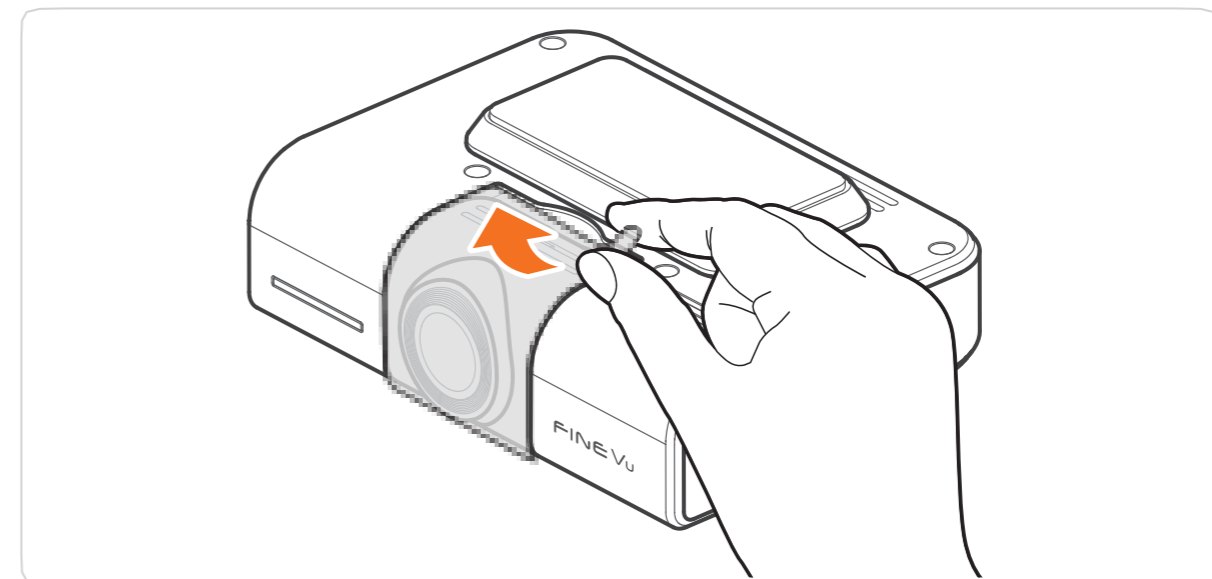


2. Remove the protective film from the front camera.

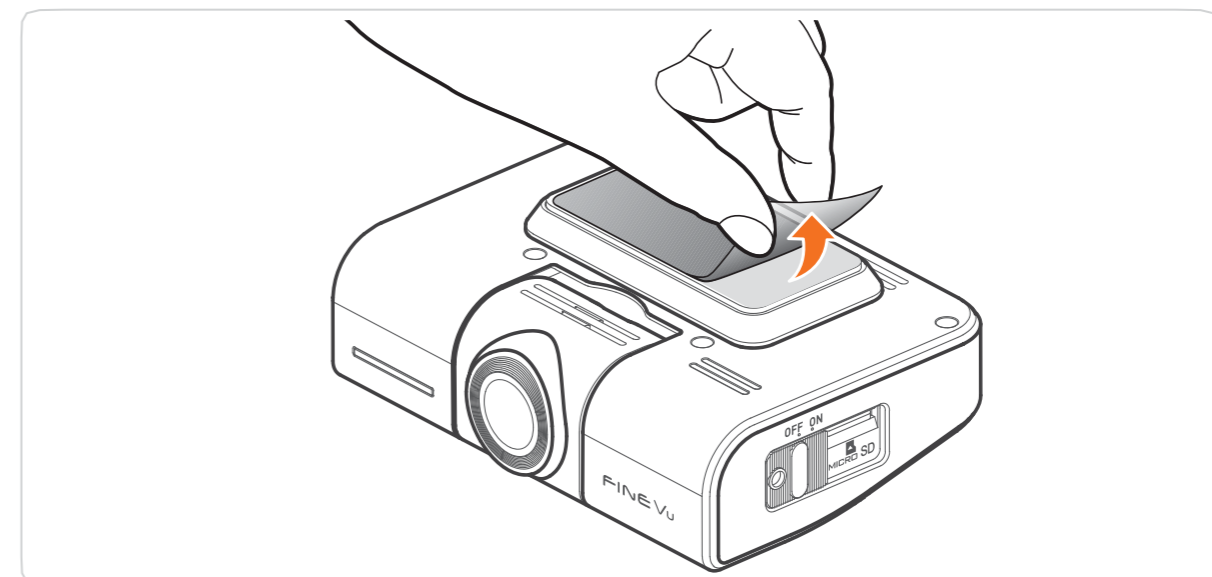

3. Peel off the protective film from the tape for attaching the cradle.

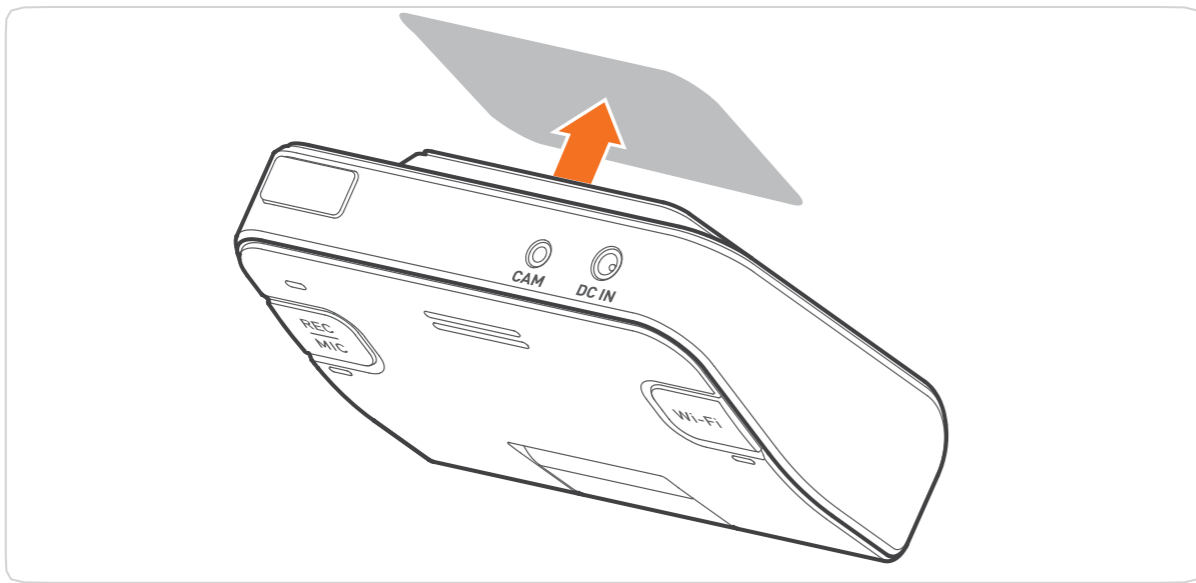


4. Attach the cradle from which the protective film has been removed to the location where you want to install the product.

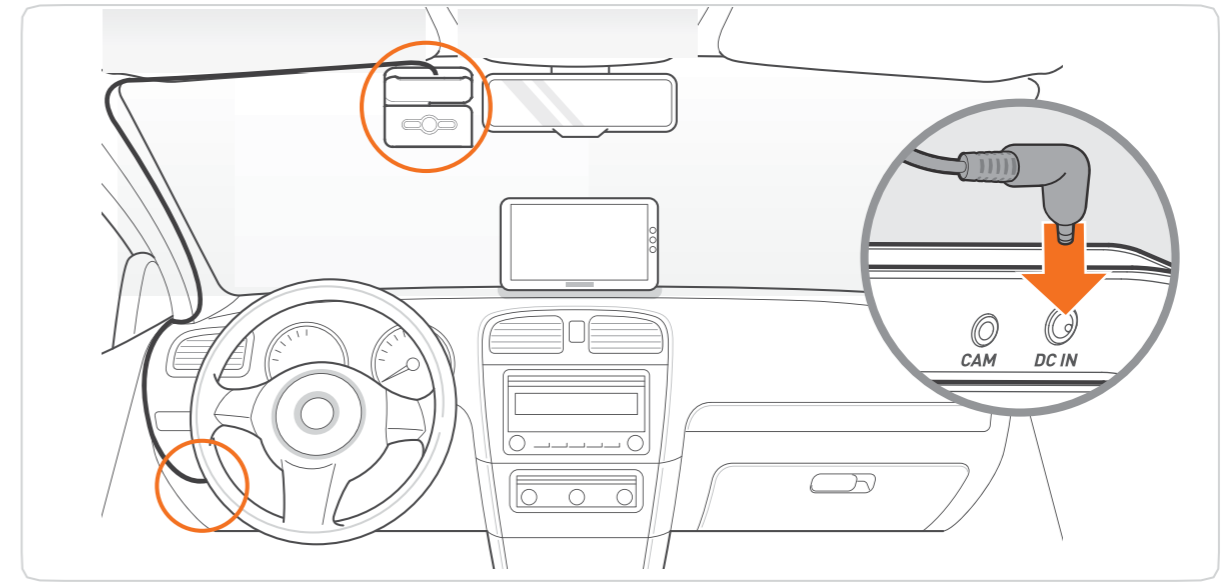

5. Connect to the constant power cable connected to the fuse box.


Installing the rear camera

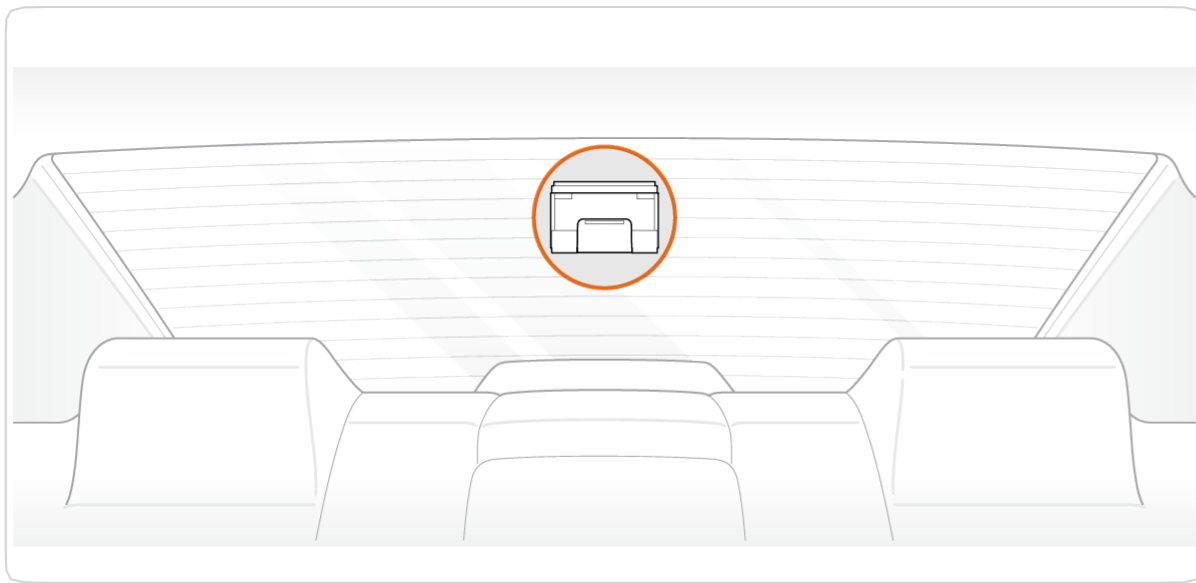


1. Decide where you want to install the product.



· Install in a location where it will not interfere with the driver's view.

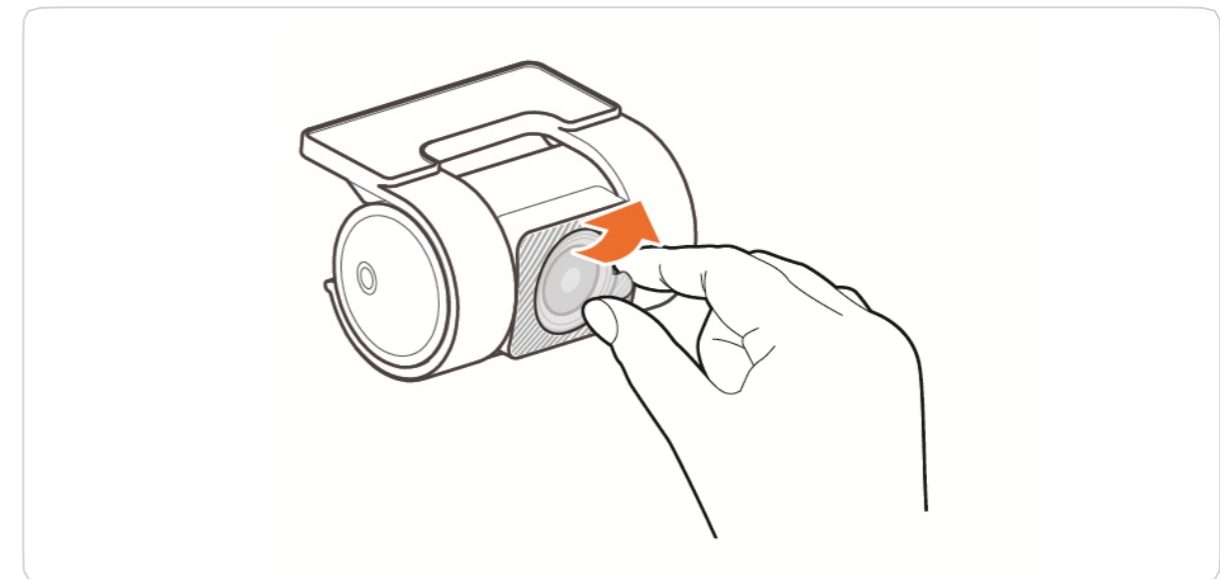


2. Remove the protective film from the rear camera.

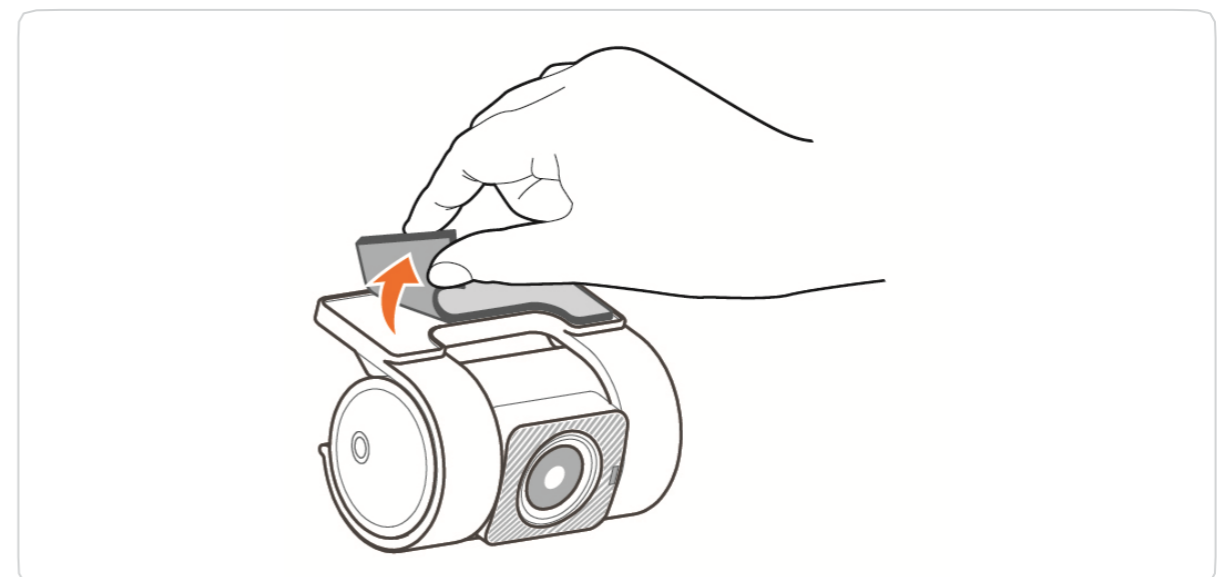


3. Peel off the protective film from the tape to attach the cradle.




4. Attach the rear camera to the location where you want to install it.

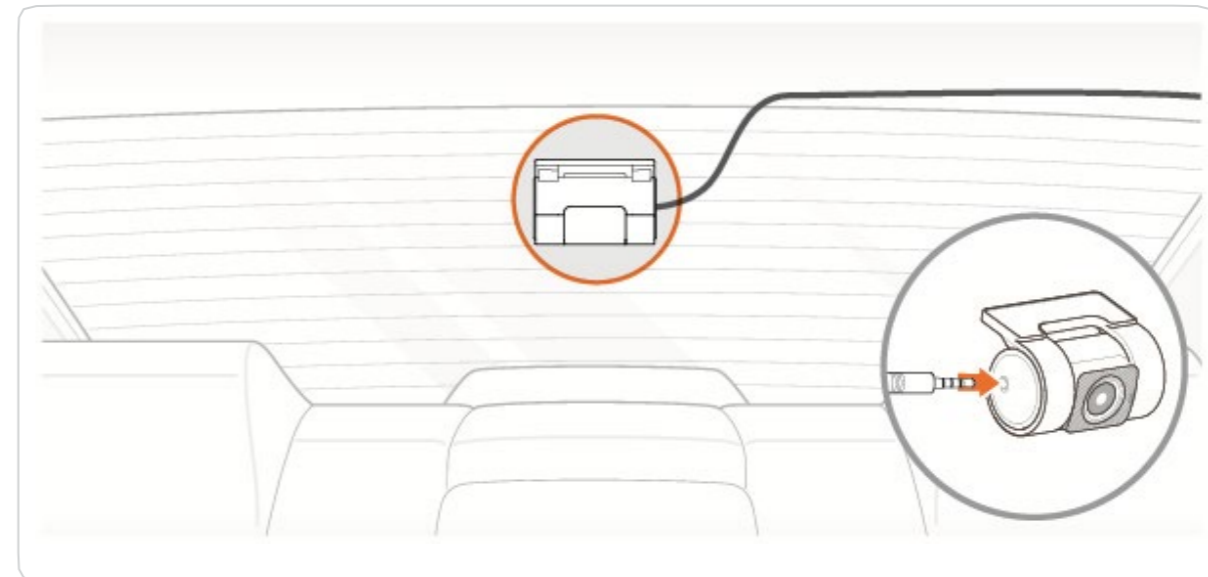

5. Connect the rear camera with the rear-only cable.

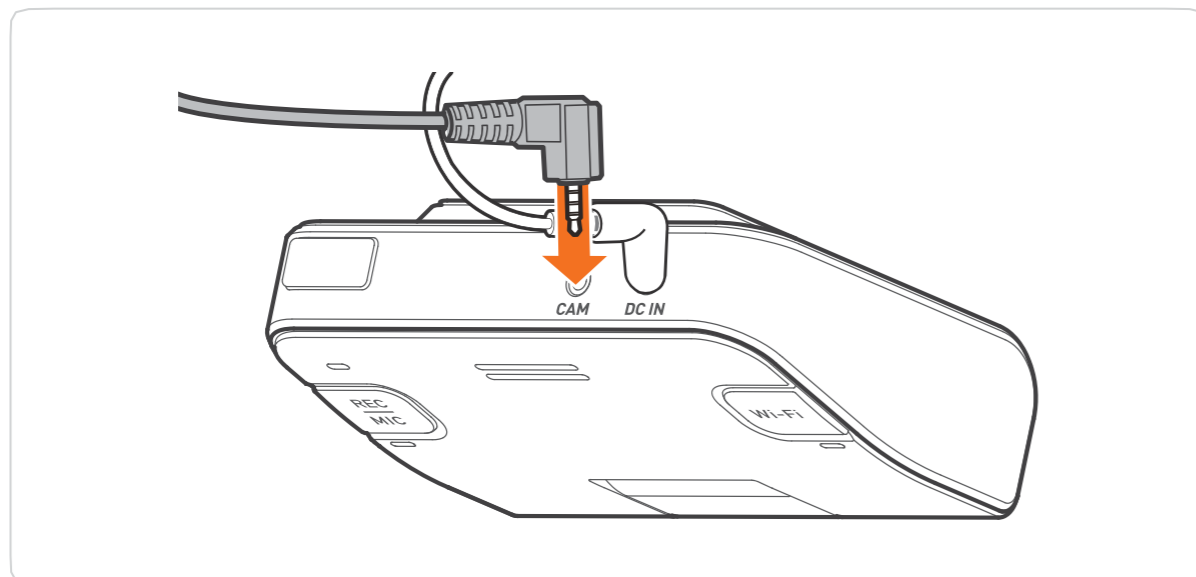

6. Connect the rear-only cable to the front camera of the dashcam.

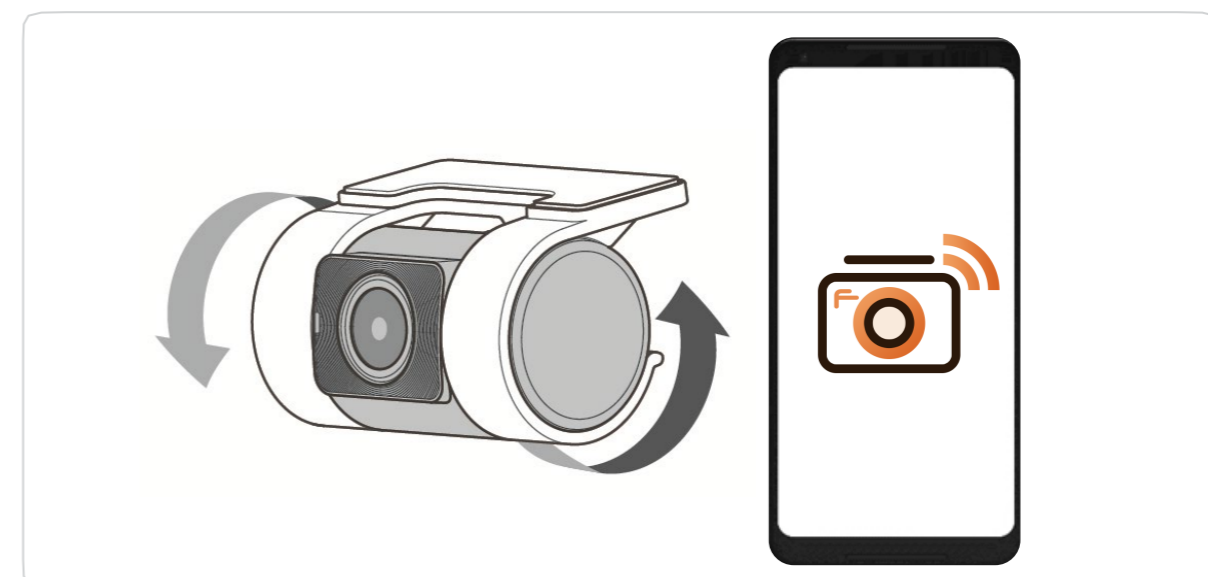

7. When installation is complete, adjust the angle of the recording video by connecting the 'FineVu Wi-Fi' app.













- Please use only genuine accessories provided by this company. Using third-party products may cause damage to the product, fire, or electric shock due to voltage differences.
- You have to use constant power when using parking recording. As constant power has to be connected separately except with some vehicle models, get the help of an expert in the installation branch. (You are recommended to install a constant power supply to prevent the vehicle's battery from being discharged.)
- When connecting constant power cables, pay attention to the connected position of each wiring.
- Do not arbitrarily cut or alter the enclosed genuine constant cables.










Key Product Features

STARVIS	<p>Equipped with SONY Exmor R STARVIS™ image sensors Equipped with SONY Exmor R STARVIS image sensors, which provide brighter and cleaner image quality than regular CMOS sensors even at night.</p>
Quad HD 30fps	<p>High-resolution image recording With a high-performance image sensor and high-quality lens, it records front in Quad HD (2560x1440p@30fps) / rear in Full HD (1920x1080p@30fps).</p>
FineVu Wi-Fi App	<p>FineVu Wi-Fi dedicated app You can easily set up the dashcam and check the video using the FineVu Wi-Fi app.</p>
HDR	<p>HDR support FineVu's unique tuning technology enables clear and vivid recording in diverse illuminance conditions, including backlighting, night driving, entering and exiting tunnels and parking lots.</p>
Auto Night Vision	<p>Equipped with Auto Night Vision Offers improved identification of objects with bright images, and minimizes deterioration in image quality when shooting in low light or at night.</p>
ADAS PLUS & Speed Camera Alert	<p>ADAS PLUS & Speed Camera Alert Supports ADAS PLUS (FVMA, LDWS) / Speed Camera Alert function. This works only when a GPS signal is available.</p>
Smart Time Lapse	<p>Driving and Parking Smart Time Lapse Recording In driving and parking mode, you can quickly check the recorded video with Smart Time Lapse settings.</p>
Power Saving Mode	<p>Equipped with Power Saving Mode With FineVu's unique low-power technology, it records safely even while parked for an extended period.</p>







How to Use

LED Color and Operation Description


Image	LED color	LED status	Mode	Operation description
 Security LED	White	 OFF	-	<ul style="list-style-type: none"> Power OFF status
		 Dimming	Driving & Parking mode	<ul style="list-style-type: none"> Shooting status in Driving mode & Parking mode, where the LED turns on and off slowly over about 4 seconds.
		 Blink	Driving & Parking Event	<ul style="list-style-type: none"> If an event occurs during Driving mode, the LED will blink while switching to event recording. If an event occurs during Parking mode, the LED will blink while switching to event recording.
 LED A	Green	 Blink ON	MIC ON	<ul style="list-style-type: none"> Press and hold button A for 1.5 seconds. It switches from voice recording OFF to voice recording ON.
		 ON	Driving & GPS receiving	<ul style="list-style-type: none"> During Driving mode, the green LED turns ON. When receiving GPS, the green LED turns ON. When GPS is not received, the blue LED turns on.
	Red	 Blink	Driving Event Manual Recording Parking monitoring Parking Event	<ul style="list-style-type: none"> In the event of an impact during Driving mode, the red LED will blink. Tap button A For Manual Recording. During Manual Recording, the red LED will blink. If there is an impact or if a motion is detected while in Parking mode, the red LED will blink.
		 Blink OFF	MIC OFF	<ul style="list-style-type: none"> Press and hold button A for 1.5 seconds. It switches from voice recording ON to voice recording OFF.
Yellow	 Blink OFF	MIC OFF	<ul style="list-style-type: none"> Press and hold button A for 1.5 seconds. It switches from voice recording ON to voice recording OFF. 	

Kō cī g	NGF "eqrqt	NGF "uvc wwu	O qf g	Qr gtc v k q p " f guet k v k q p
  NGF "D	Blue	 OFF	Wi-Fi OFF	<ul style="list-style-type: none"> • Power OFF status • Wi-Fi OFF status
		 Blink	Dongle not present	<ul style="list-style-type: none"> • Dongle not present; waiting for connection
		 ON	Wi-Fi ON	<ul style="list-style-type: none"> • Tap button B. When the Wi-Fi function is ON, the LED turns ON.
		 Blink	Waiting for Wi-Fi connection & Wi-Fi initialization	<ul style="list-style-type: none"> • Press and hold button B for more than 3 seconds to reset Wi-Fi. When waiting for a Wi-Fi connection or resetting Wi-Fi settings, the LED blinks.
  NGF "C -   NGF "D	Magenta & White	 Blink	Firmware update	<ul style="list-style-type: none"> • When updating the firmware, the white LED will blink.
		 Blink	Memory format & Reset	<ul style="list-style-type: none"> • Press and hold buttons A and B simultaneously for more than 3 seconds to format a Micro SD card or reset memory settings. The magenta LED blinks.
	White	 →  ON → OFF	Booting up	<ul style="list-style-type: none"> • When booting up, both LED A and B turn on at the same time.

Recording Folder Configuration

Tgeqtf kpi	F tkkpi " Tgeqtf kpi *F tkkpi "Uo ctv" Vlo g"Ncr ug+	F tkkpi "Gxgpv	Rctmkpi "O qvlqp" *Rctmkpi "Uo ctv Vlo g"Ncr ug+	Rctmkpi "Gxgpv	O cpwcr' Tgeqtf kpi	O { "Hqrf gt
Hqrf gt"pco g	 pqto cn	 gxgpv	 o qvlqp	 r ctmkpi	 eco eqtf gt	 o { hqrf gt

Recorded Video File Name

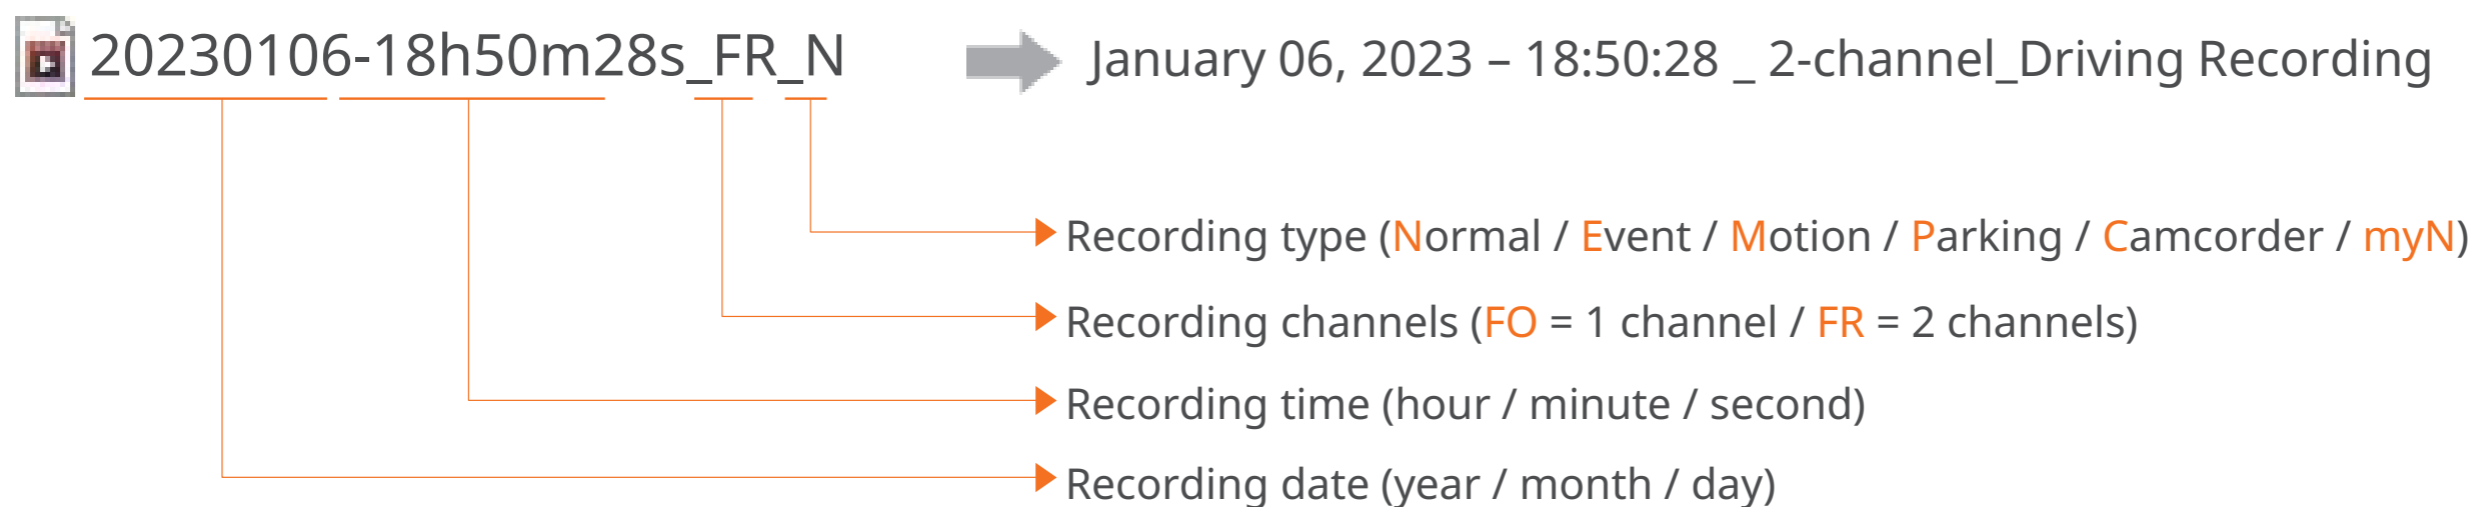


- Only images related to impact detection and motion detection are recorded while parking. (Smart Time Lapse set separately)
- Parking Motion Recording and Parking Smart Time Lapse Recording cannot be used simultaneously.
- Smart Time Lapse Recording does not record audio.

How to use the FineVu Wi-Fi App

Installation & Connection


- To Connect for the First Time:

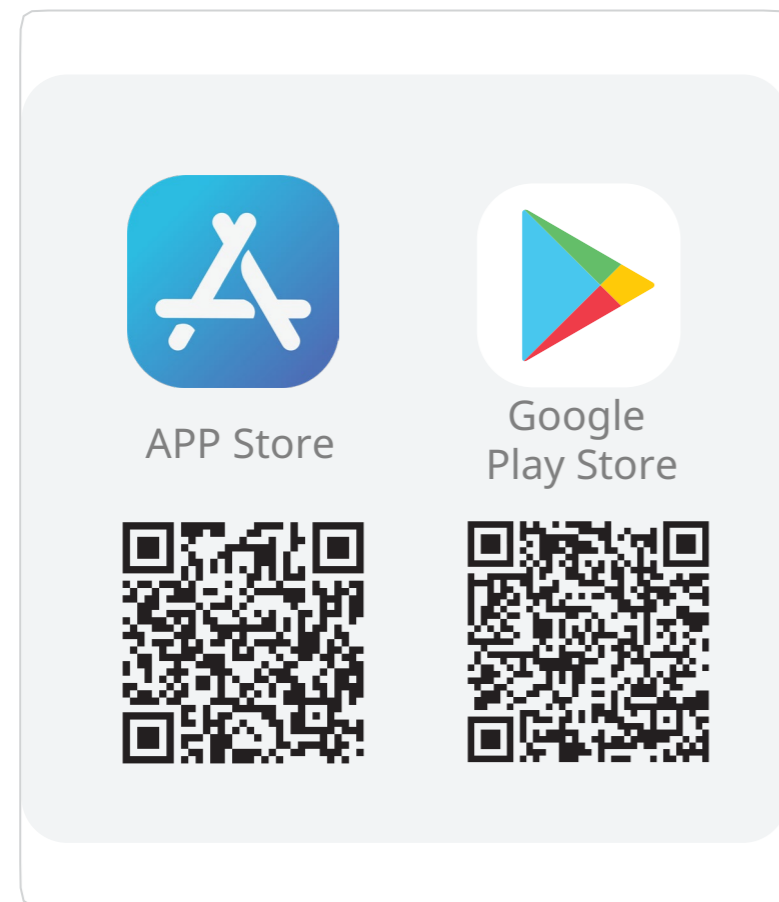


1. Download the 'FineVu Wi-Fi' app from the 'Google Play Store' or the 'App Store' depending on your smartphone type.




2. Activate the Wi-Fi function by pressing the Wi-Fi button on the main body of the dashcam.

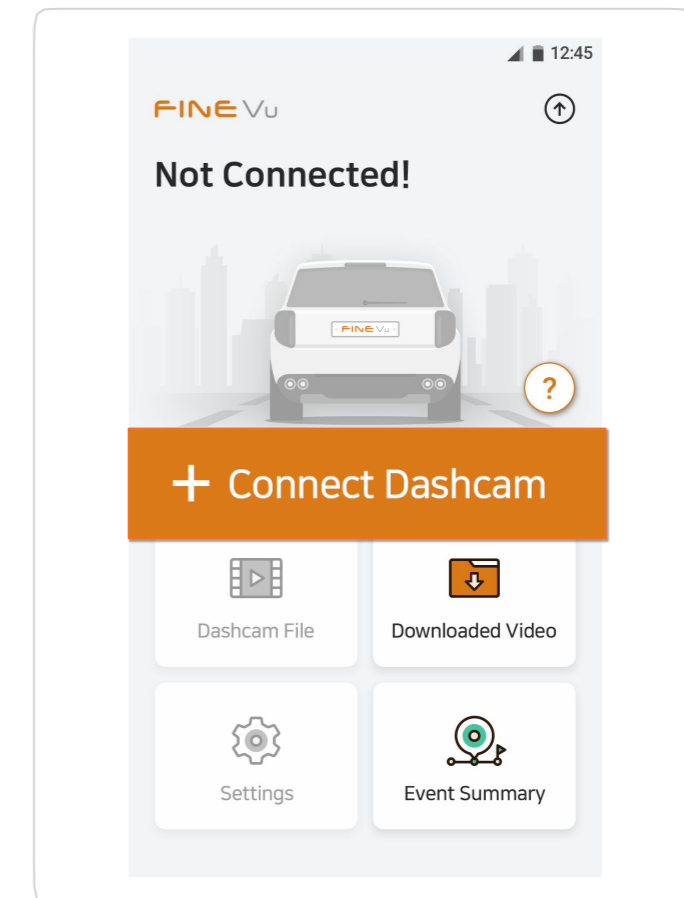


3. Run the 'FineVu Wi-Fi' app installed on your smartphone.

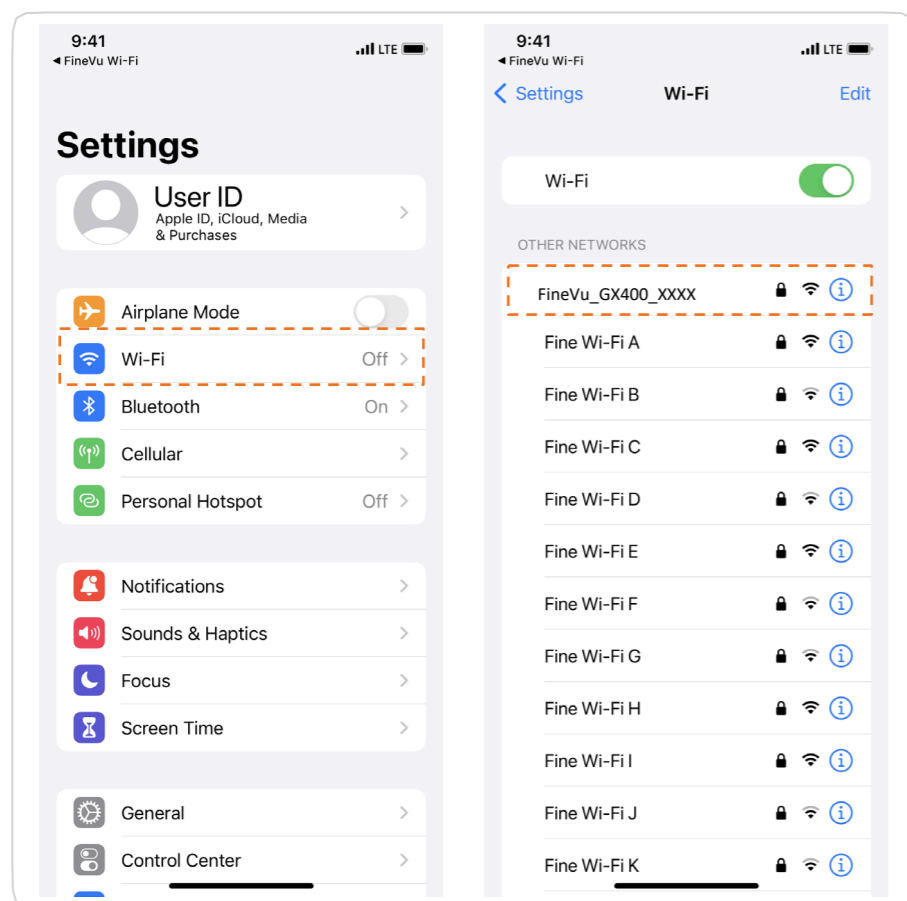

iOS

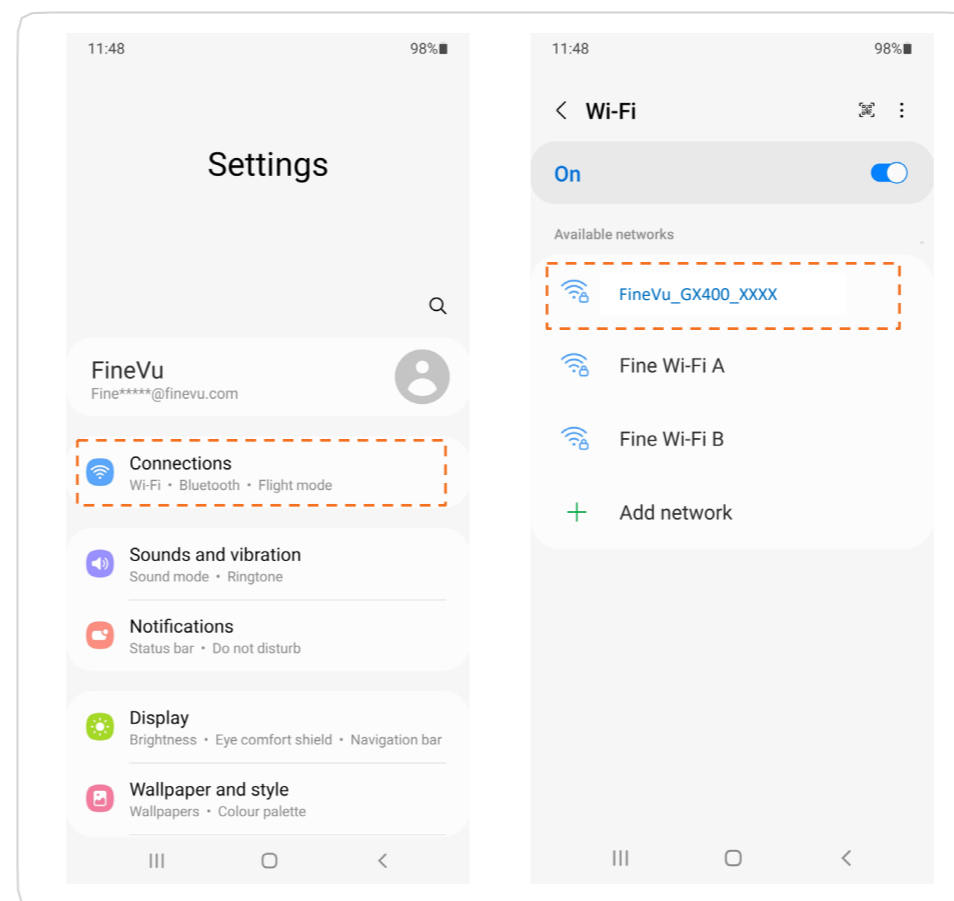

Android

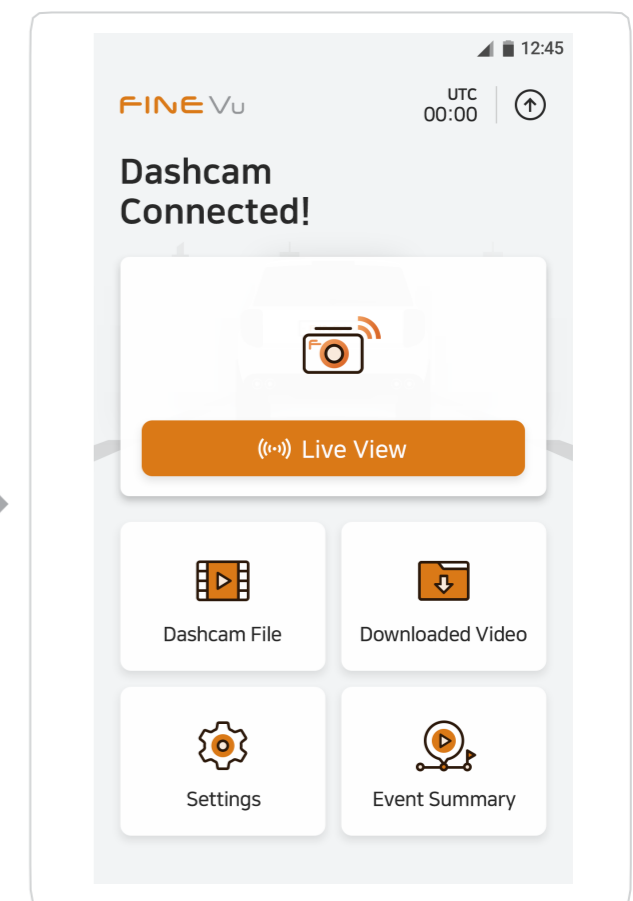


4. When the Wi-Fi function turns on, connect the Wi-Fi of your smartphone to the Wi-Fi network starting with 'FineVu_GX400'.

- The initial password is '12345678'

5. When the Wi-Fi is connected between your smartphone and the product, go back to the app.


• To Reconnect:

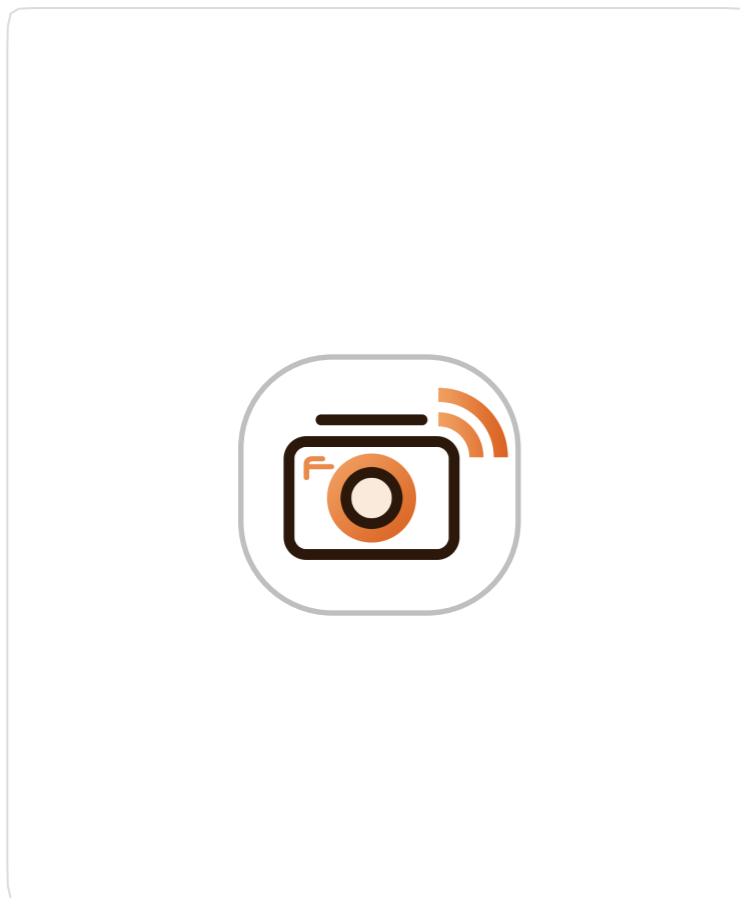

1. Run the 'FineVu Wi-Fi' app installed on your smartphone.



2. Activate the Wi-Fi function by pressing the **Wi-Fi** button on the main body of the dashcam.

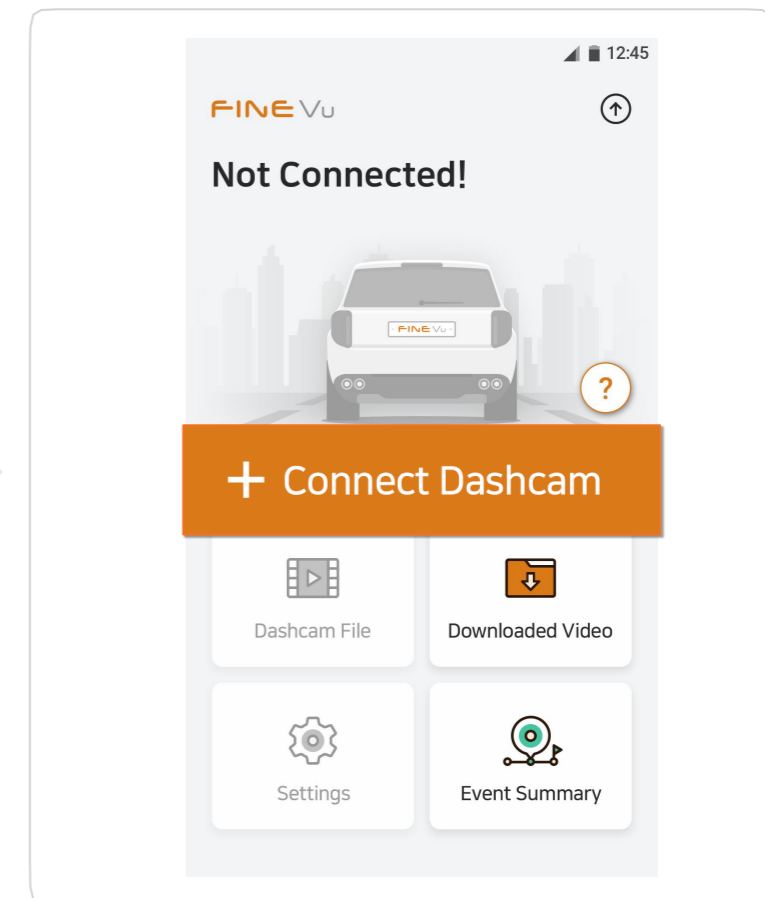


3. Press the **Connect Dashcam** button in the app to connect to the Wi-Fi network starting with 'FineVu_GX400'.



• During Wi-Fi connection with the dashcam, your smartphone will go offline, and data will be blocked temporarily. When you disconnect, it will be restored to its original state.

Description of Functions

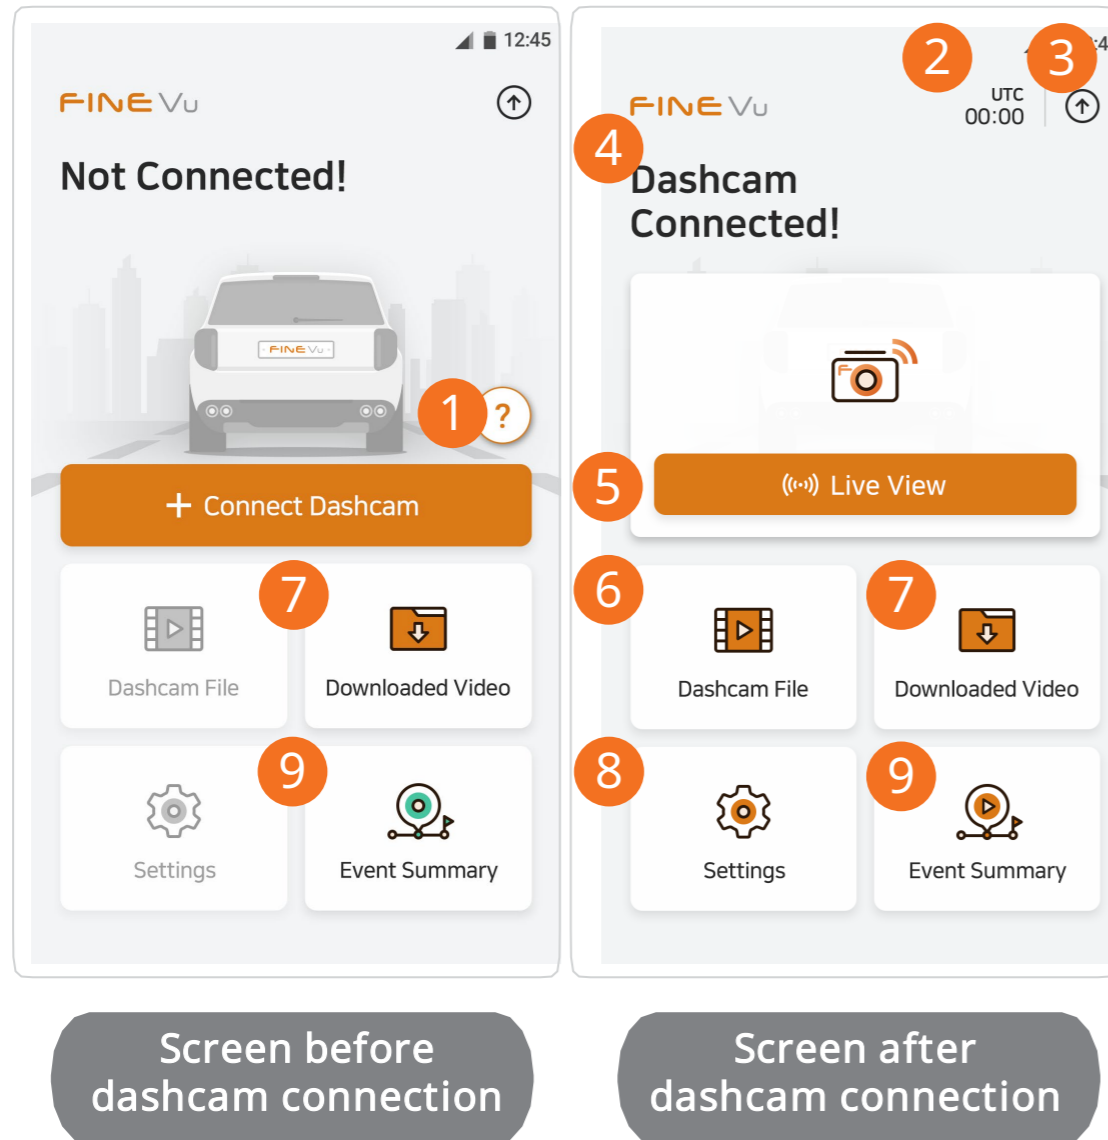


P q0	FINE Vu
①	You can check the help for 'Connect Dashcam'. (When connected to the dashcam, the button will disappear.)
②	When connected to the dashcam, it shows UTC time information, where you can change the UTC settings.
③	You can check the product name, and the current and latest versions of the app, speed camera, dashcam language file, and firmware. You can also change the speed camera region and the dashcam language.
④	Shows current connection status with the dashcam.
⑤	You can check the real-time video of the connected dashcam. (When disconnected, the 'Live View' button will be provided.)
⑥	You can check the recorded video of the connected dashcam.
⑦	You can check and share the downloaded videos.
⑧	You can change the settings of the connected dashcam.
⑨	This feature varies depending on whether it is connected to the dashcam or not. (See detailed information in 'How to Use FineVu Wi-Fi APP > Event Summary (when connected) or the Event Summary (when disconnected)')



- When the dashcam is not connected, certain functions such as real-time images and dashcam files are disabled.


Real-time Video (Live View)

On the main screen, tap the **Live View** button that provides real-time video. This offers a number of functions including front and rear real-time video, mounting angle setting, and capture.

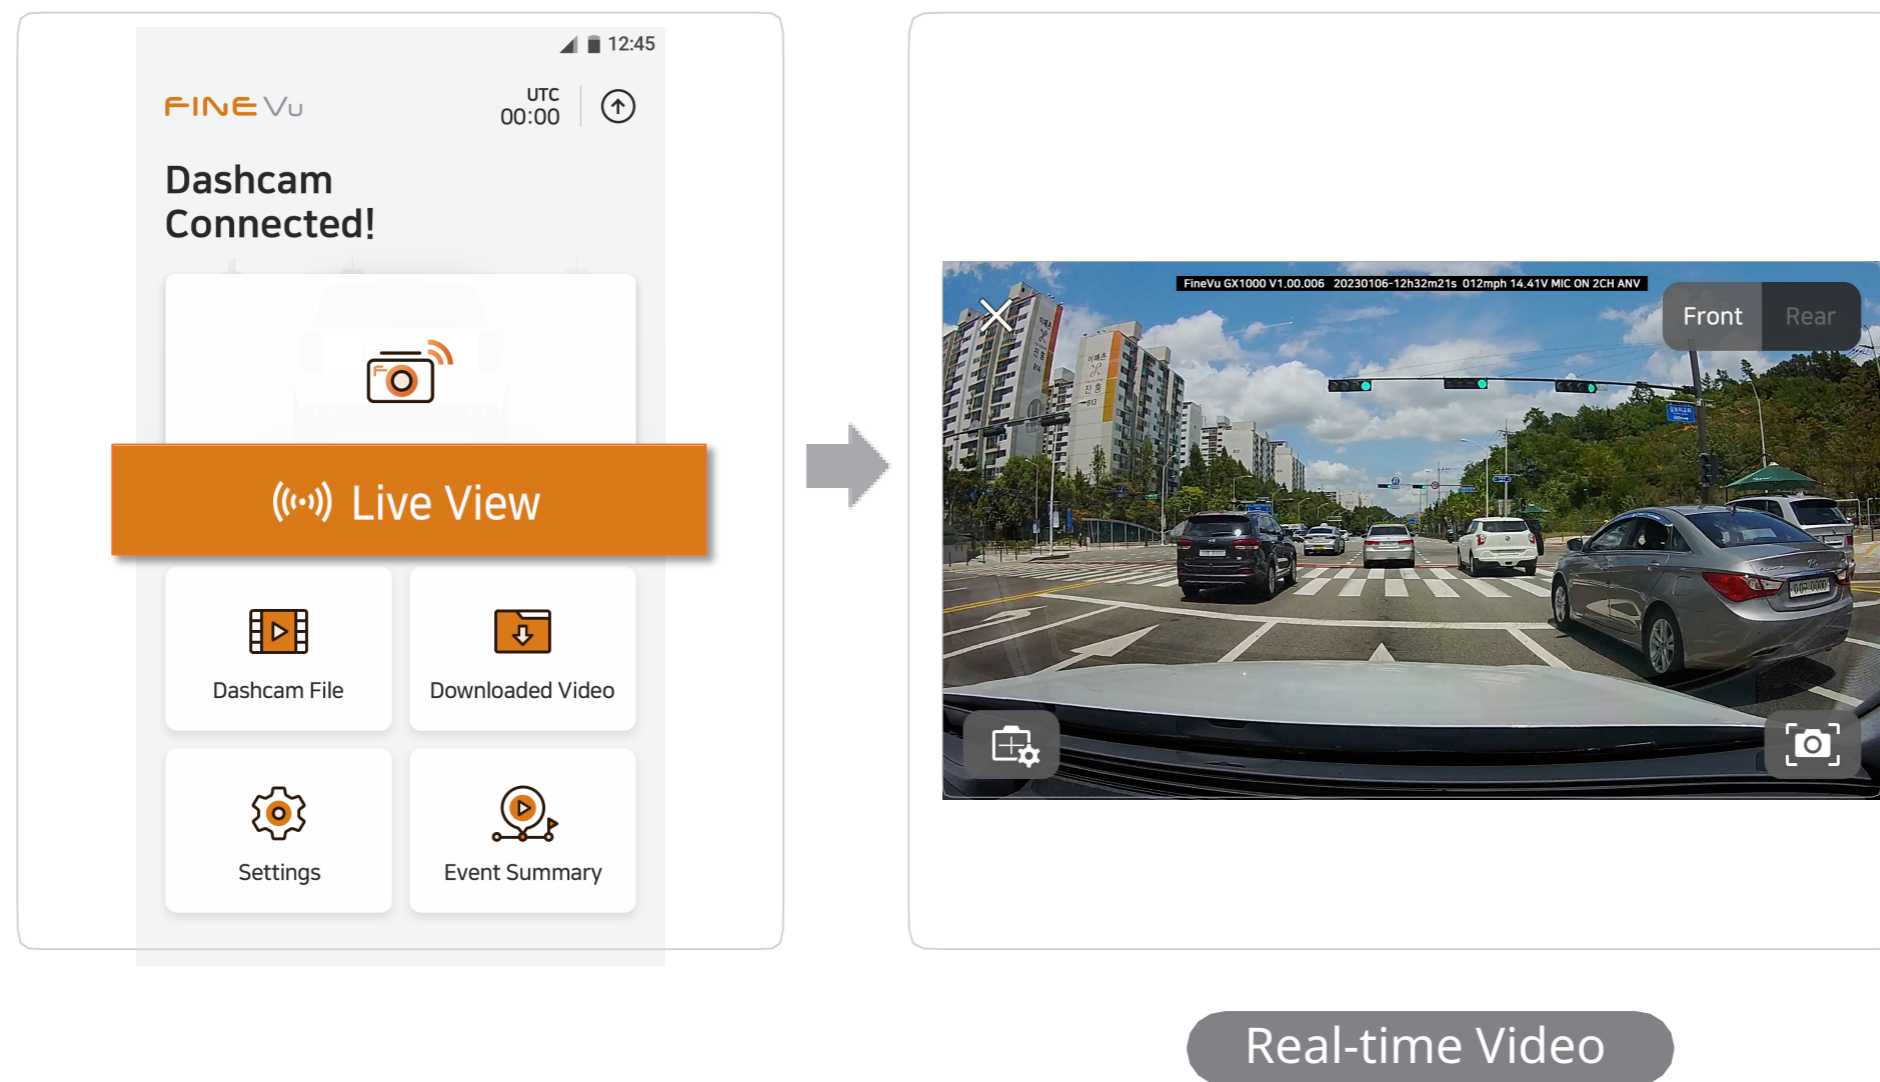

- When the dashcam is not connected, these functions will not be provided.


Real-time Video (Live View) Screen

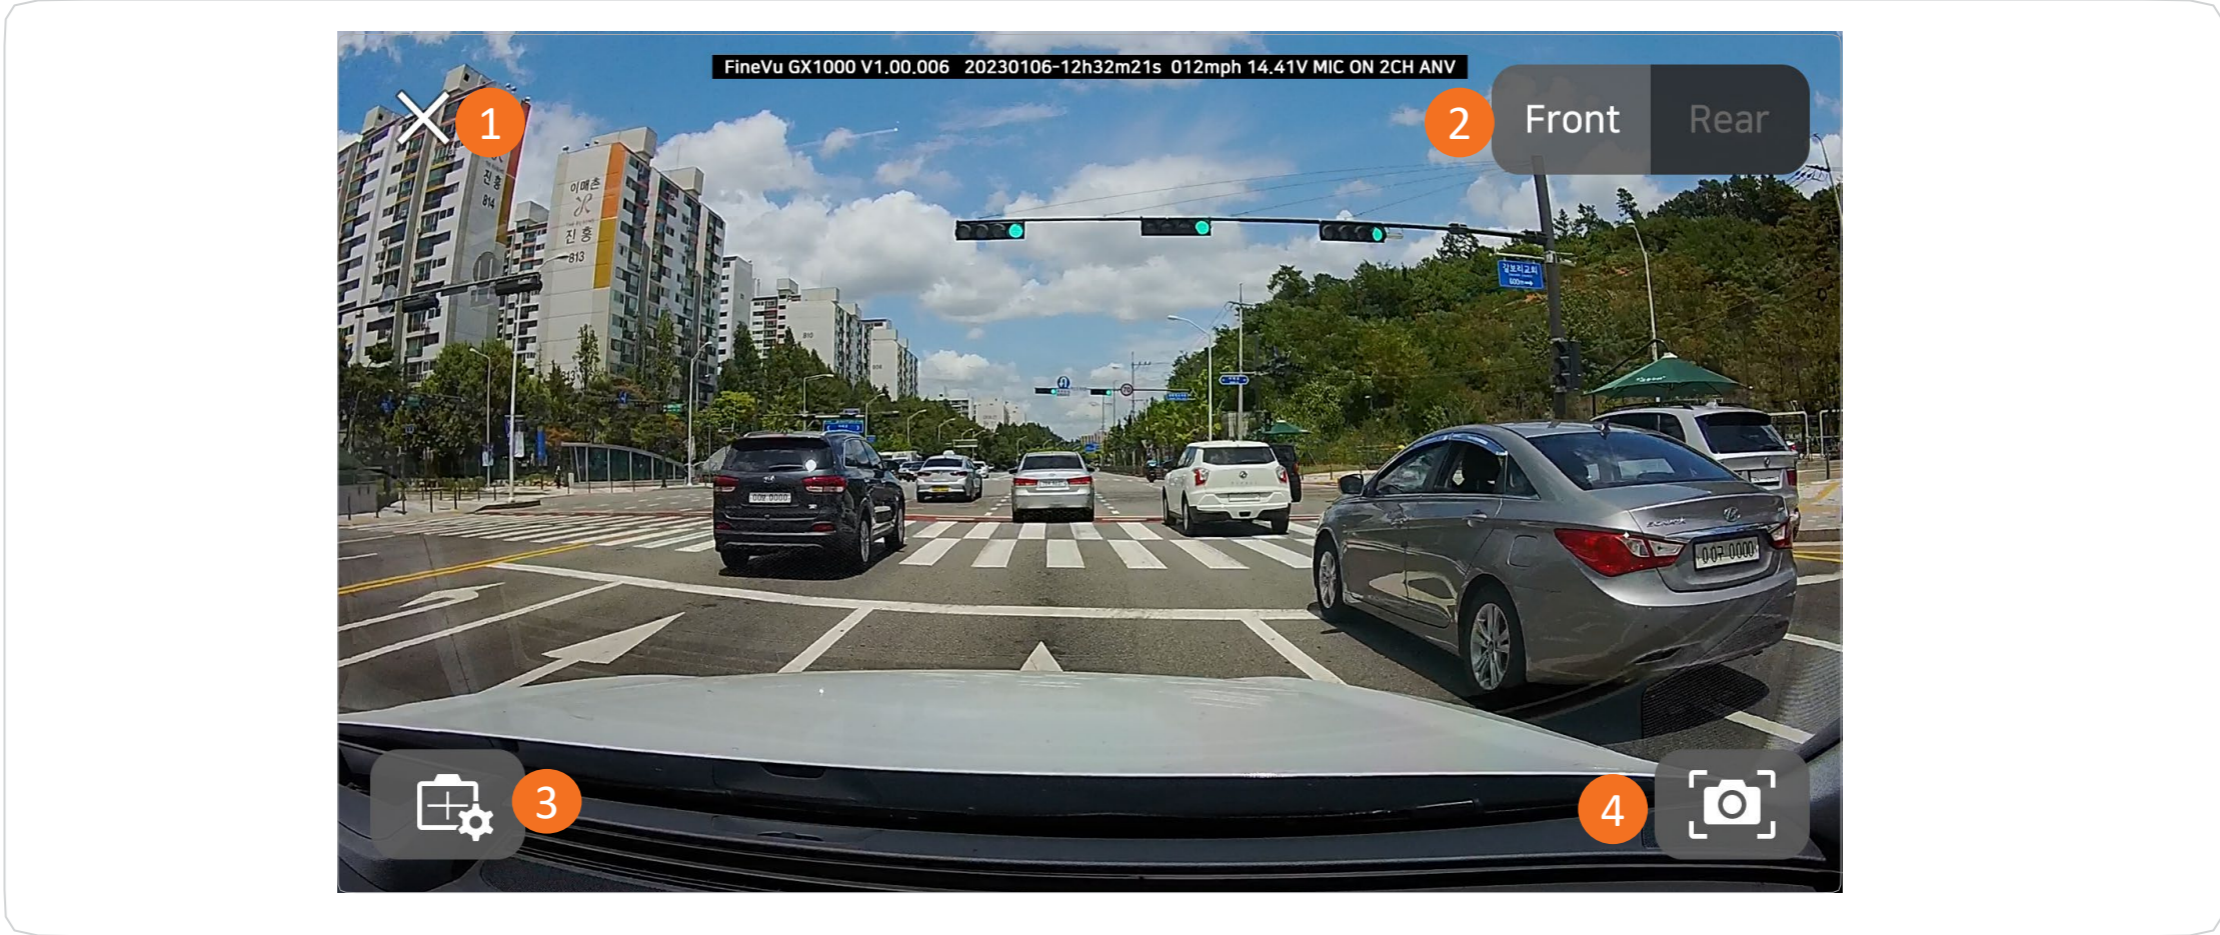


No.	Name	Functional description
①	Close	Close the real-time video and go back to the main screen.
②	Front/Rear Switching	You can choose either front or rear real-time video.
③	Setting the mounting angle	You can set the mounting angle. (See the ' How to Use FineVu Wi-Fi APP > Mounting Angle Description ')
④	Capture	Captures the current image as of the moment you tap it.

Setting Mounting Angle


You can set the mounting angle by tapping the () icon on the real-time video screen.

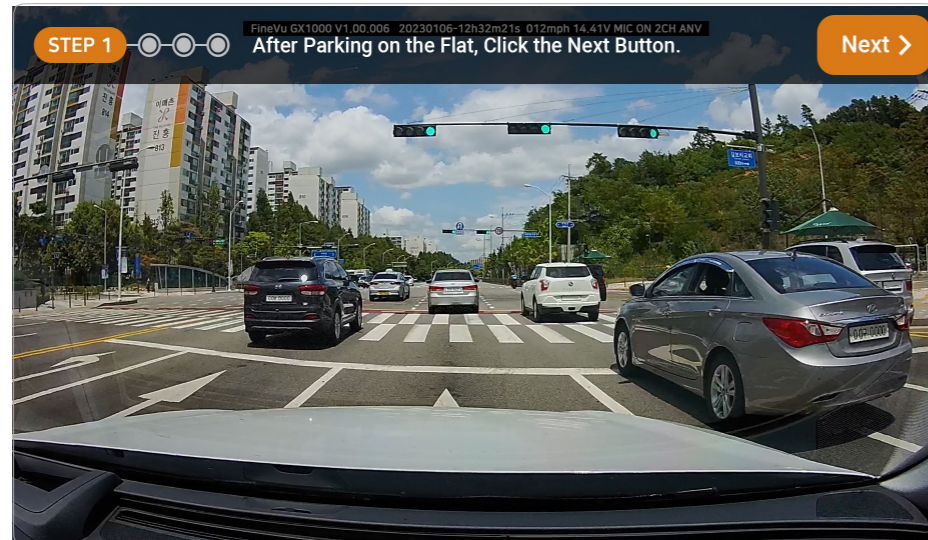


1. Pull over the car, on a flat section of road, and press Next.

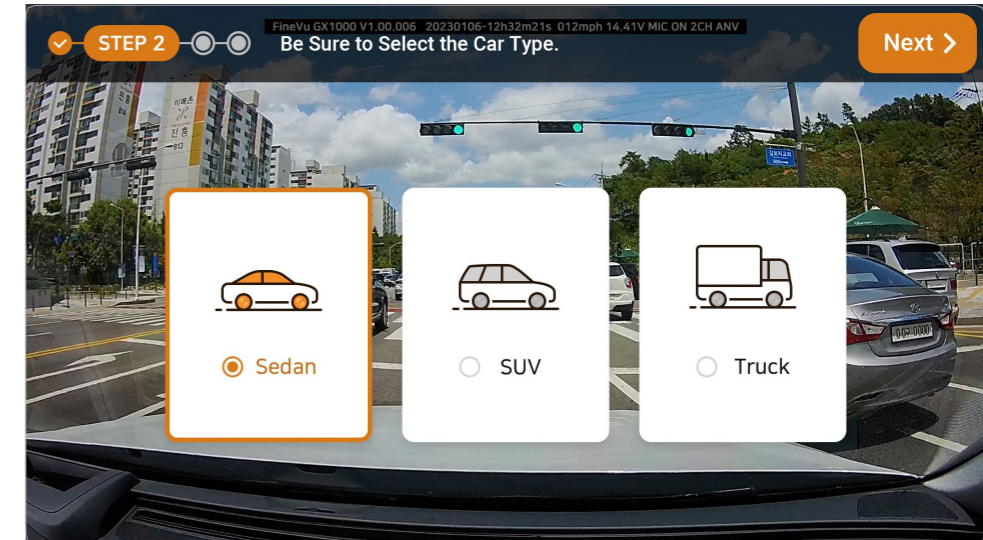


2. Choose the appropriate vehicle type.

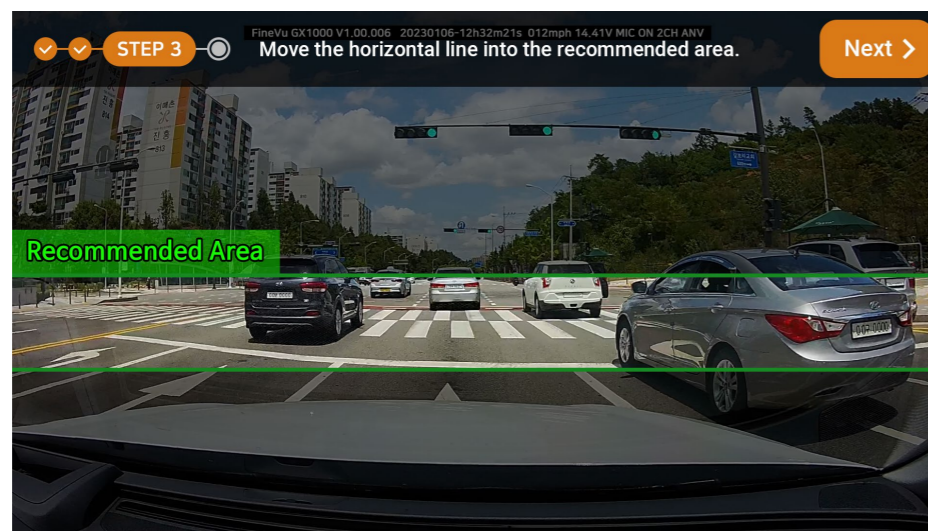

3. Adjust the angle of the front camera to align the horizon into the green area provided on the app screen.

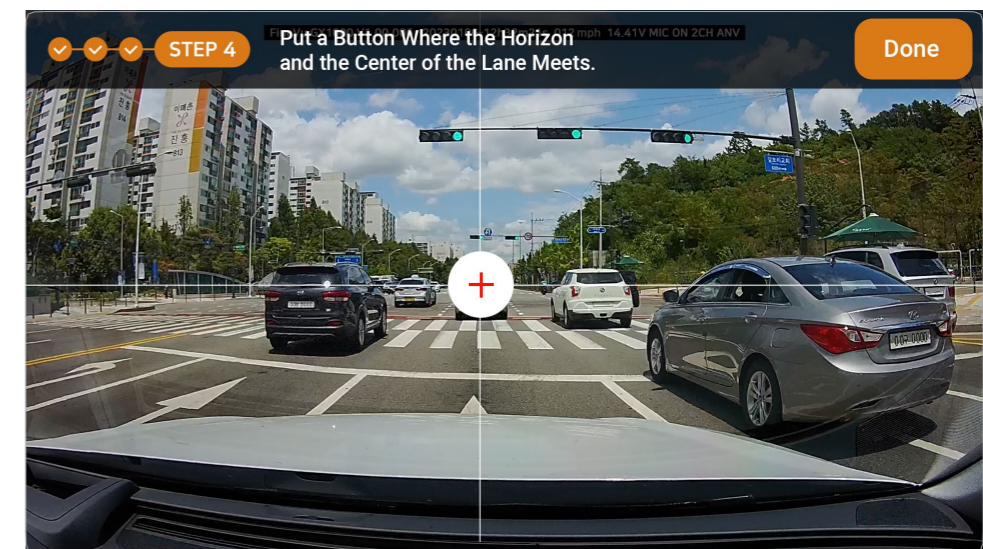

4. Align the  with the center of the horizon and the lane.




- When the dashcam is not connected, those functions are not provided.
- It is recommended to set up for ADAS accuracy.
- When setting the mounting angle, set it in a safe place that avoids interference from nearby vehicles.

Video Playback

Tap the **Dashcam File** button on the main screen. A list of recorded videos is displayed, and you can see the full view or the desired type of video, and the list of videos by date.

- For video playback, you can check the videos with the dedicated player in the app.

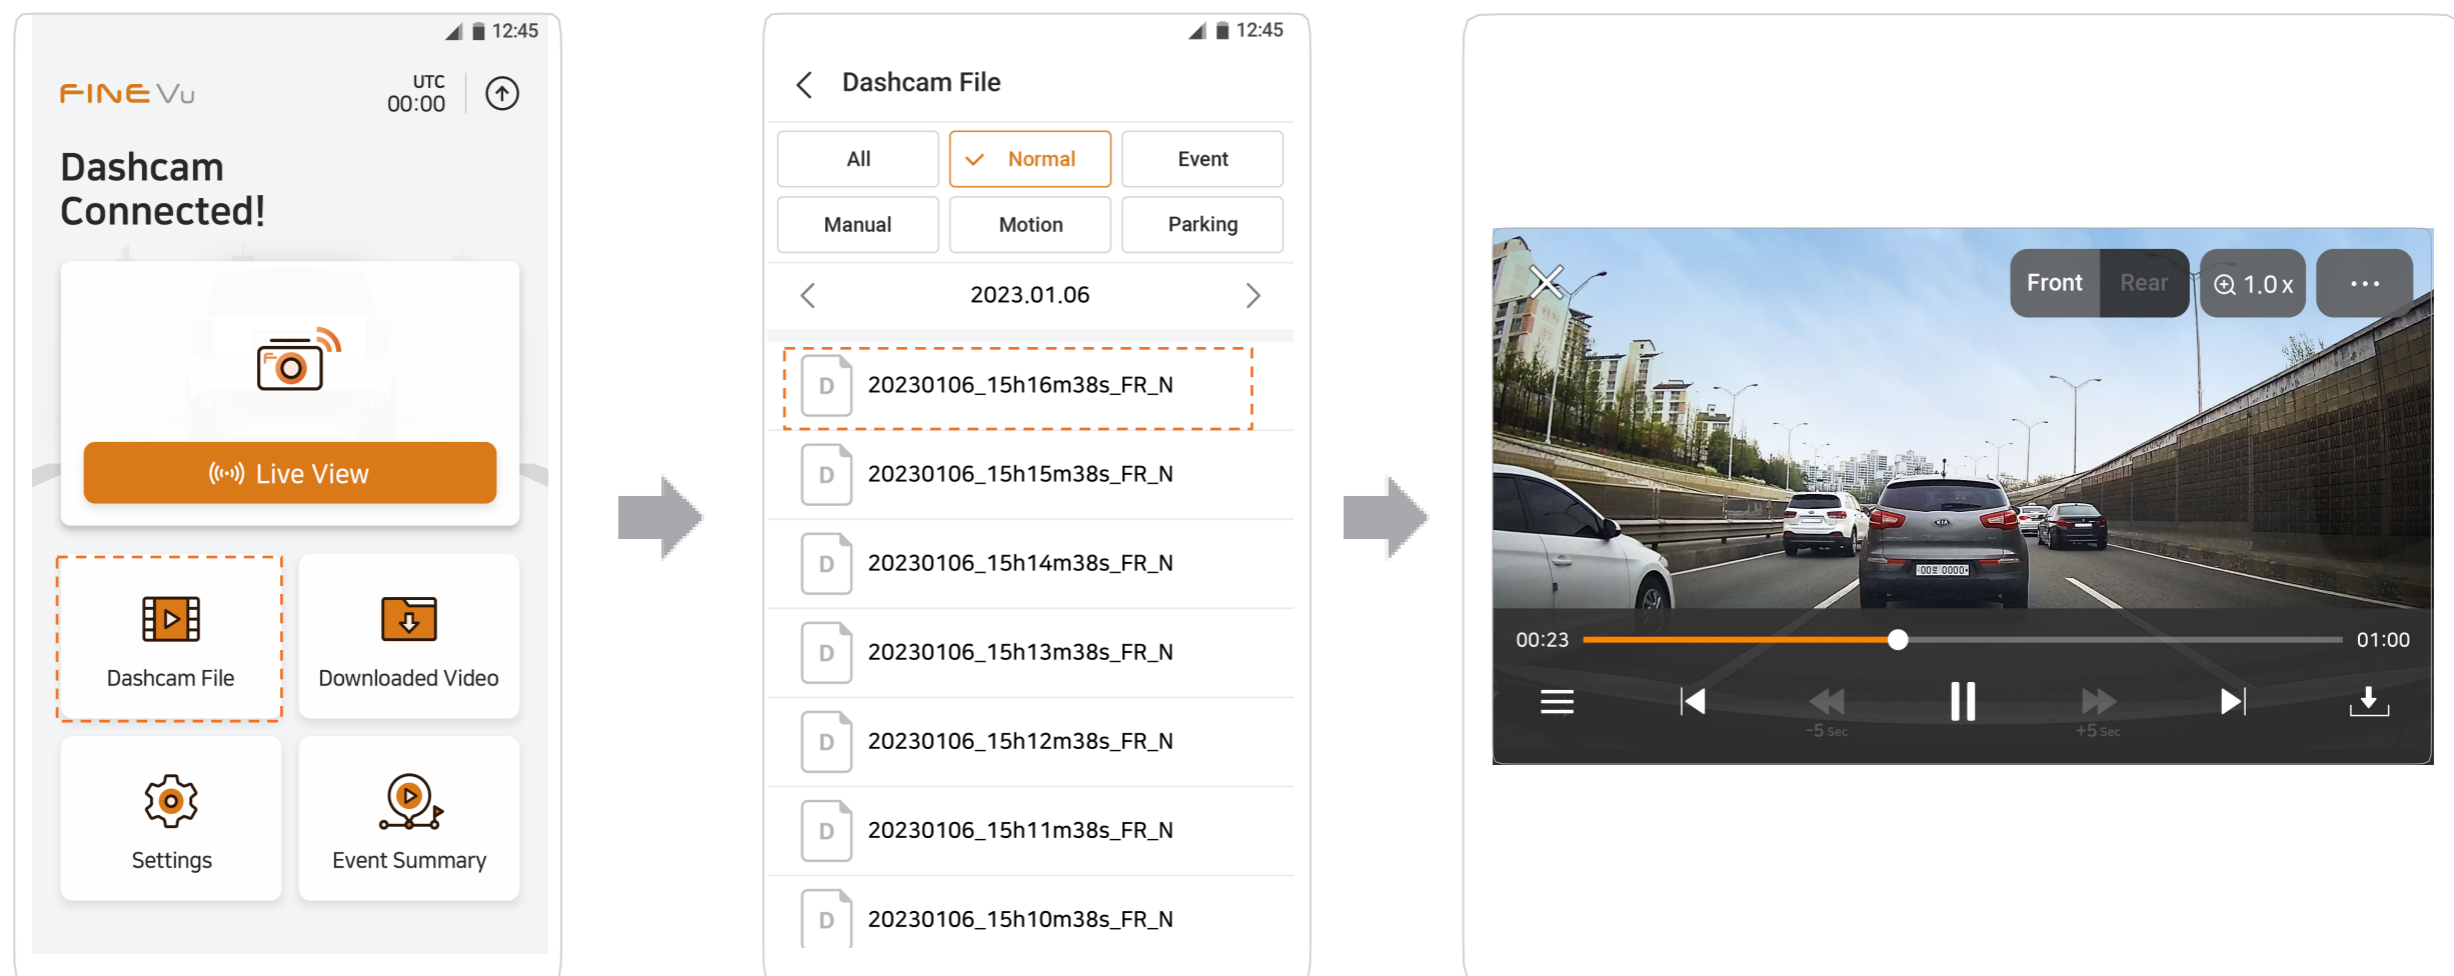


Video Playback



- The video player supports smartphone landscape mode only.
- No list will appear if there is no recorded video.




Video Playback Screen

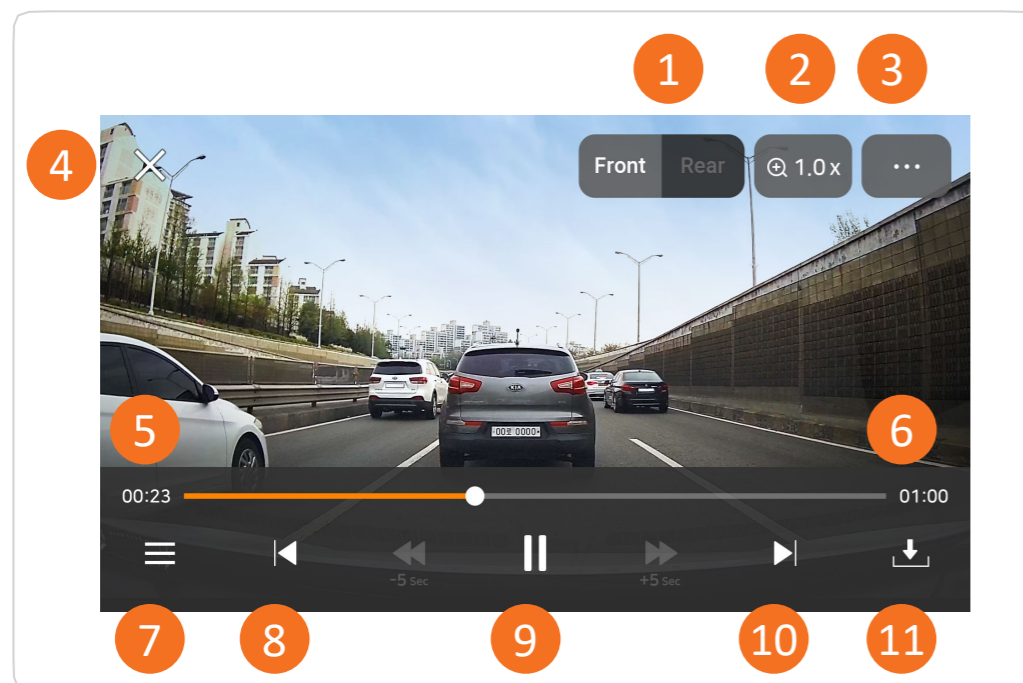

№	Function	Description
①	Front / Rear switching	Chooses either front image or rear image.
②	Zoom	Zooms the video being played on the screen in 1.5x, 2x, and 3x.
③	Play options	Checks file information. (Shows the file name, recording type, video length, and resolution of the file currently being played.)
④	Close	Closes the video player and return to the previous list.
⑤	Play time	Shows the playing time from 00:00 seconds.
⑥	Total time	Shows the total time of the video.
⑦	Playlist	Shows a playable list.
⑧	Previous video	Moves from the video currently playing to the previous video in the list.
⑨	Pause	Stops the currently playing video.
⑩	Next video	Moves from the video currently playing to the next video in the list.
⑪	Download	Downloads the currently playing video. The downloaded video is saved on your smartphone.

Downloaded Video

Tap the **Downloaded Video** button on the main screen. It provides a list of archived videos, which you can play or share.

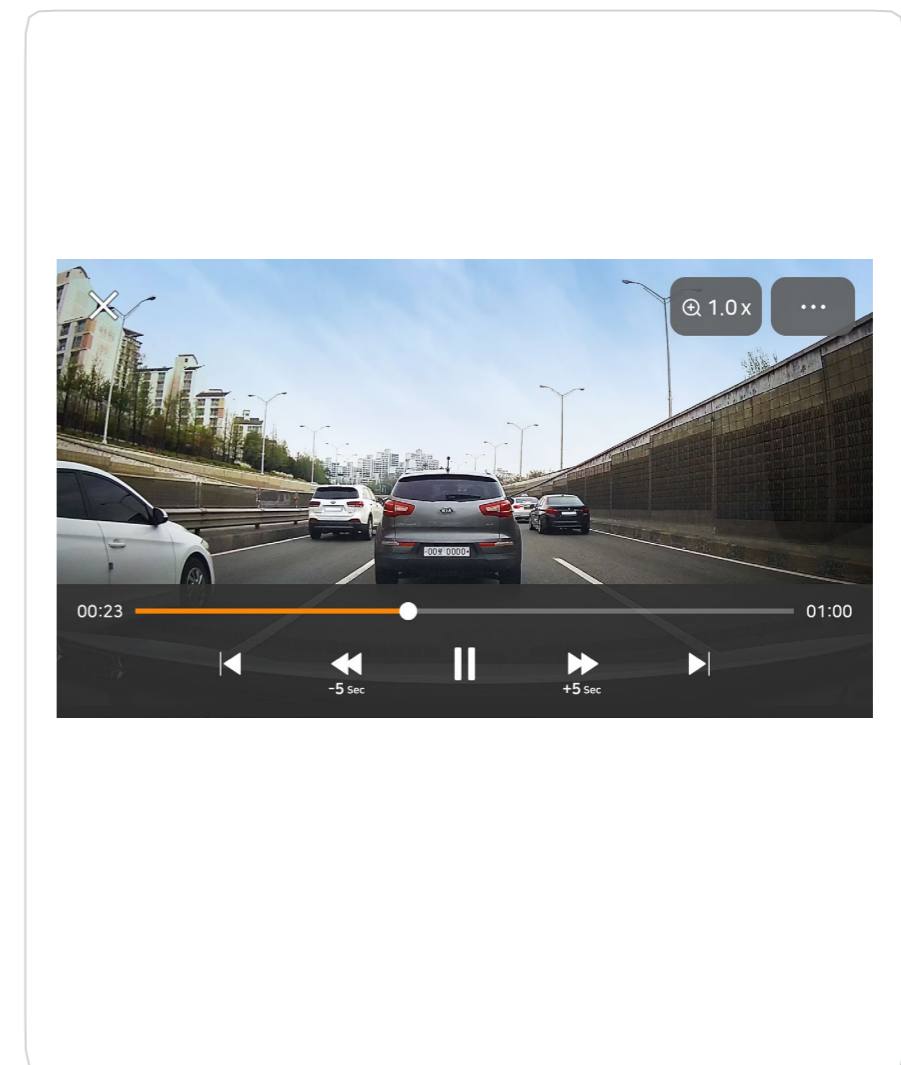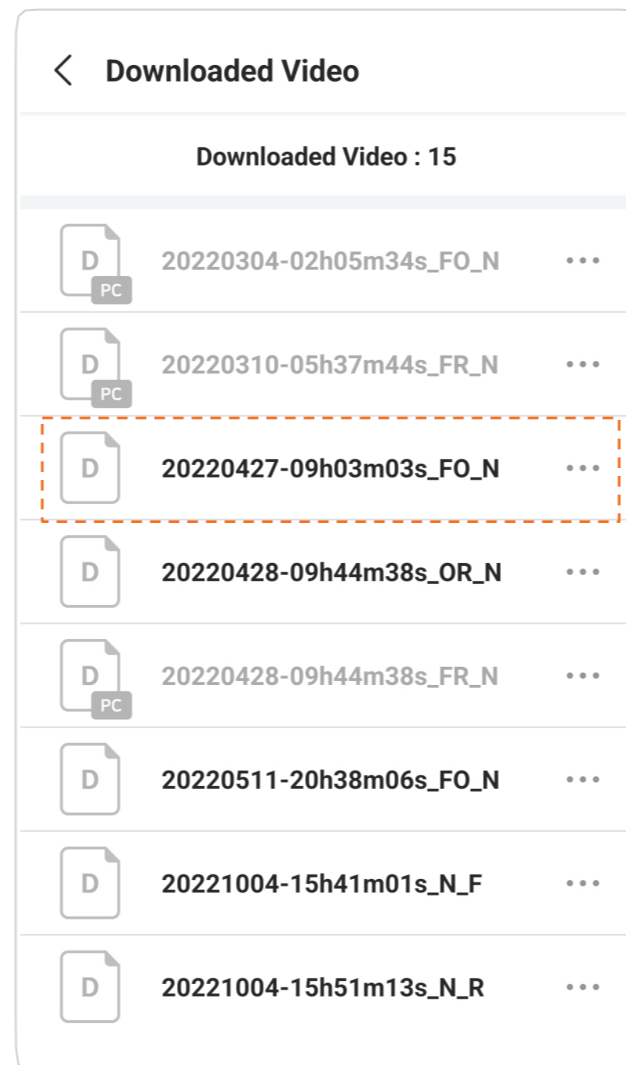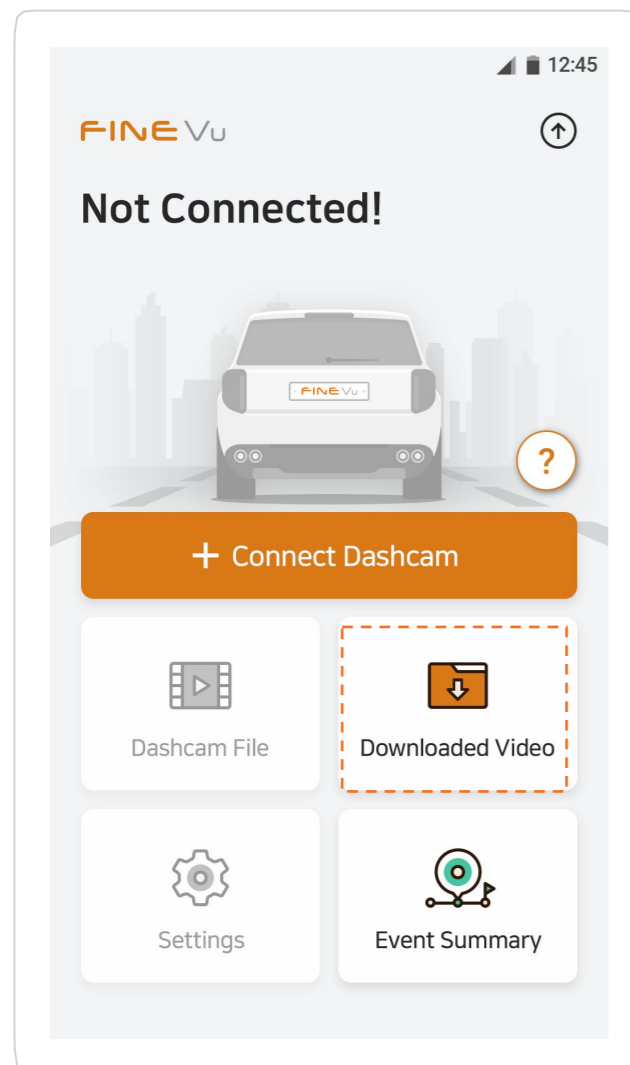



Downloaded Video Play



- This function is available regardless of whether or not you are connected to the dashcam.
- The original PC video file cannot be played.
- You can select multiple videos by pressing and holding the file list in the archived video list.

Settings

Tap the **Settings** button on the main screen. You can select the menu you want and adjust the settings.

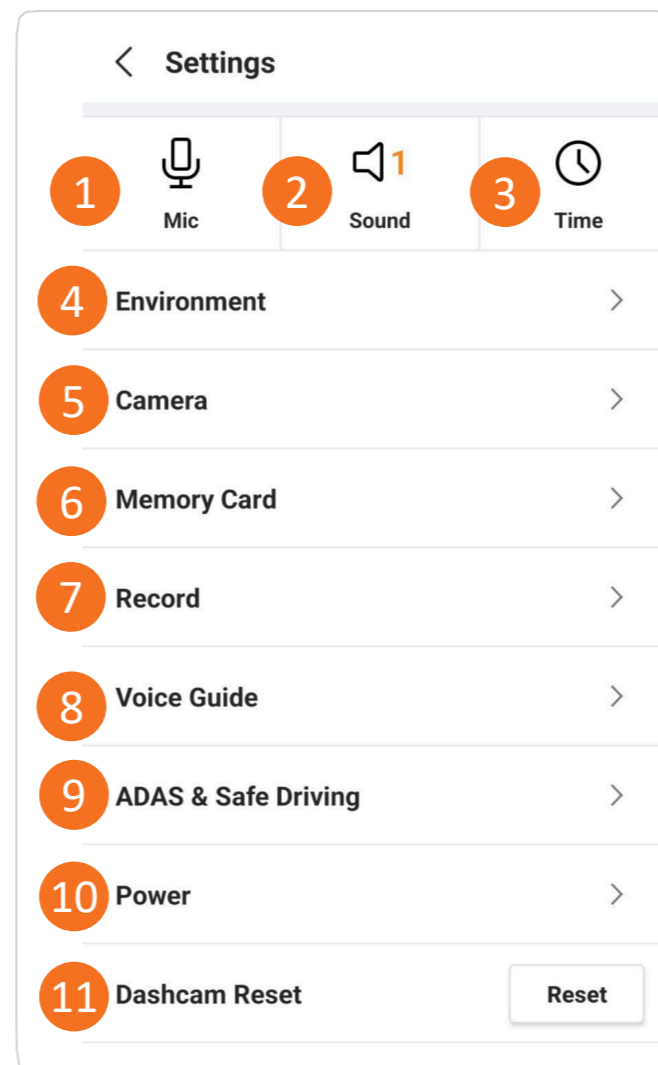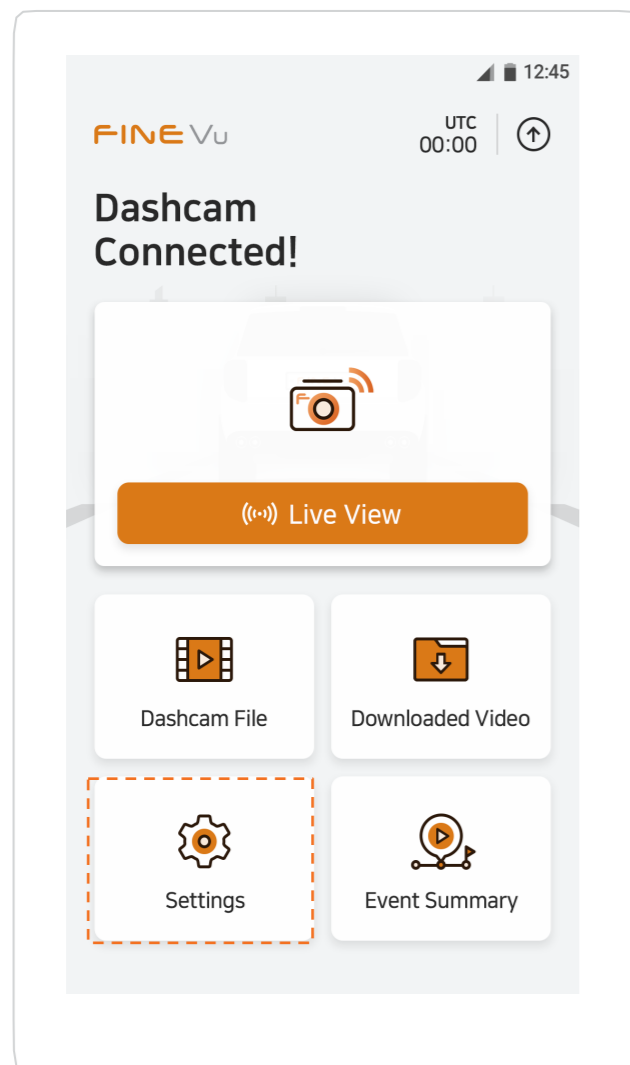



P q0	Hwpevkqpcnrf guetkr vkqp
①	Mic ON/OFF
②	Volume setting (Total 5 levels - 0~4)
③	Time setting
④	Environment setting
⑤	Camera setting
⑥	Memory card setting
⑦	Recording setting
⑧	Voice guide setting
⑨	ADAS& Safe Driving Assistant setting
⑩	Power setting
⑪	Reset dashcam setting





- When the dashcam is not connected, these functions are not available.
- When you change the dashcam setting, the memory card may be initialized, and a pop-up appears over the app during initialization. Please pay attention to that pop-up.


• **Mic / Sound**



By tapping the [Settings ], you can switch the voice recording function ON/OFF, like **1** during video recording.

By tapping the [Settings ], you can adjust the sound volume of the dashcam guide sound and guide message in 5 levels from 0 to 4.

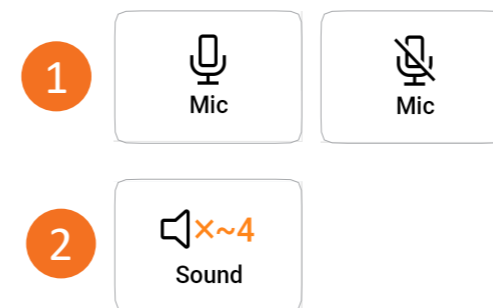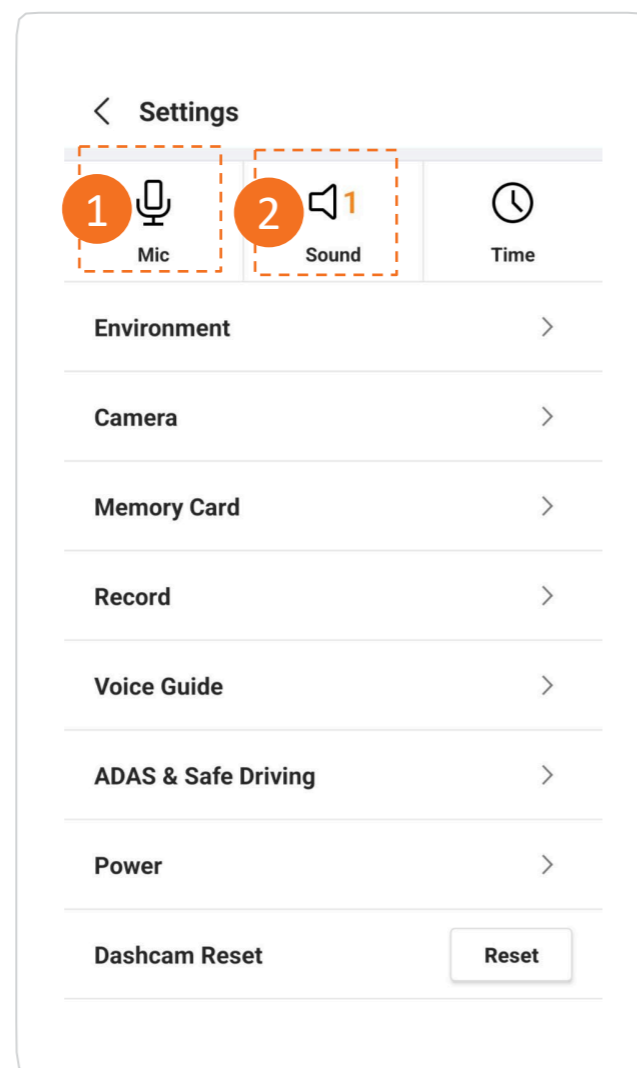

• Time

By tapping the [Settings ], you can switch the UTC time zone setting and summer time setting ON/OFF. (You can set UTC from -12 to +14.)

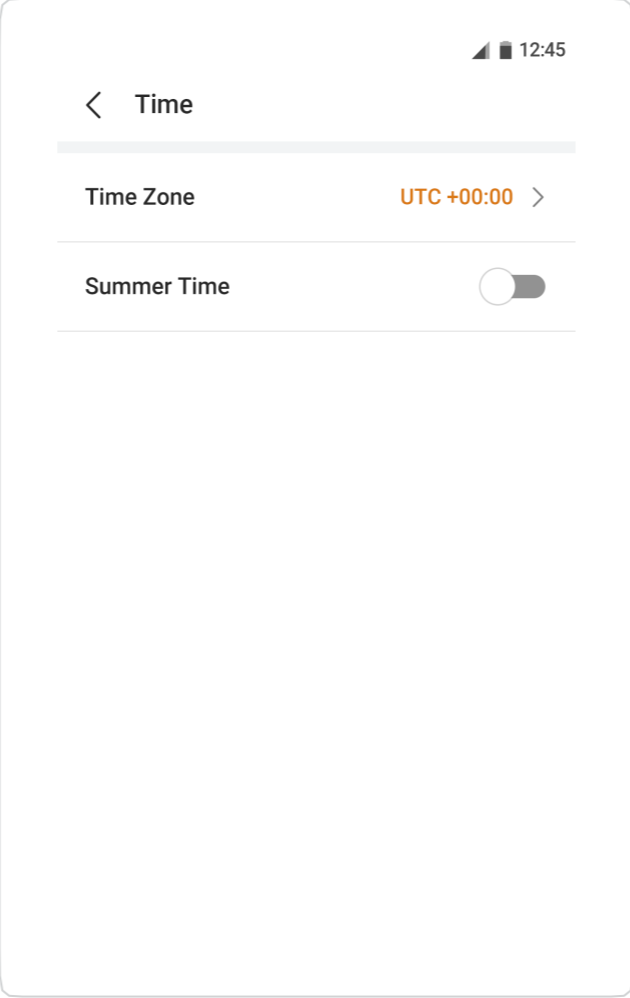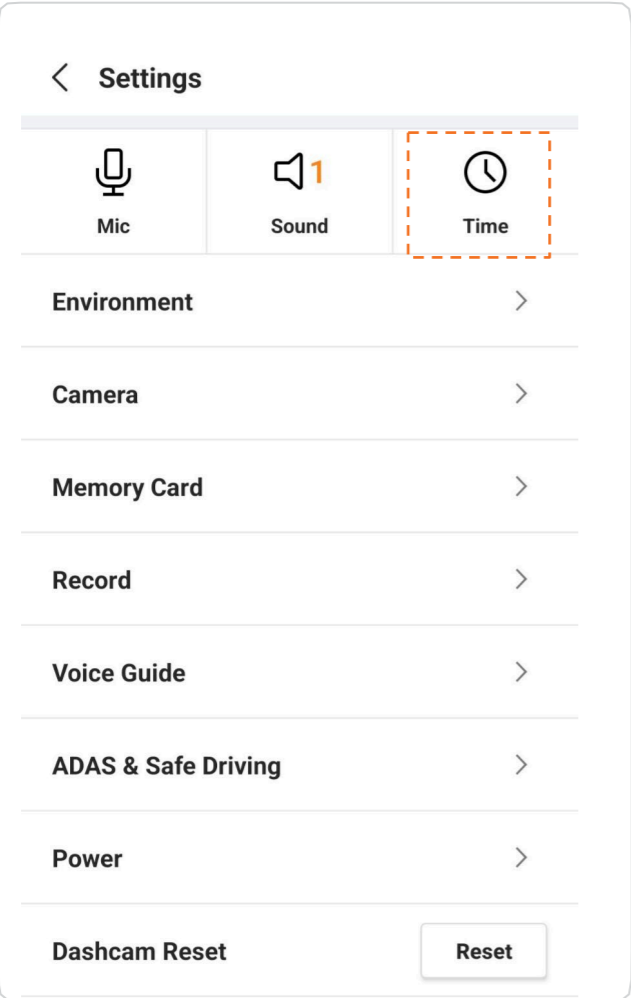

Region	UTC time zone
LA Vancouver	-8
Denver	-7
Chicago Mexico City	-6
New York Washington, D.C.	-5
London	0
Berlin Rome Warsaw	+1
Jerusalem	+2
Moscow	+3
Beijing Taipei	+8
Seoul Tokyo	+9
Sydney	+10


UTC Guide



- The UTC Guide is for reference, so set the correct UTC time zone for your area of residence or use.
- If you select the UTC change button on the main screen, the screen moves to the Time Settings screen.

- **Environment**


By tapping [Settings ▶ Environment], you can set the Wi-Fi password, speed unit, OSD speed display, security LED ON/OFF, and status LED brightness control.

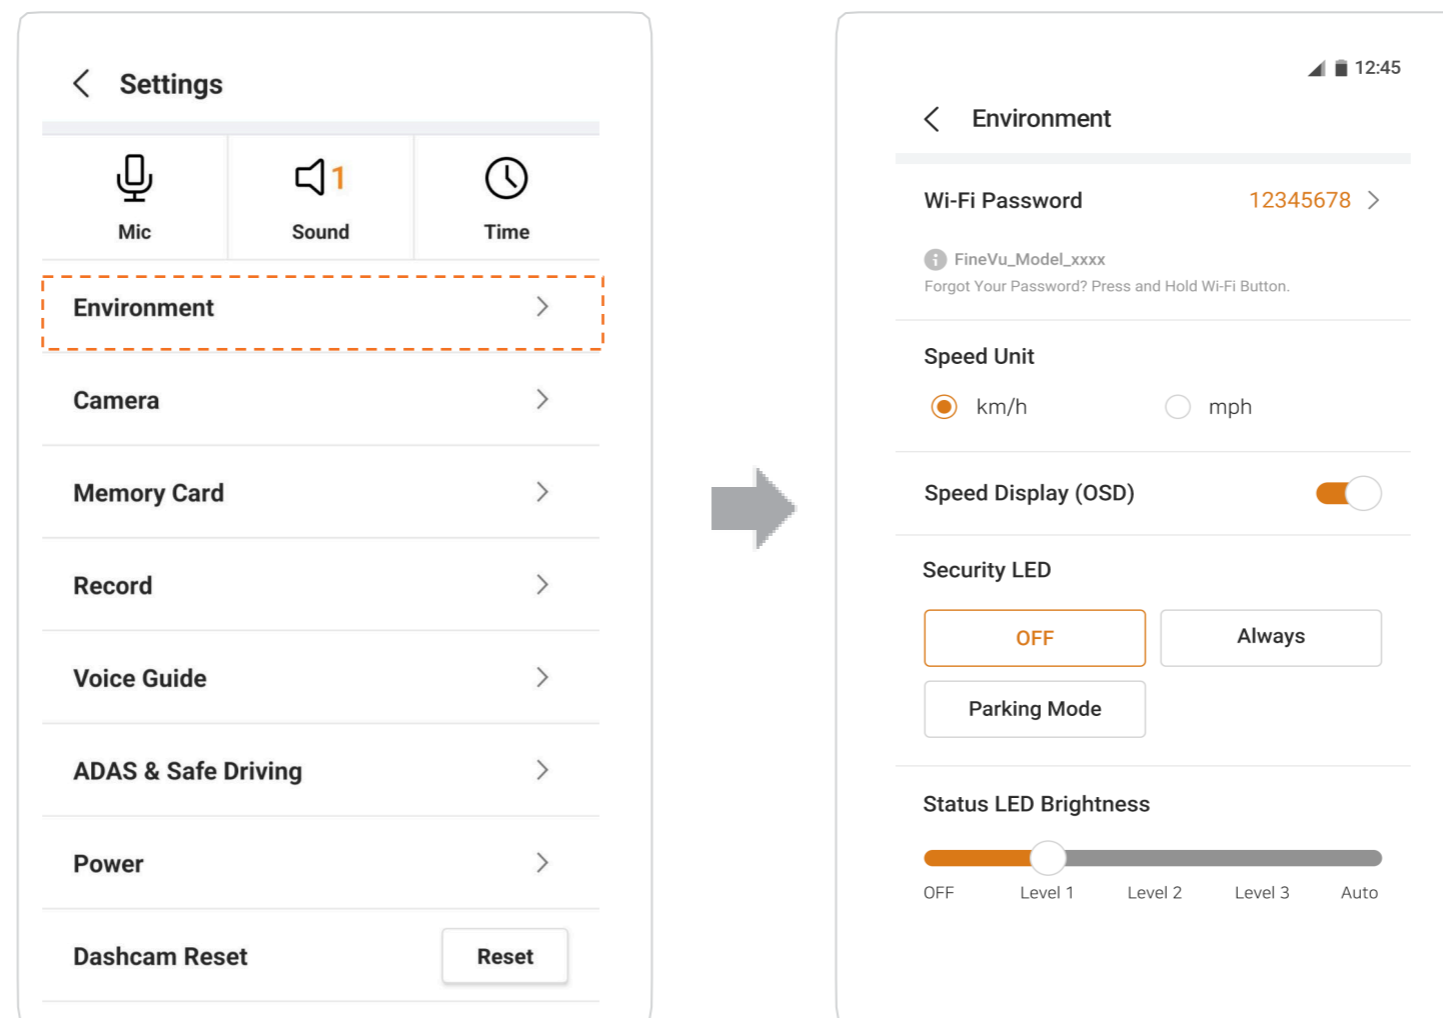

- If you forget your password, you can reset it by pressing and holding the Y k/H button on the main body of the dashcam for longer than 3 seconds. (See the ['How to Use > LED color and operation description'](#))


- Camera

By tapping [Settings ▶ Camera], you can turn HDR ON/OFF and adjust the brightness of the rear image.

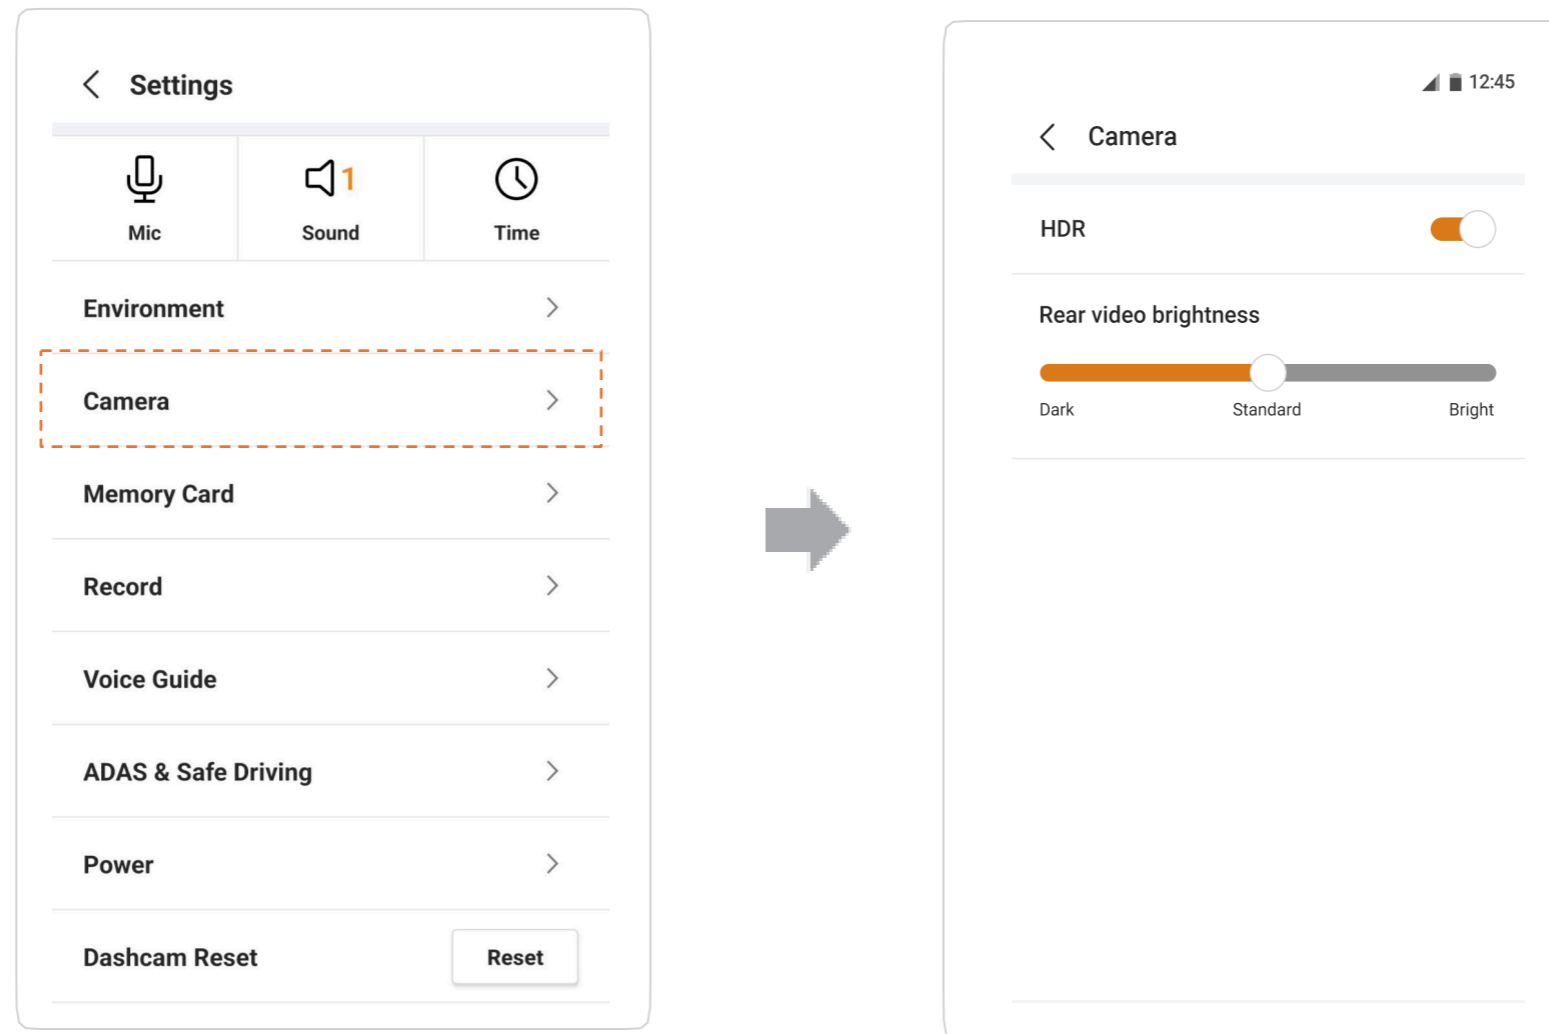

- **Memory Card**


By tapping [Settings ▶ Memory Card], you can select one of 4 types of memory partitions and set overwriting restrictions. (4 types of memory partitions – Driving Priority, Event Priority, Parking Priority, Driving Only)

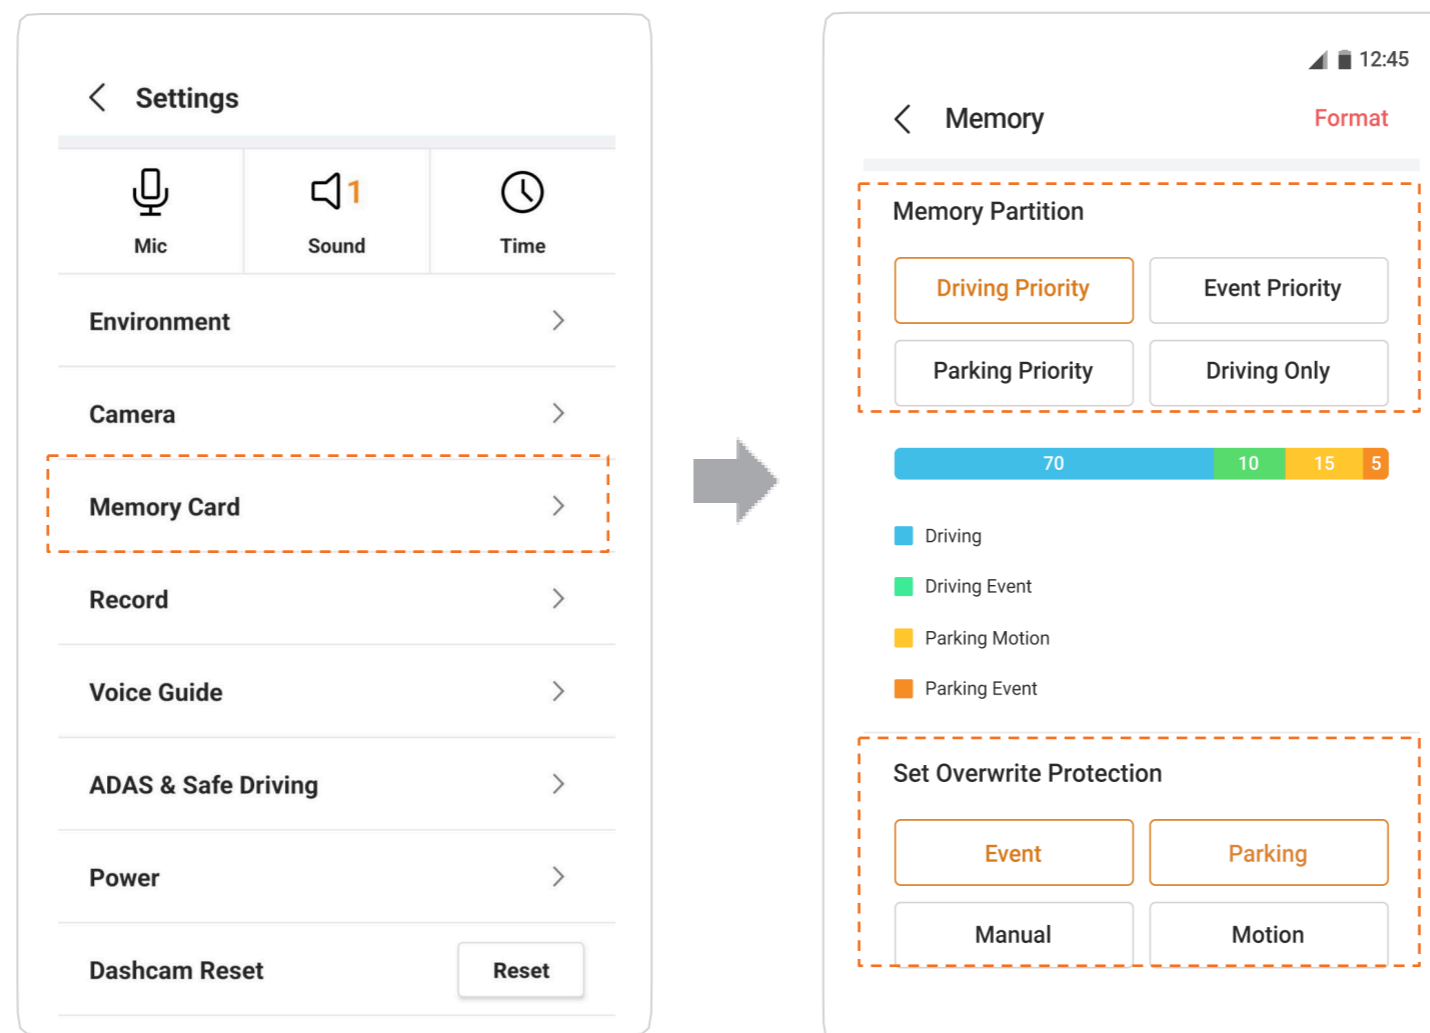

- When the overwriting restriction is set, the videos are saved up to the allocated capacity. Once the allocated range is full, videos are no longer saved.
- This option will not be reset even after the memory card settings are formatted.

• Record

By tapping [Settings ▶ Record], you can set the recording type for Driving and Parking Recording, Impact Sensitivity, Motion sensitivity, etc.

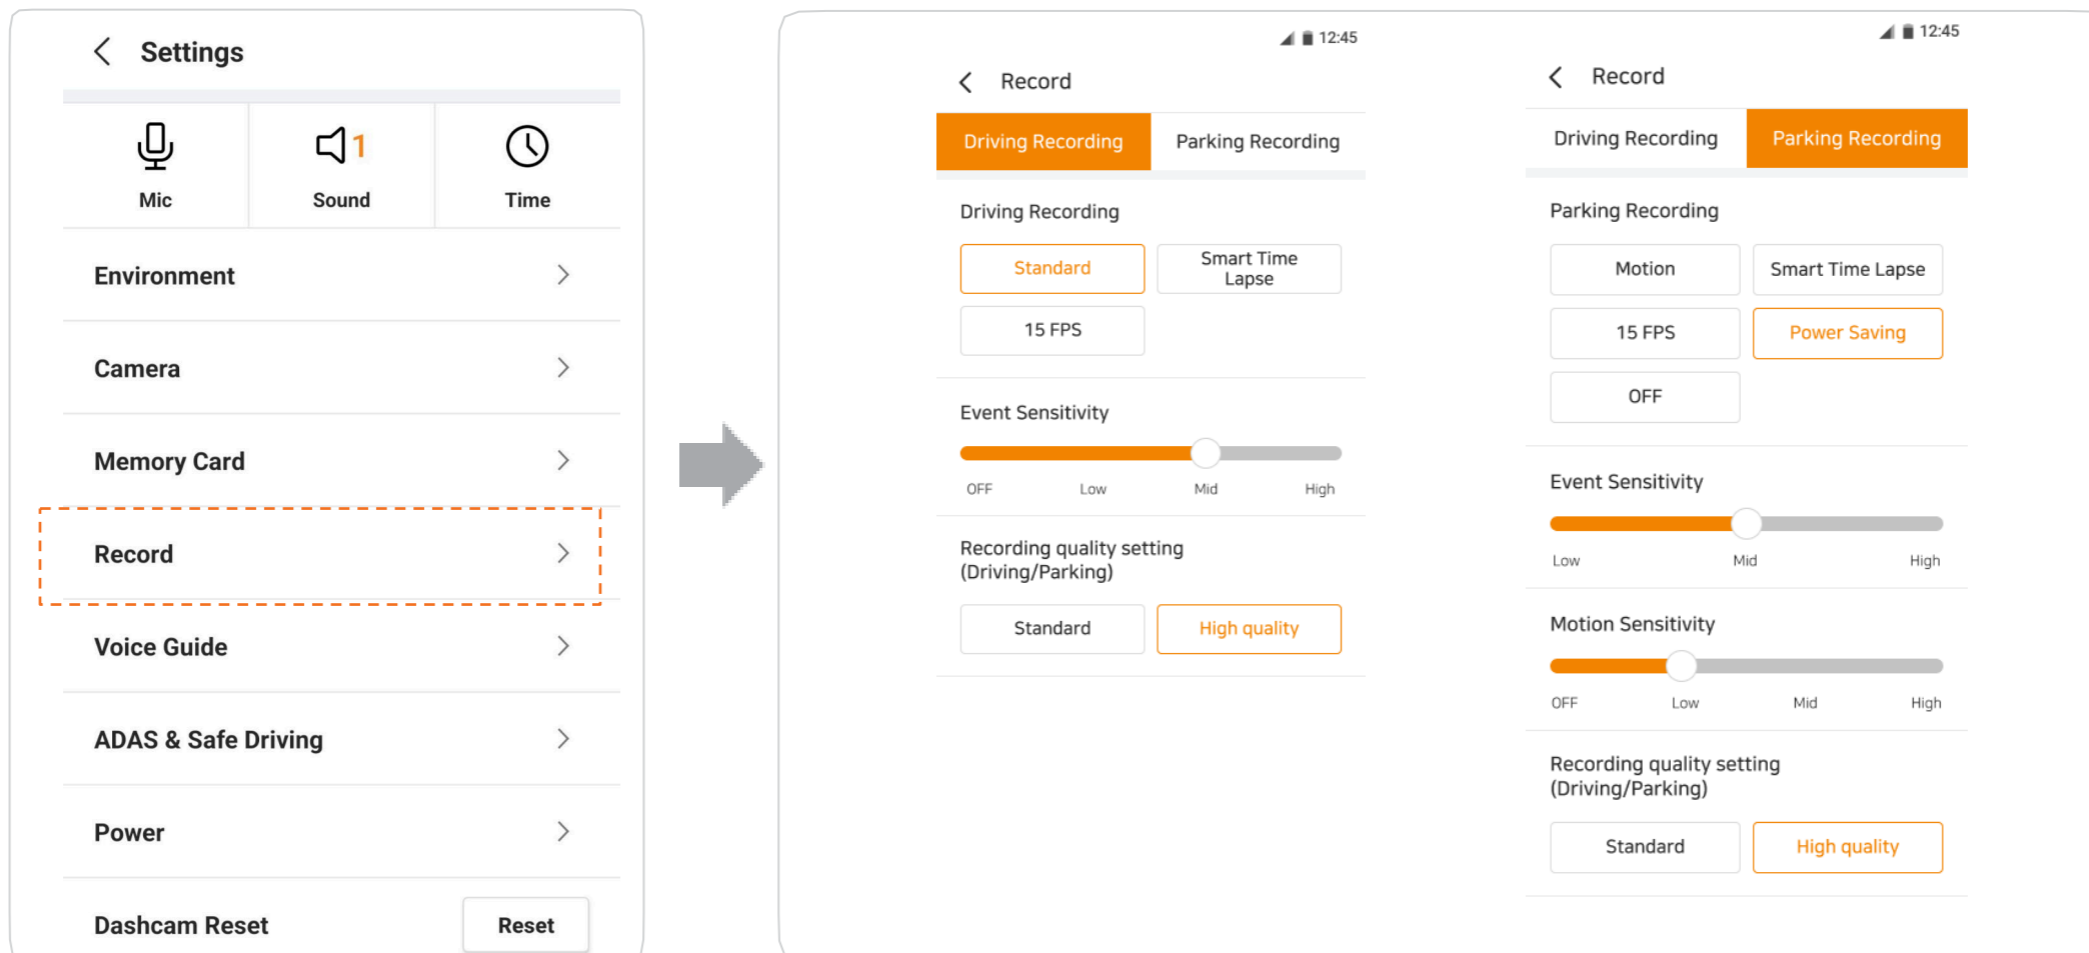

Driving Recording Setting Screen


- Recording type (Standard, Smart Time Lapse, 15FPS)
- Event Sensitivity
- Recording quality setting

Parking Recording Setting Screen

- Recording type (Motion, Smart Time Lapse, 15FPS, Power Saving)
- Event Sensitivity
- Motion Sensitivity
- Recording quality Setting


- **Voice Guide**

Through the [Settings  Voice Guide], you can configure Recording voice guide, such as Wi-Fi Status, Camera, etc.

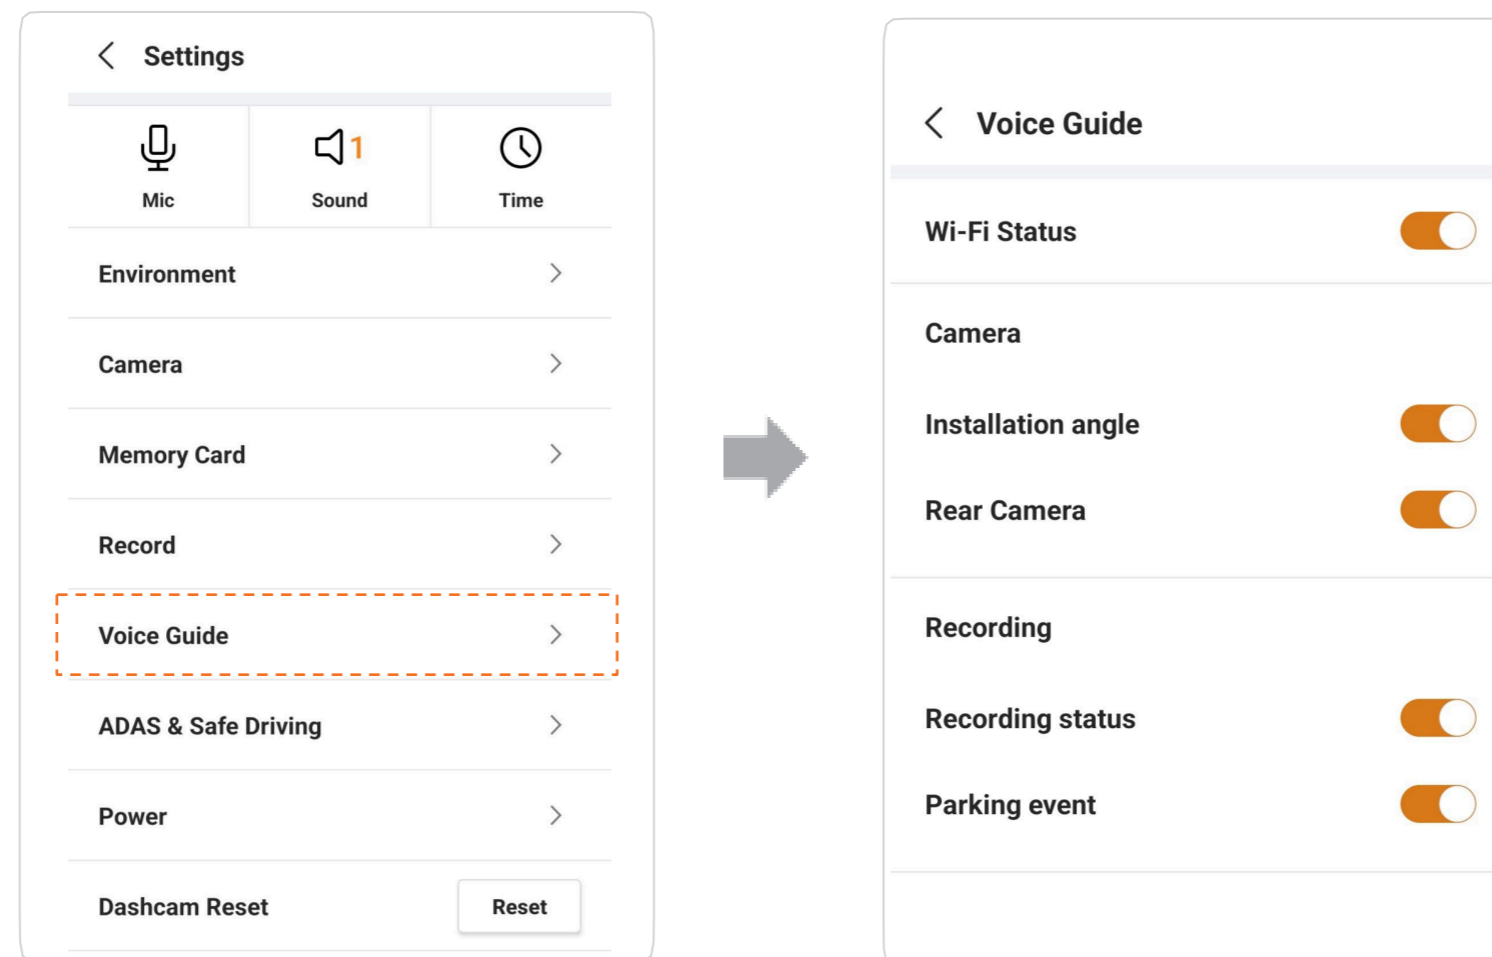


• ADAS & Safe Driving

Through the [Settings ▶ ADAS & Safe Driving], you can configure FVMA, LDWS, On-time Notification, Speed Camera Notification, Mobile Camera Alert, and Driving Rest Notification.

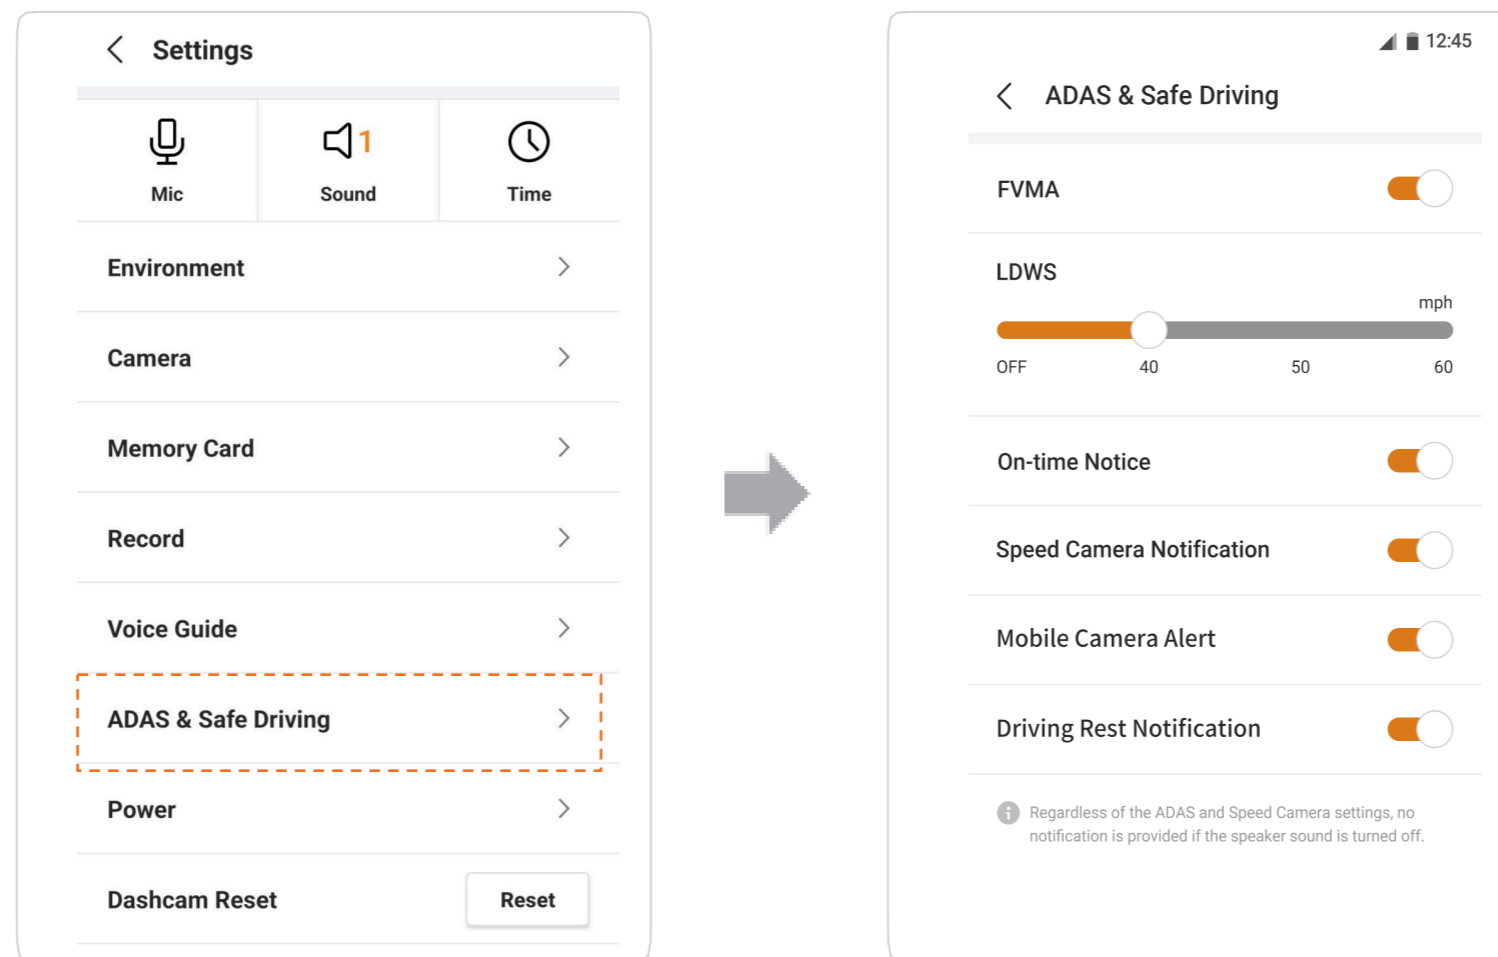


- Power

Through [Settings ▶ Power], you can set Low Voltage and Cut-off time.

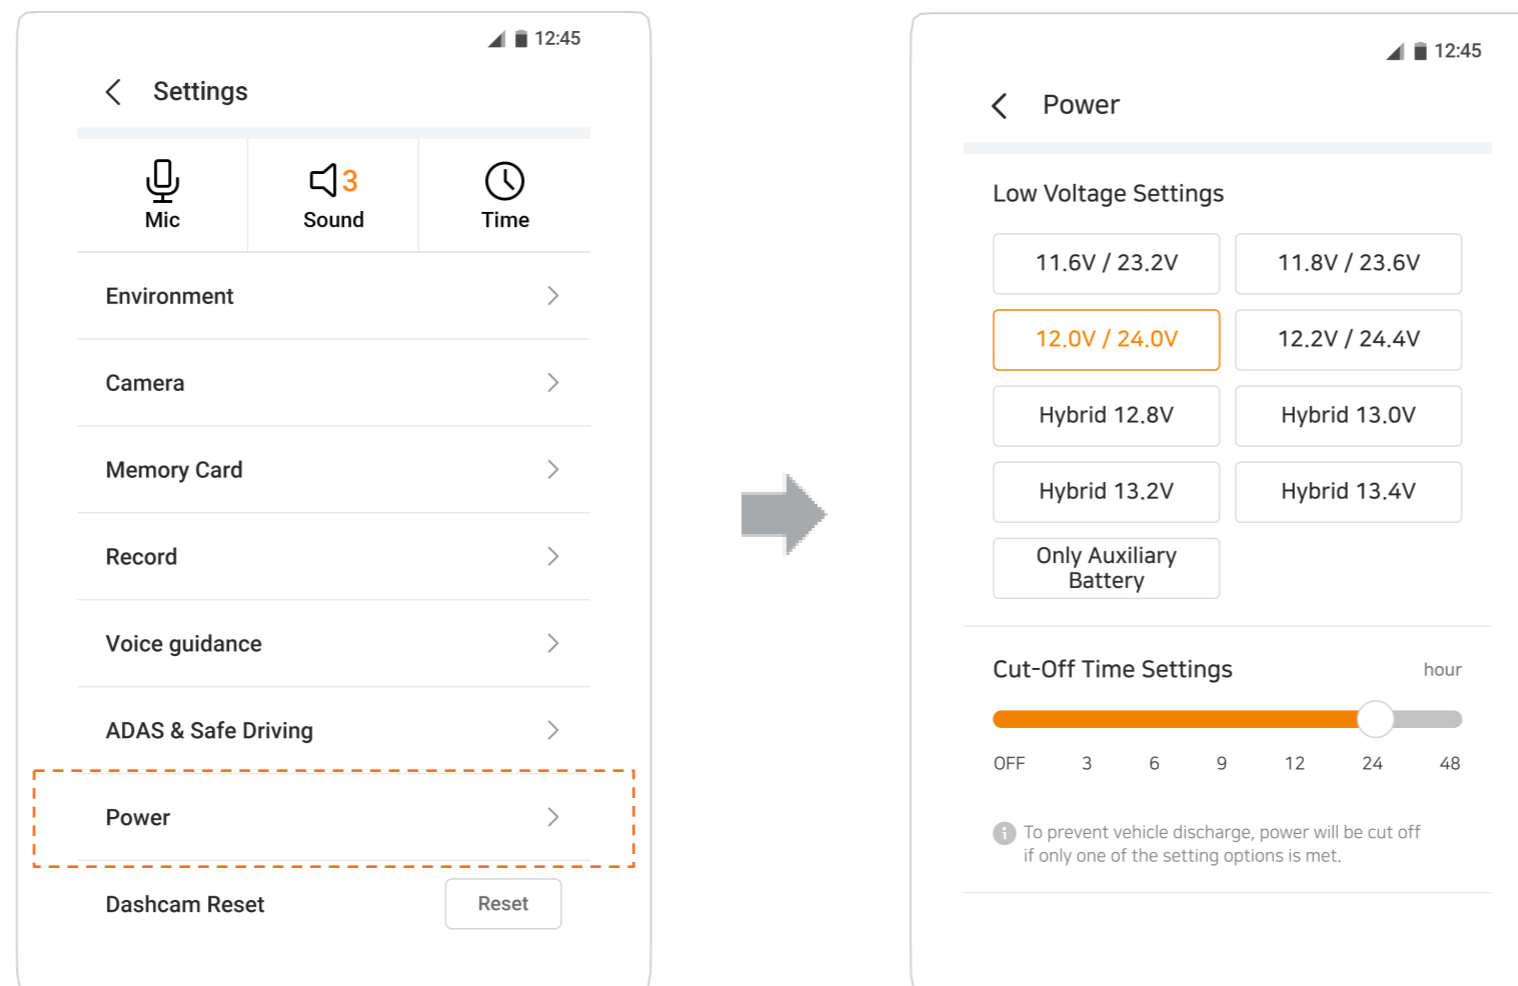

- **Dashcam Reset**


By tapping [Dashcam Reset], you can reset the dashcam setting and the memory card.

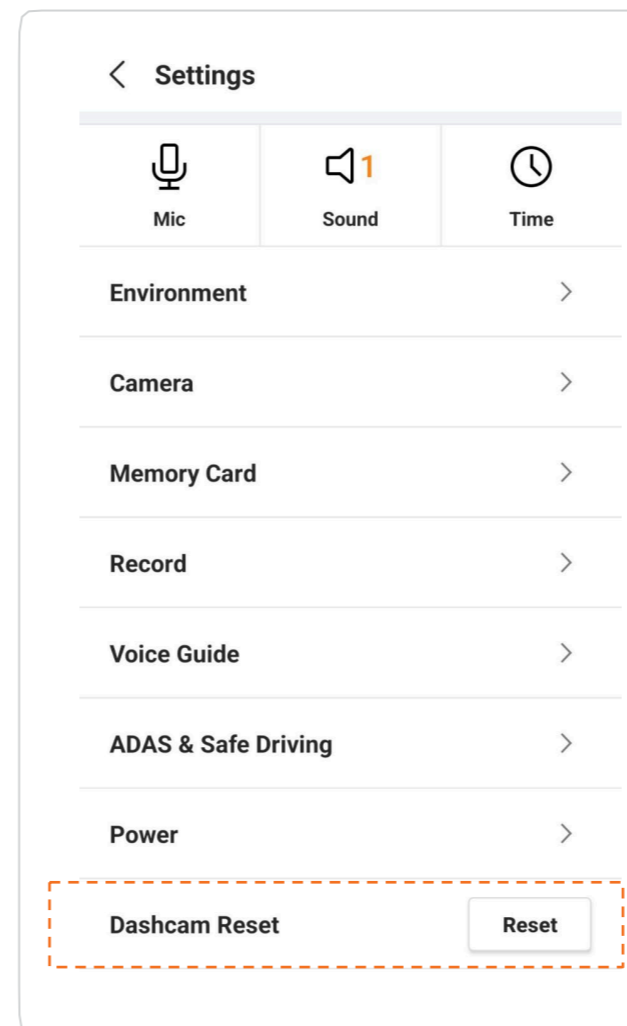

· If you change the memory allocation to a value other than the default value, the memory card will be formatted. Please ensure that you have saved any important videos to a separate device before proceeding.


Event summary (Connected)

You can check the event's details and video information about the events through the Event summary function. Tap the **Event Summary** button on the main screen. A playlist of relevant events (driving or parking) is provided.

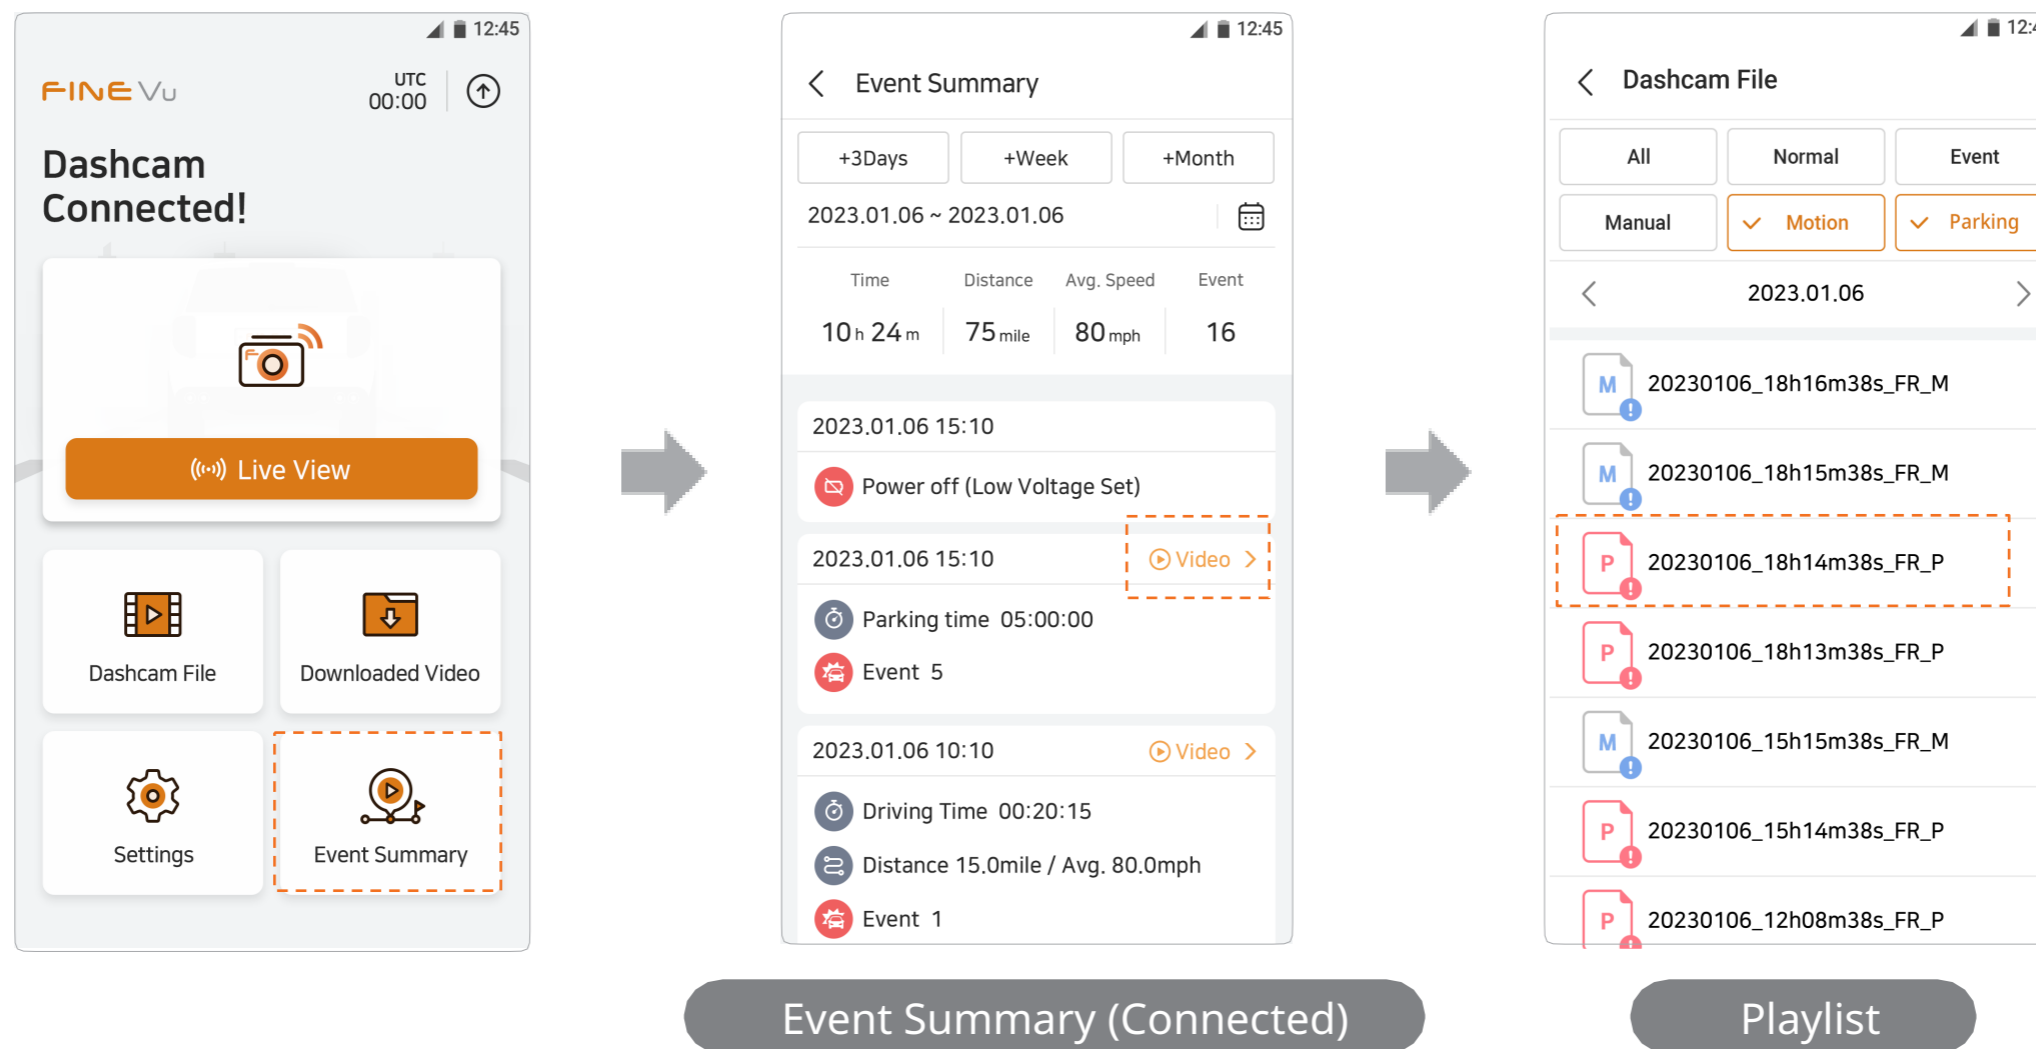

- No list will be shown if there is no data stored.
- When the dashcam is not connected, the map screen rather than the play screen will be provided.

• Event Summary Screen (Connected)

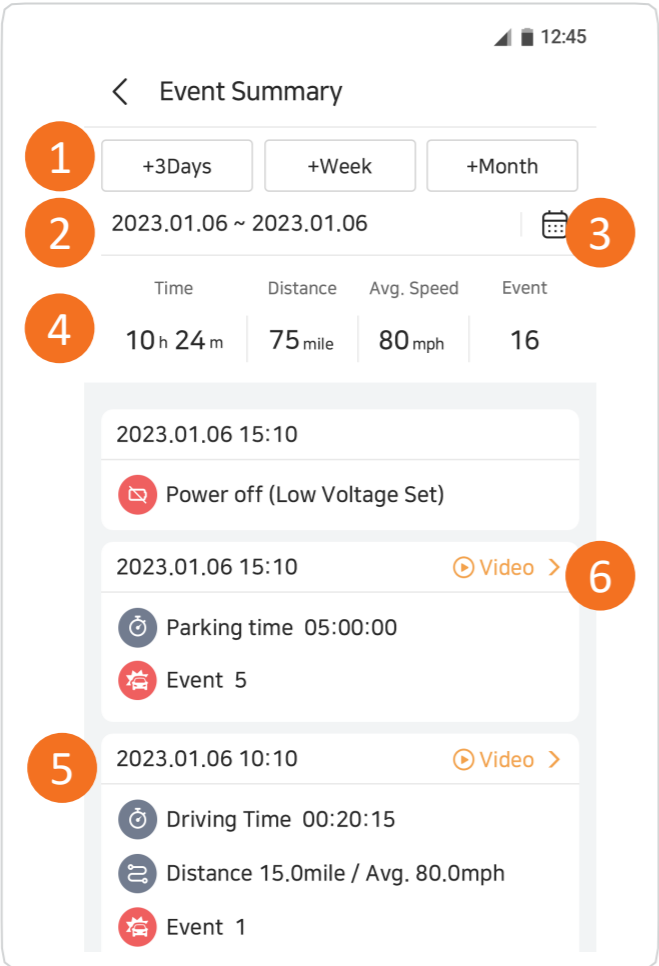


P q0	Hwpevkqpc rlf guetkr vkqp
①	Choose 3 days, a week or a month
②	Selected period
③	User-defined period selection
④	Driving time, driving distance, average driving speed, and number of events over the selected period
⑤	Summary of information including power ON/OFF and number of events over the selected period
⑥	Provides a list of videos related to that event (driving or parking)

Event Summary (Disconnected)



You can check the event's details and map information through the Event summary function.

Tap the **Event Summary** button on the main screen. Information including a map screen and departure/arrival locations is provided for the relevant contents.

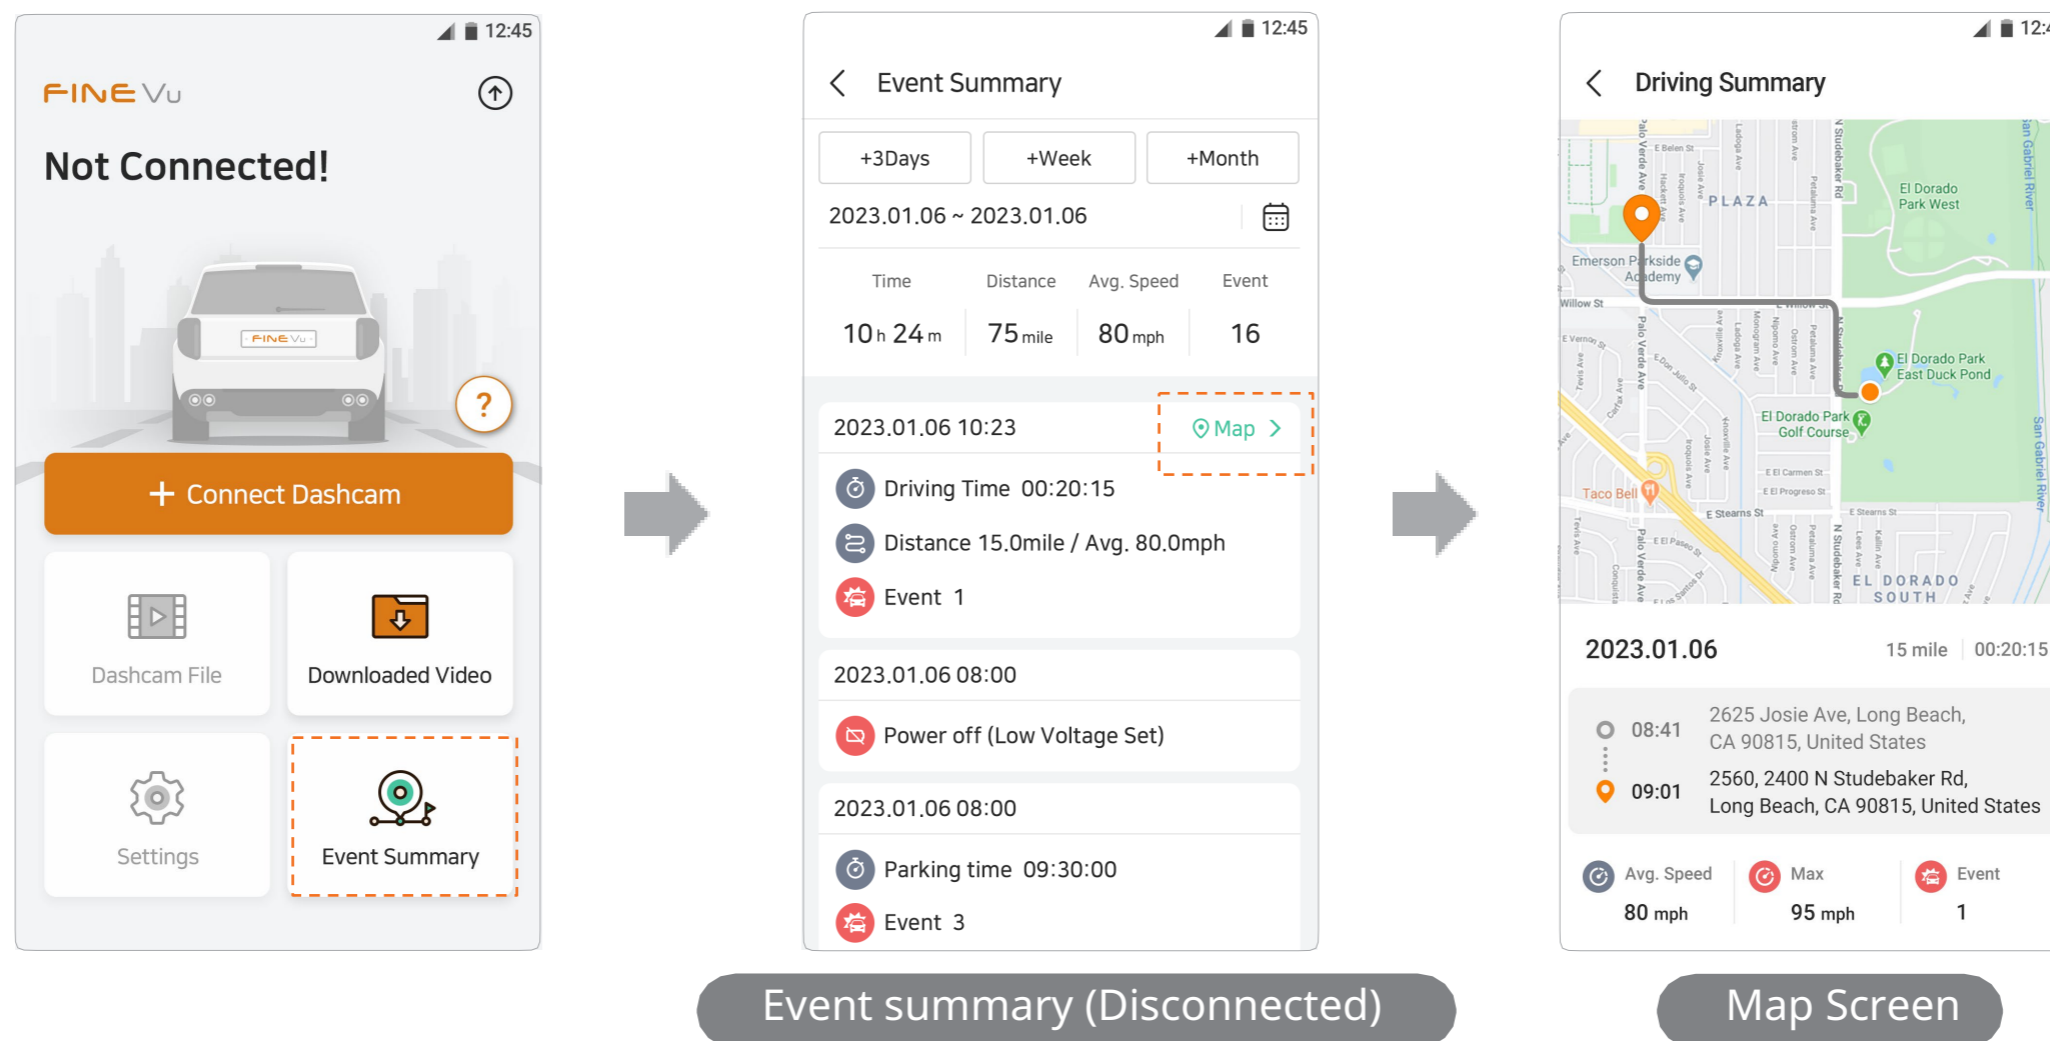


- No list is provided when there is no data.
- When the dashcam is connected, the video screen, rather than the map screen, is provided.


• Event Summary Screen (Disconnected)

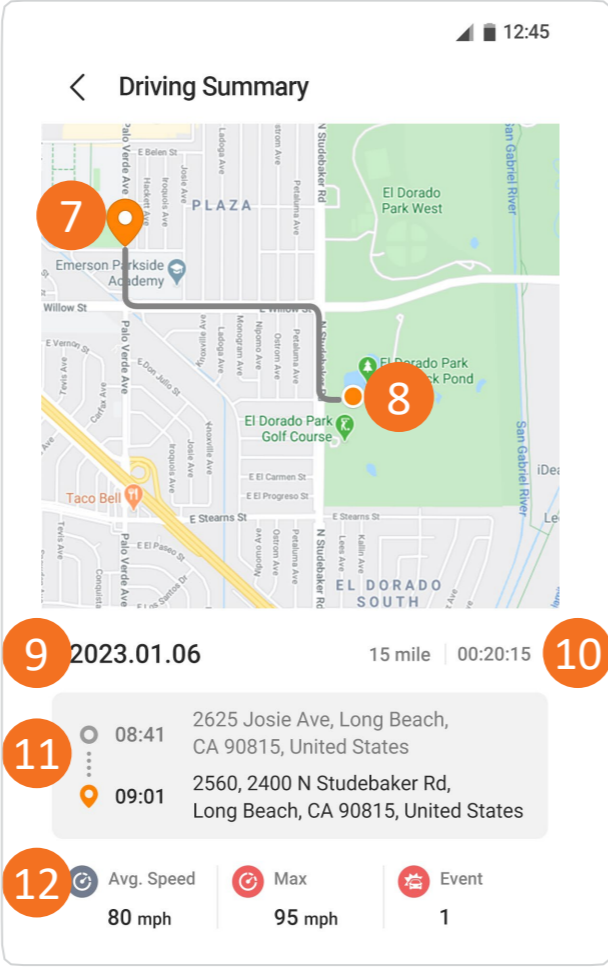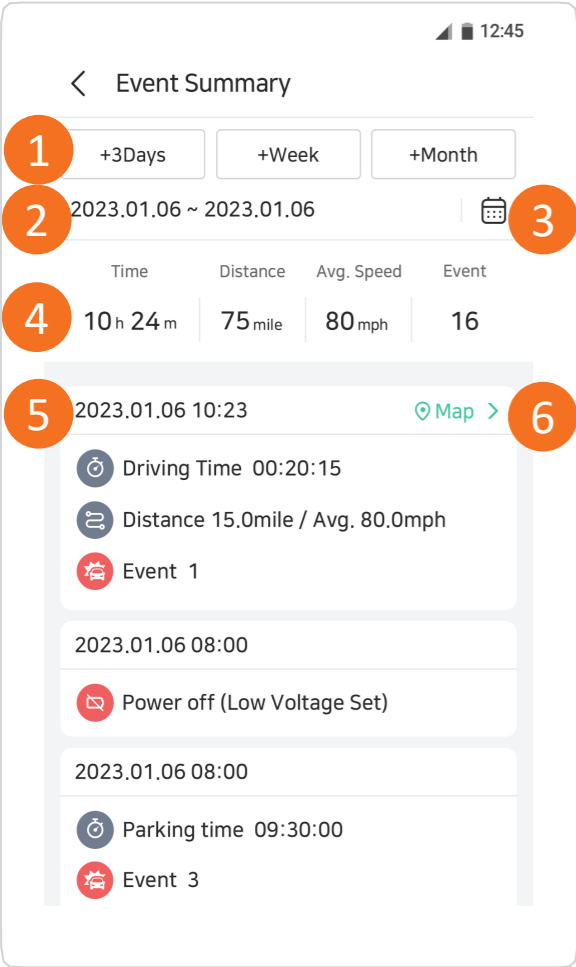

P q0	Hwpevkqpc nF guetkr vkqp
①	Choose 3 days, a week or a month
②	Selected period
③	User-defined period selection
④	Driving time, driving distance, average driving speed, and number of events over the selected period
⑤	Summary of information including power ON/OFF and number of events over the selected period
⑥	Provide maps and details for the relevant contents
⑦	Departure
⑧	Arrival
⑨	Date
⑩	Driving distance, driving time
⑪	Departure, arrival time and address
⑫	Average driving speed, maximum driving speed, number of events


Change the Dashcam Language

After connecting the dashcam, tap the  icon at the top right on the main screen. You can change the guidance language of the dashcam through the update screen.

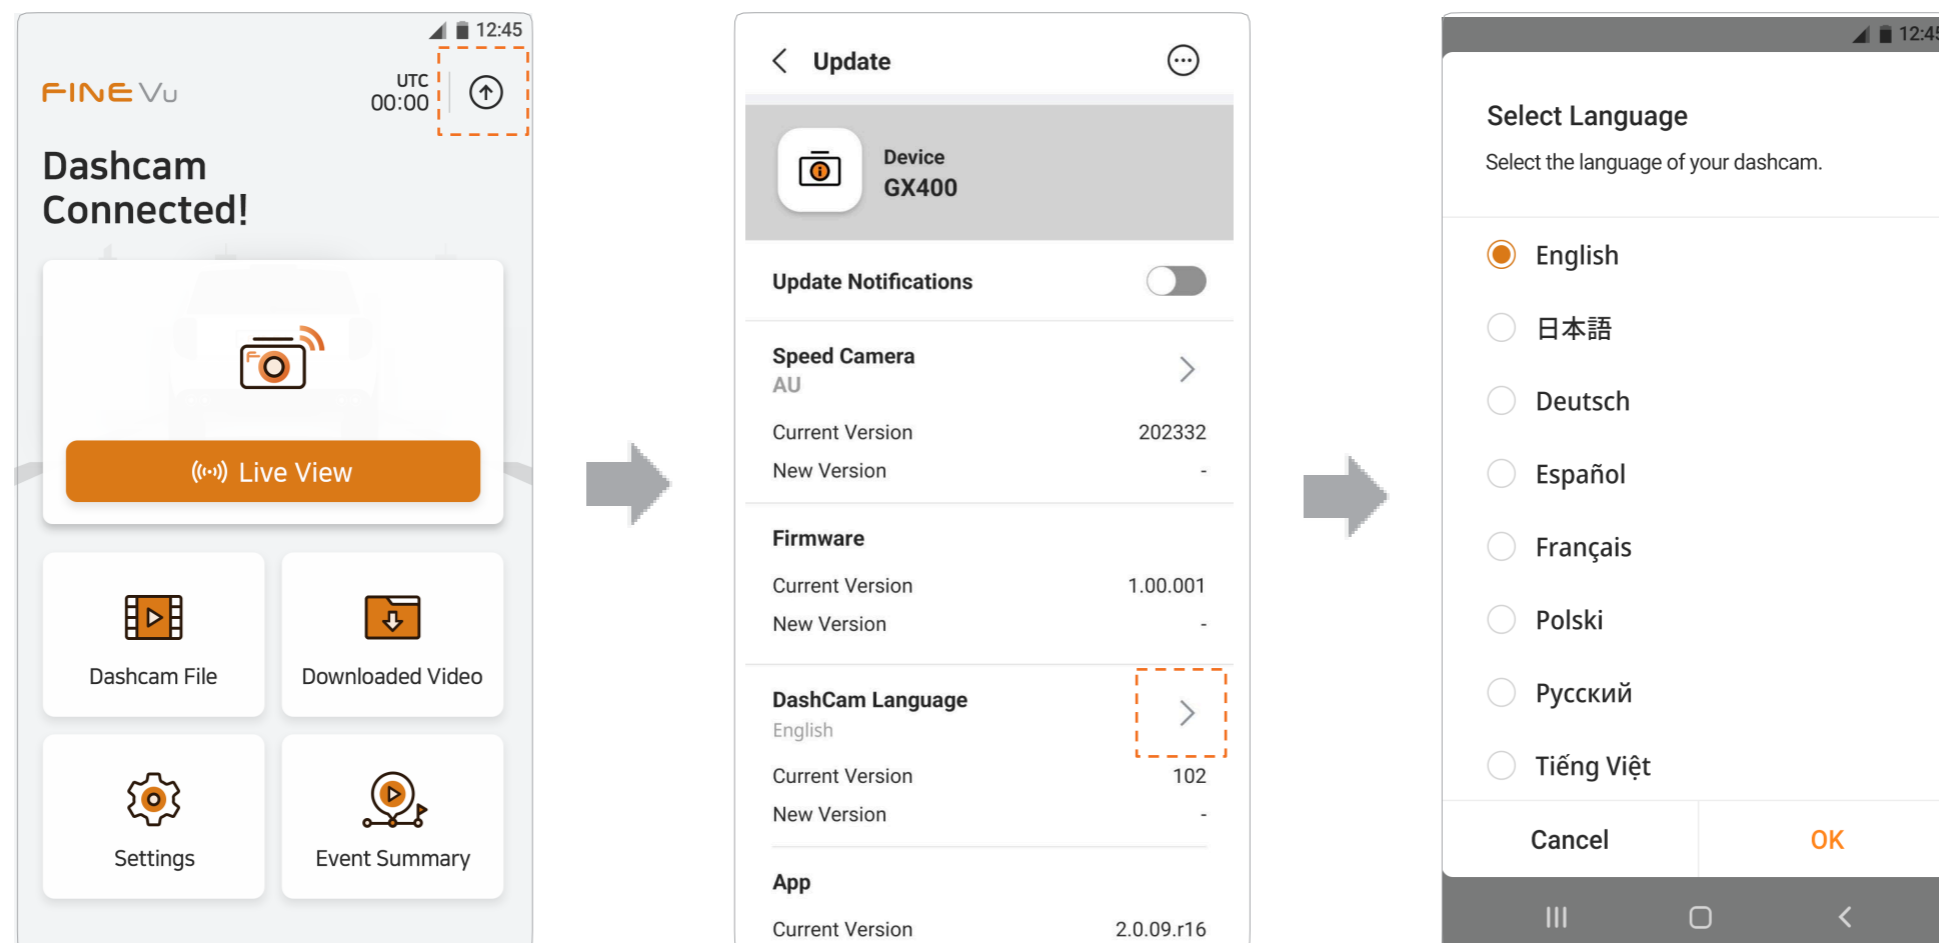


- When the dashcam language is changed, the dashcam reboots.
- In addition to the dashcam language, the app language may be changed depending on your smartphone settings.

Firmware Update from App

After connecting the dashcam, tap the  icon at the top right on the main screen. You can check the name of the connected dash cam and relevant dashcam app, and version & open license information of speed camera, firmware, and dashcam language.

After checking the version of the app, speed camera, firmware, and dashcam language, if it does not match the latest version, tap the **Update** button to proceed with the update.

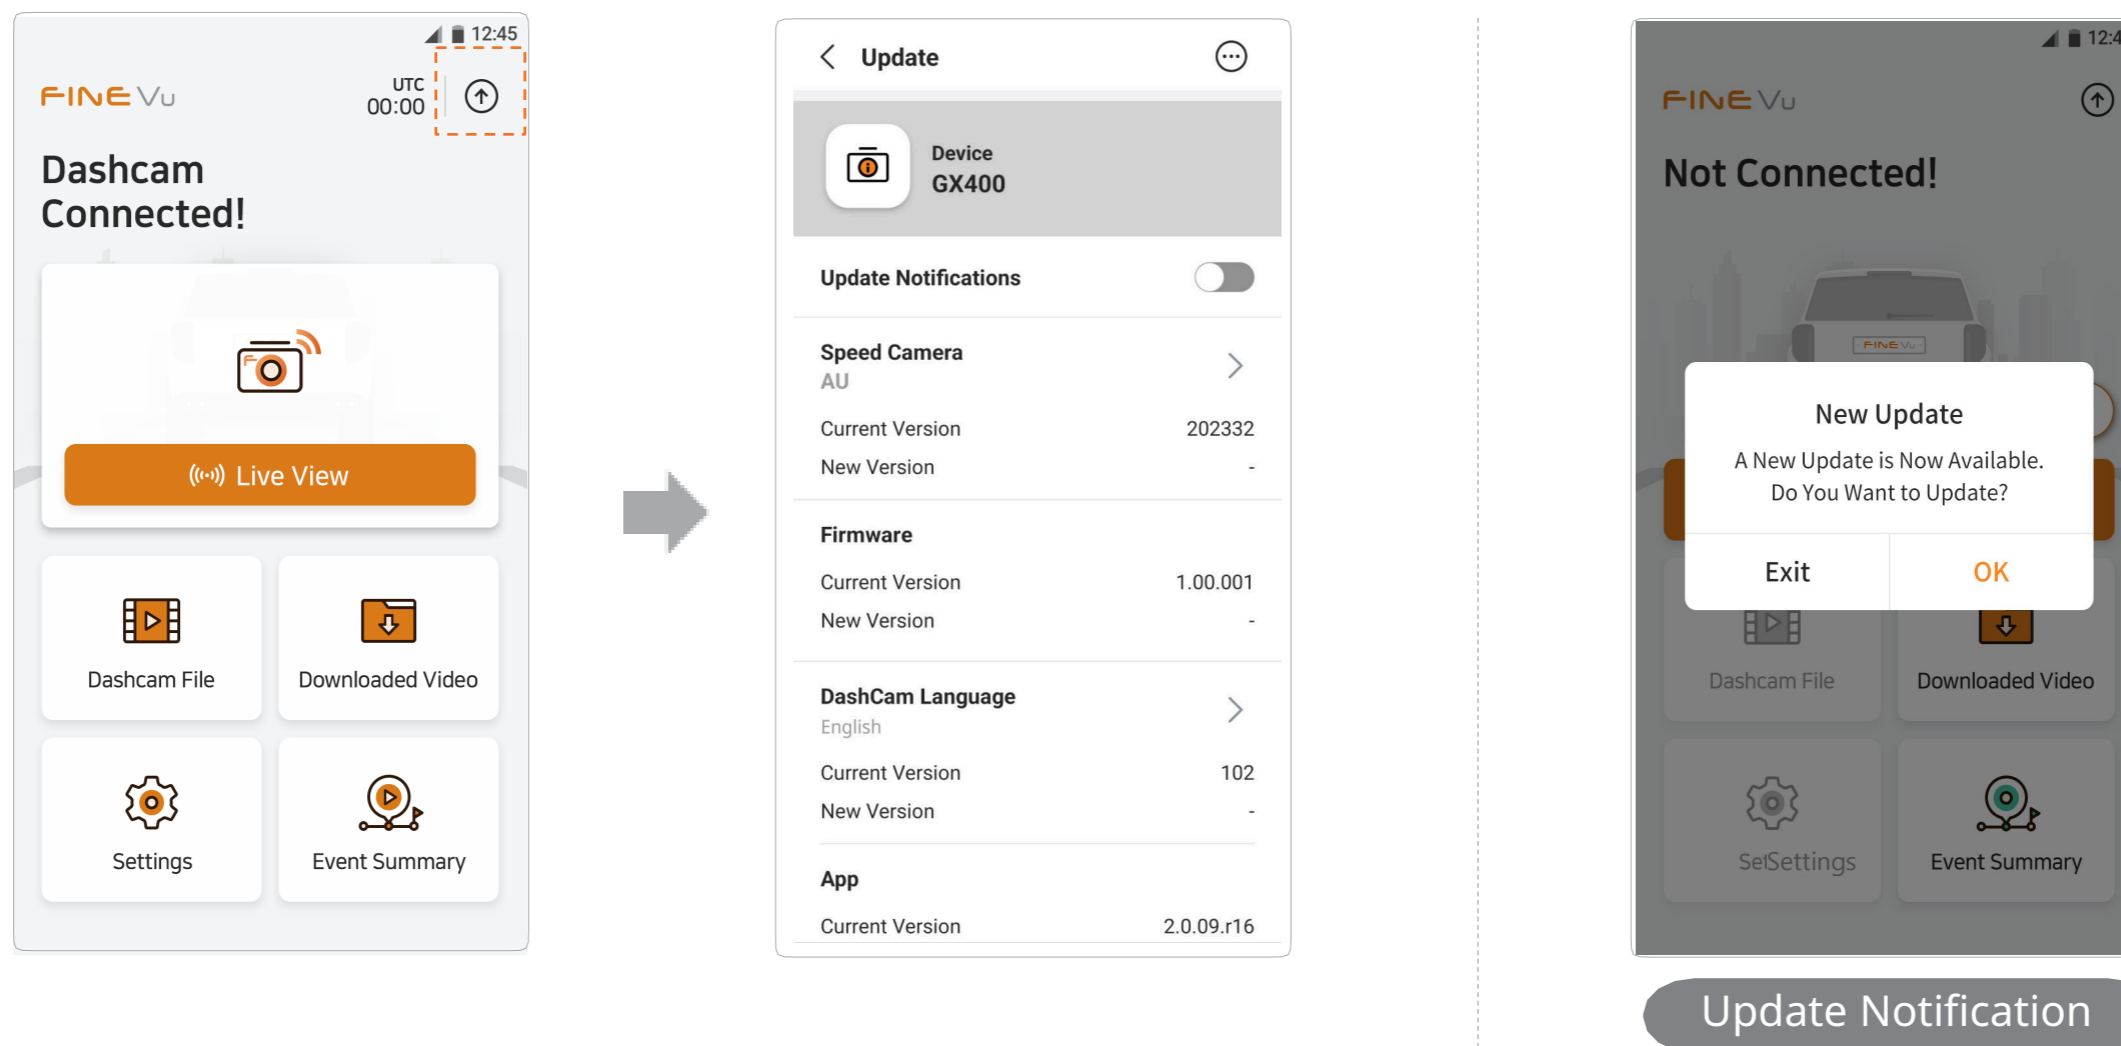


- When there are new updates, you will be notified through a pop-up when connected to the dashcam, and you can proceed with the update by tapping the QM
- The update notification pop-up may not appear depending on factors in the environment, such as the connection status.

How to use FineVu Player

Installing & Using the FineVu Player


FineVu Player is an app that can play the video files recorded by the FineVu dashcam. Please download it via the website and install it.

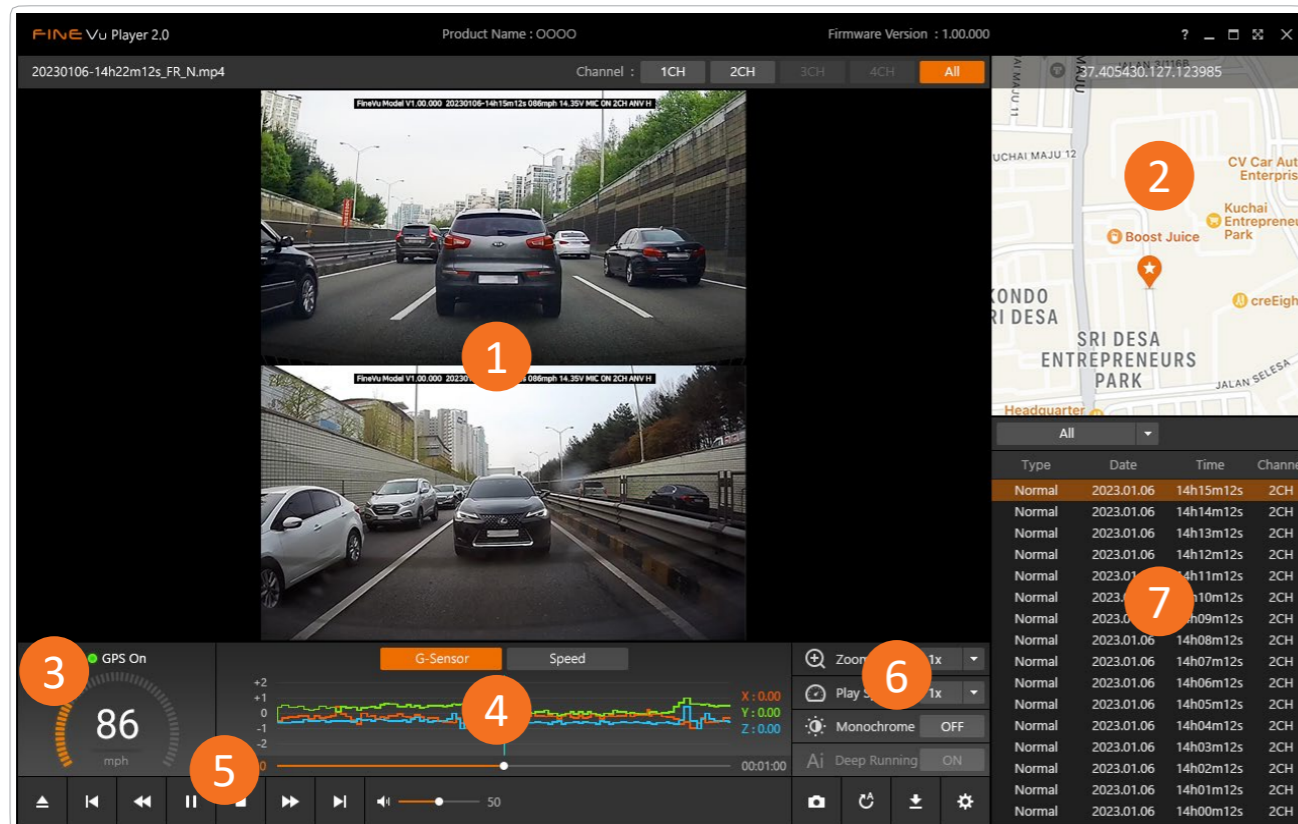

P q0	Hwpevkqpc rlf guetkr vlqp
①	The main window in which the recorded video is played.
②	If the recorded video contains GPS information, the location is displayed on the map.
③	If the recorded video contains GPS information, the driving speed is displayed.
④	The G-Sensor value or driving speed is graphed.
⑤	It allows you to load, play, or stop recorded video.
⑥	It allows you to repeat, capture, back up recorded video, and set and update the player.
⑦	It displays a list of recorded videos, administrative districts, etc.

Tgeqo o gpf gf "ur gek ec vlqpu" hqt "RE

	Recommended Specifications
OS	Windows 11
HDD	300MB
CPU	Intel Dual Core 3.4GHz
VGA	2GB
RAM	8GB
DirectX	DirectX 12
Monitor	1920 x 1080



- FineVu Player is available for both Mac and Windows computers.
- It is not recommended to use a player other than FineVu Player.

Checking recorded video on PC

1. Remove the Micro SD card from the product, insert it into the adapter, and connect it to the PC using the reader.
When connected to a PC, a USB drive or a new disk drive with the product model name is created.
2. Click the folder in the created drive. You can check the list of saved recorded video files.
When the card connects to the PC, a new volume will appear on the PC desktop.
 - The file name is created based on the date, time, and recording mode that recording started.
3. Click the video file you want to watch. You can play it with FineVu Player which is a dedicated PC viewer, or other media players.
The recorded video can be played with a commercial player or FineVu Player, a dedicated PC viewer.
 - To see the GPS information and G-Sensor information of the recorded video, play it using the FINEVu Player, a dedicated player.

Updating firmware from PC

1. Remove the Micro SD card from the product, insert it into the adapter, and connect it to the PC using the reader.
When connected to a PC, a USB drive or a new disk drive with the product model name is created.
 - It is recommended that Micro SD cards used in other devices be formatted before updating.
2. Download the latest firmware for the product you purchased from the official website (www.FineVu.com/en).
3. Unzip the downloaded firmware and copy it to the root of the Micro SD card.
4. Remove the copied Micro SD card from the adapter and reinsert it into the product.
5. Turn on the vehicle (ACC On) or start the engine to turn on the product. The firmware update will run automatically.
 - When the firmware update is successfully completed, the product automatically reboots.



· When inserting or removing a Micro SD card, please refer to [‘How to Install’](#) on the previous page.

Product Specifications And Size

Item	Specifications	Remarks
Model name	FineVu GX400	
Size / Weight	Front: 96.5 x 70.0 x 26.5mm / 114g (3.8 x 2.8 x 1.0" / 4.0 oz) Rear: 46.8 x 36.5 x 29.2mm / 23g (1.8 x 1.4 x 1.1" / 0.8 oz)	Weight includes the cradle (Without cable)
Supportive capacity	Micro SD card 32GB / 64GB / 128GB / 256GB	Class 10 or above, SDXC support
Recording mode	Driving Recording	Recording every minute
	Impact Detection Recording	For 20 seconds (Previous 10 seconds / Next 10 seconds)
	Manual Recording	For 20 seconds (Previous 10 seconds / Next 10 seconds)
	Parking Motion Recording	For 20 seconds (Previous 10 seconds / Next 10 seconds)
	Parking Event Recording	For 20 seconds (Previous 10 seconds / Next 10 seconds)
	Driving Smart Time Lapse Recording	Standard 30fps recording in the event of impact
	Parking Smart Time Lapse Recording	Standard 30fps recording in the event of impact
Lens	Front: Quad HD wide-angle lens Rear: Full HD wide-angle lens	
Image sensor	Front: 5.14M pixels CMOS Image Sensor (1/2.8") Rear: 2M pixels CMOS Image Sensor (1/2.9")	
Angle of view	Front: 122 degrees diagonal, 104 degrees vertical, 56 degrees horizontal Rear: 124 degrees diagonal, 102 degrees vertical, 53.4 degrees horizontal	The angle of view measurement standards and notation methods may differ depending on the manufacturer.
Video	Front: 2560x1440@30fps Rear: 1920x1080@30fps	
Voice	Built-in microphone	
Speaker	Built-in speaker	

Kvgo	Ur gek ecvklqpu	Tgo ctmu
Ceegrntcvklqpu"ugpuqt	3-axis acceleration sensor	+2g / -2g
Kpr w'r qy gt	DC 12V – 24V	
Dc wgt{	Super capacitor	When external power is turned off, power supply for safe video storage
Rqy gt" Eqpuwo r vklqpu	Approx. 5.0W (In Parking Mode) Approx. 0.06W (In Power Saving Mode)	2CH default, GPS OFF, Wi-Fi OFF
Vgo r gtcwtg	Operation temperature: -20°C ~ 70°C (-4 ~ 158 °F) Storage temperature: -30°C ~ 80°C (-22 ~ 176 °F)	
Kpvgt hreg	Power port (3.5Φ)_3 lines, Rear camera port (2.5Φ), Wi-Fi port (USB A Type), Micro SD card slot, Power switch (Slide)	
Uwr r qtvklqg" hwpevklqpu	FineVu Wi-Fi app, ADAS PLUS (FVMA / LDWS), Smart Time Lapse, Auto Night Vision, Speed Camera Alert, Mounting Angle Guide, Battery Discharge Prevention, Power Saving Mode, High Temperature Blocking, On-time Guide, Driver Attention Alert, 2 channel recording support	Vehicle speed, ADAS PLUS, and speed camera functions are work only when the GPS is receiving.
Egtvk ecvklqpu" pwo dgt	R-R-FDK-FineR052 Model name: FineVu GX400 Manufacturer: FINEDIGITAL Inc. Year of manufacture: Marked separately Certified trade name: FINEDIGITAL Inc. Name: Drive recorder Country of manufacture: South Korea	Passed the KS C 9990 (Test for Electromagnetic Compatibility of Automobiles and Internal combustion Engines)

A good way to
manage your
Micro SD card!

1 Latest firmware update

If you make sure to keep the firmware version up-to-date, you can minimize errors in the dashcam by ensuring the system is stable.

2 Regular recording check

Recorded videos may be deleted over time, so check the recorded videos regularly and make sure to back up important files.

3 Memory card warranty

Memory cards are consumables with limited usage due to continuous video recording, so regular inspection or replacement is required.

- The free warranty period for a memory card is 6 months, and if there is a defect in the memory card after that, you will need to purchase another card.
- You are recommended to format your memory card once every two weeks.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Wi-Fi dongle FCC ID: OYR-WU810N

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.



FINE Vu

<http://www.finevu.com/en>

**FineVu Customer Satisfaction Center :
support@finedigital.com**

This manual describes the functions of the product.